




2009-2011 Limo Illustrated Parts List

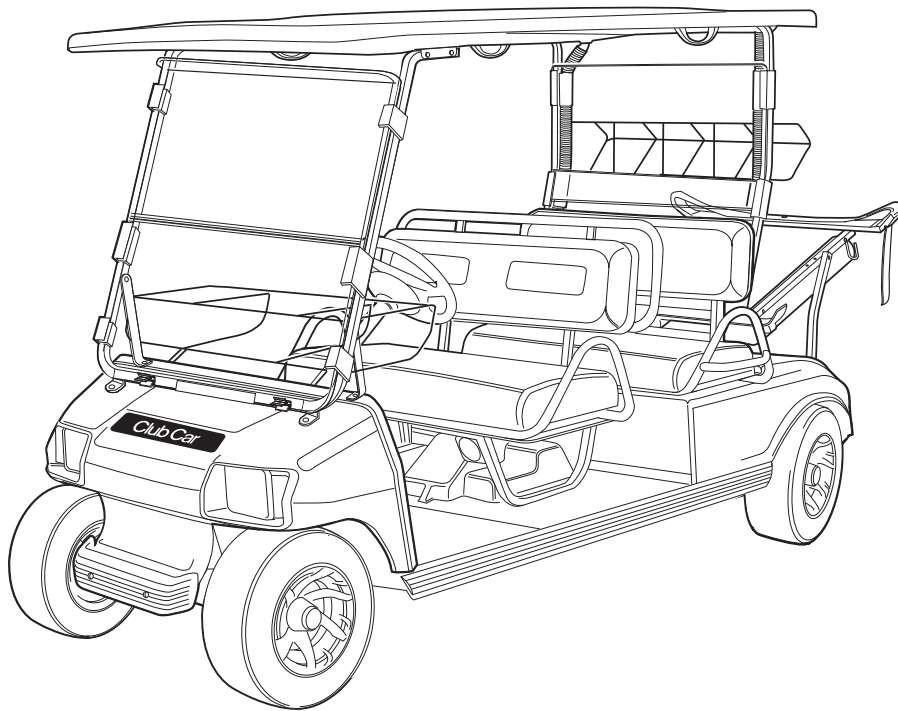

**Gasoline and Electric Vehicles
Equipped with Auto Brake**

Manual Number 103472607
Edition Code 0508J0112H

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers 2009-2011 Limo golf cars equipped with auto brakes.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is the quantity used per next higher level assembly of which it is a component. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, LLC. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, LLC. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2010 Club Car, LLC.
Club Car and ArmorFlex
are registered trademarks of Club Car, LLC.
This manual effective October 1, 2010.

2009-2011 Limo Gasoline and Electric Vehicles Illustrated Parts List

CONTENTS

SECTION 1 – BODY AND TRIM

Rear Access Door	1-3
Windshield	1-5
Rear Windshield	1-7
Baskets	1-9
Canopy	1-11
Canopy Drain Kit	1-13
Cargo Nets	1-15
Front Bumper	1-17
Heavy-Duty Front Bumper Kit	1-19
Inner Fender	1-21
Front Body	1-23
Rear Body Without Lights	1-25
Rear Body With Lights	1-27
Dash – Electric Vehicles	1-29
Dash – Gasoline Vehicles	1-31
Cup Holder and Ashtrays	1-33
Stainless Steel Hardware Kit	1-35
Seat Support	1-37
Seats, Buff	1-39
Seats, White	1-41
Closeout, Under Seat	1-43
Floormats – Gasoline Vehicles	1-45
Floormats – Electric Vehicles	1-47
Bag Rest Mats	1-49
Bagrack	1-51
Rear Bumper	1-53

SECTION 2 – WHEELS AND TIRES

Wheel Covers	2-3
Wheels and Tires	2-5

SECTION 3 – DECALS

Safety Decals – Electric Vehicles	3-3
Safety Decals – Electric Vehicles, Continued	3-5
Safety Decals – Gasoline Vehicles	3-7
Safety Decals – Gasoline Vehicles, Continued	3-9
Fleet Numbering Decals	3-11

CONTENTS

SECTION 4 – BRAKE, PEDAL, AND CABLE ASSEMBLIES

Accelerator Pedal Assembly – Electric Vehicles with MCOR	4-3
Auto Brake Motor, Master Cylinder, and Bell Crank	4-5
Brake Pedal Assembly	4-7
Brake Cables	4-9
Park Brake	4-11
Rear Brakes	4-13

SECTION 5 – STEERING AND FRONT AND REAR SUSPENSION

Steering Column	5-3
Steering Wheel	5-5
Front Suspension Components	5-7
Front Suspension Components, Continued	5-9
Rear Suspension – Leaf Springs and Shocks	5-11
Spindle and Hub – Driver Side	5-13
Spindle and Hub – Passenger Side	5-15

SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLE

Headlights	6-3
Starter/Generator Assembly Model G425419 – Gasoline Vehicles	6-5
FE350 Starter/Generator Mounting – Gasoline Vehicles	6-7
Reverse Buzzer Kit	6-9
Brake Controller	6-11
Brake Pedal Switch	6-13
Headlight Switch	6-15
Tail Lights	6-17
Operation and Maintenance Switch	6-19
Wiring – Gasoline Vehicle	6-23
Speed Sensor – Gasoline Vehicles	6-25
Electrical Component Box – Gasoline Vehicles	6-27
Electrical System Miscellaneous Hardware – Gasoline Vehicles	6-31
Controls and Cables	6-33

SECTION 7 – FE350 ENGINE – S27

FE350 Engine – Oil Circulation	7-3
FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	7-5
AS26 FE350 Engine – Ignition Components and Flywheel	7-7
AS26 FE350 Engine – Cylinder Head	7-9

CONTENTS

AS26 FE350 Engine – Crankcase and Crankshaft Oil Sensor	7-11
AS26 FE350 Engine – Crankcase and Crankshaft	7-13
FE350 Engine Mounting	7-15

SECTION 8 – FE350 ENGINE WITHOUT ACR

AS11 FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	8-3
AS11 FE350 Engine – Ignition Components and Flywheel	8-5
FE350 Engine – Oil Circulation	8-7
AS11 FE350 Engine – Cylinder Head	8-9
AS11 FE350 Engine without ACR – Crankcase, Camshaft, and Oil Sensor	8-11
AS11 FE350 Engine – Crankcase and Crankshaft	8-13
FE350 Engine Mounting	8-15

SECTION 9 – FUEL, INTAKE, AND GOVERNOR SYSTEM

Fuel System with Electric Fuel Pump	9-3
Fuel Tank with Fuel Level Sending Unit	9-5
Carburetor Assembly – FE350	9-7
Carburetor Installation – FE350	9-9
Intake Duct and Air Box Assembly	9-11
Carburetor Assembly – FE350 S26	9-13
Carburetor Installation – FE350 S27	9-15

SECTION 10 – EXHAUST SYSTEM

Exhaust System – FE350	10-3
Spark Arrestor Kit	10-5

SECTION 11 – TORQUE CONVERTER

Drive Clutch	11-3
Drive Belt – FE350	11-5
Driven Clutch	11-7

SECTION 12 – UNITIZED TRANSAXLE

Transaxle – Gasoline Vehicles, Gear Cases and Brackets	12-3
Transaxle – Gasoline Vehicles, Transmission and Gear Reduction	12-5
Transaxle – Gasoline Vehicles, Shafts and Tubes	12-7
Differential Guard	12-9

CONTENTS

SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLE

Headlights	13-3
Motor Controller Output Regulator (MCOR)	13-5
Reverse Buzzer Kit	13-7
Brake Controller	13-9
Brake Pedal Switch	13-11
Headlight Switch	13-13
Tail Lights	13-15
Charger Receptacle	13-17
Tow/Run Switch	13-19
Wiring – Electric Vehicle	13-23
Component Mounting Plate	13-25
Battery Gauge	13-27
Batteries – Electric Vehicle	13-29
Single Point Watering System	13-31

SECTION 14 – ELECTRIC MOTOR

Drive Unit Mounting	14-3
Electric Motor (Model DA5-4006)	14-5

SECTION 15 – TRANSAXLE – ELECTRIC VEHICLE

Transaxle – Electric Vehicle	15-3
------------------------------------	------

SECTION 16 – BATTERY CHARGER

PowerDrive Battery Charger (Model 18780), Export	16-3
--	------

SECTION 17 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7
Maintenance and Service Tools, Continued	17-9
Maintenance and Service Tools, Continued	17-11

SECTION i – INDEX

BODY AND TRIM

1


G

E

1

G


E

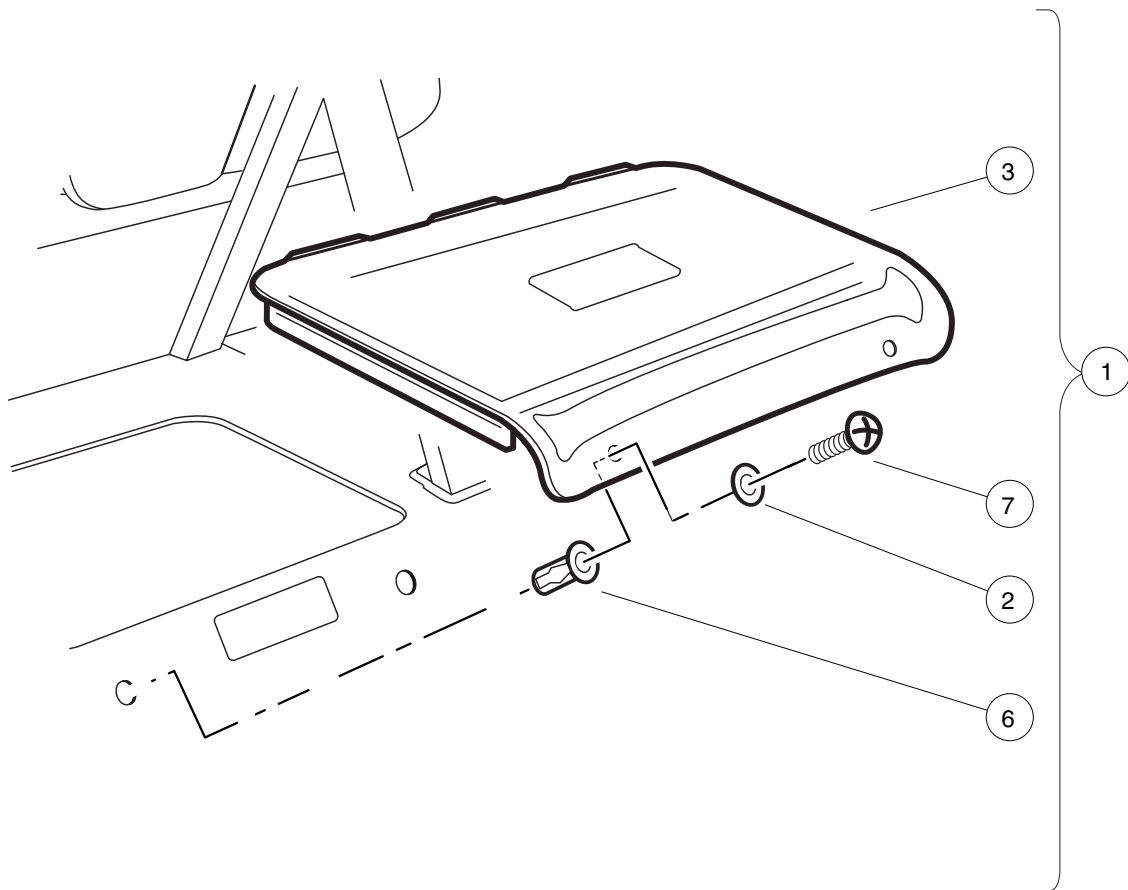

000783-001

REAR ACCESS DOOR

ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		G
1	1013218	Kit, Access Door Black (includes items 2 through 7)	1	E
2	1012581	Washer, 0.609-inch OD, Nylon Cup	2	
3	1013032	Molded Access Door Black	1	
4	1013216	Plug, Button	2	
5	N/A	Instruction Sheet Access Door	1	
6	1015525	Nut, 1/4-20 Blind	2	
7	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	2	

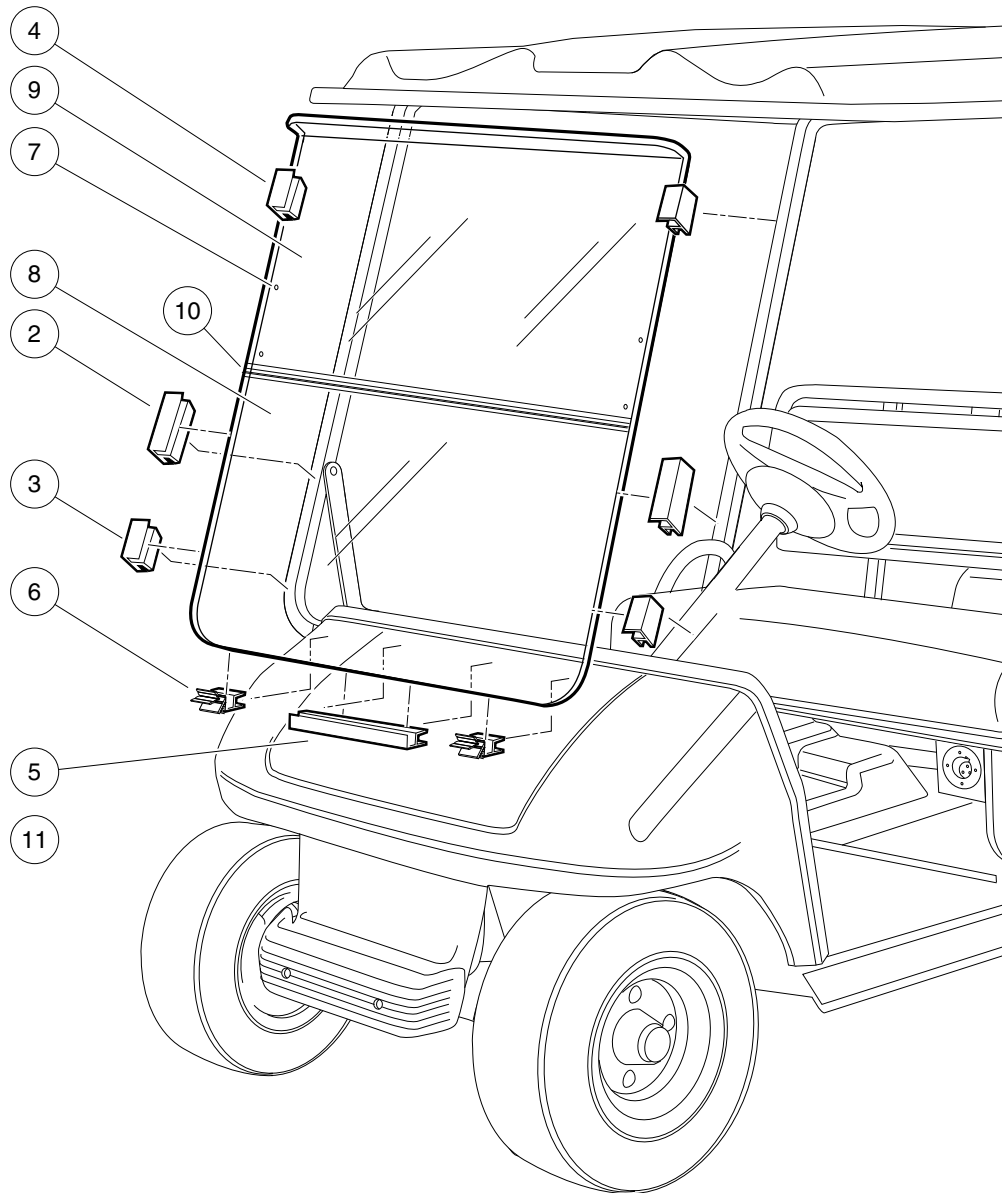

000773-001


WINDSHIELD

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	102962801	Kit, Windshield, Folding, Wide (includes items 2 through 11)	1	
2	102005701	5" Plastic Extrusion	2	
3	102005702	Clip, 2 " Long	2	
4	102005801	Rubber Clip W/glue	2	
5	102163001	Windshield Channel	1	
6	102163101	Channel with Receiver Clip	2	
7	N/A	Clear Bump On	4	
8	N/A	Windshield, Folding, Lower	1	
9	N/A	Windshield, Folding, Upper	1	
10	N/A	Hinge, Windshield	1	
11	N/A	Instr, Windshield, Limo Rstl	1	

1

G

E

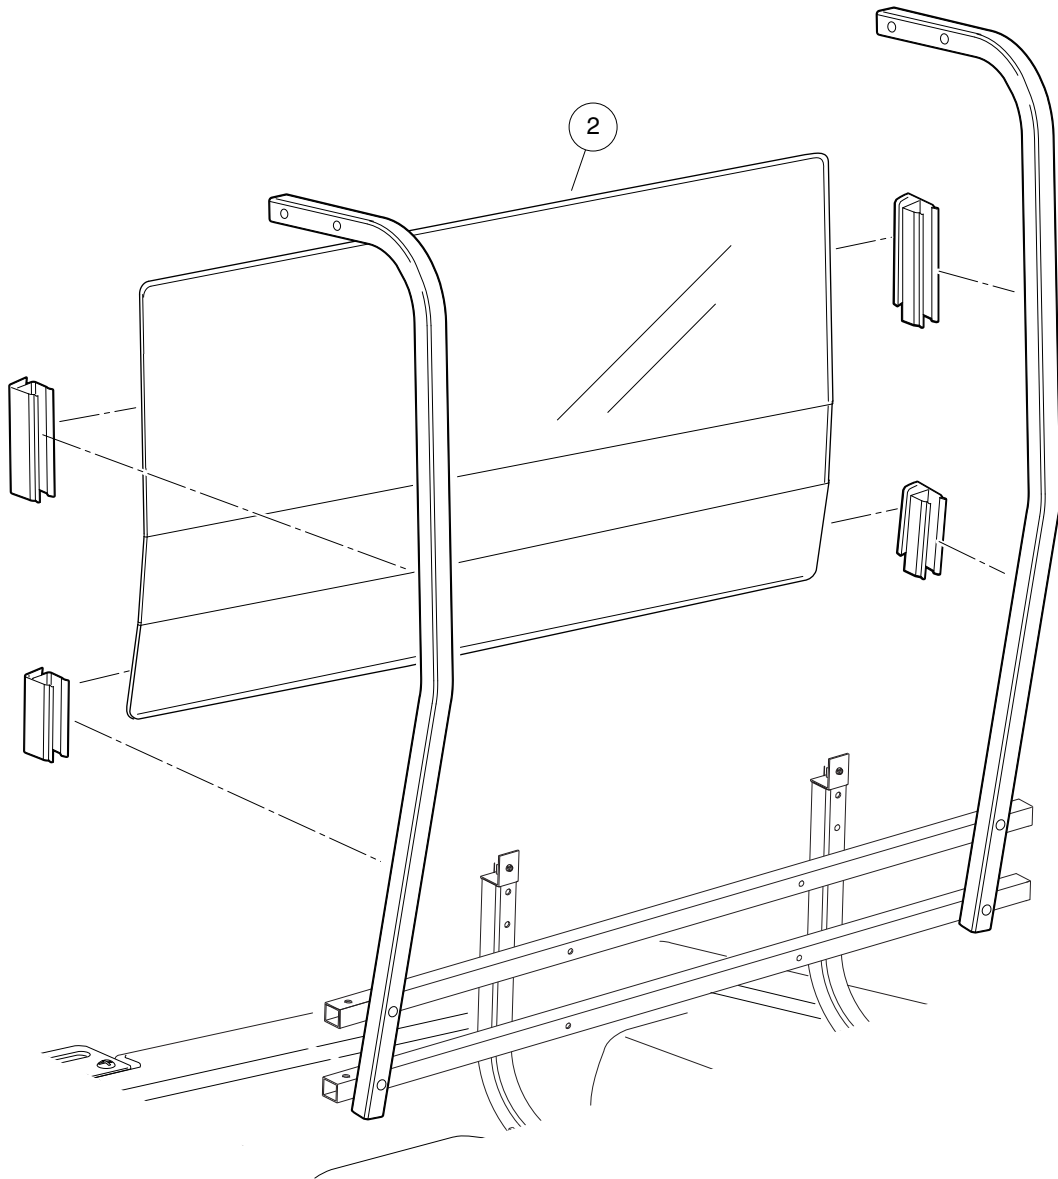

000781-001


REAR WINDSHIELD

ITEM	PART NO.	DESCRIPTION	QTY
1	103231601	1 2 3 4 Kit, Ws, Rear, Wide (includes items 2 and 3)	1
2	N/A	Windshield, Rear, Wide	1
3	N/A	Instruction, Kit, Rr Ws, Wide	1

1

G


E

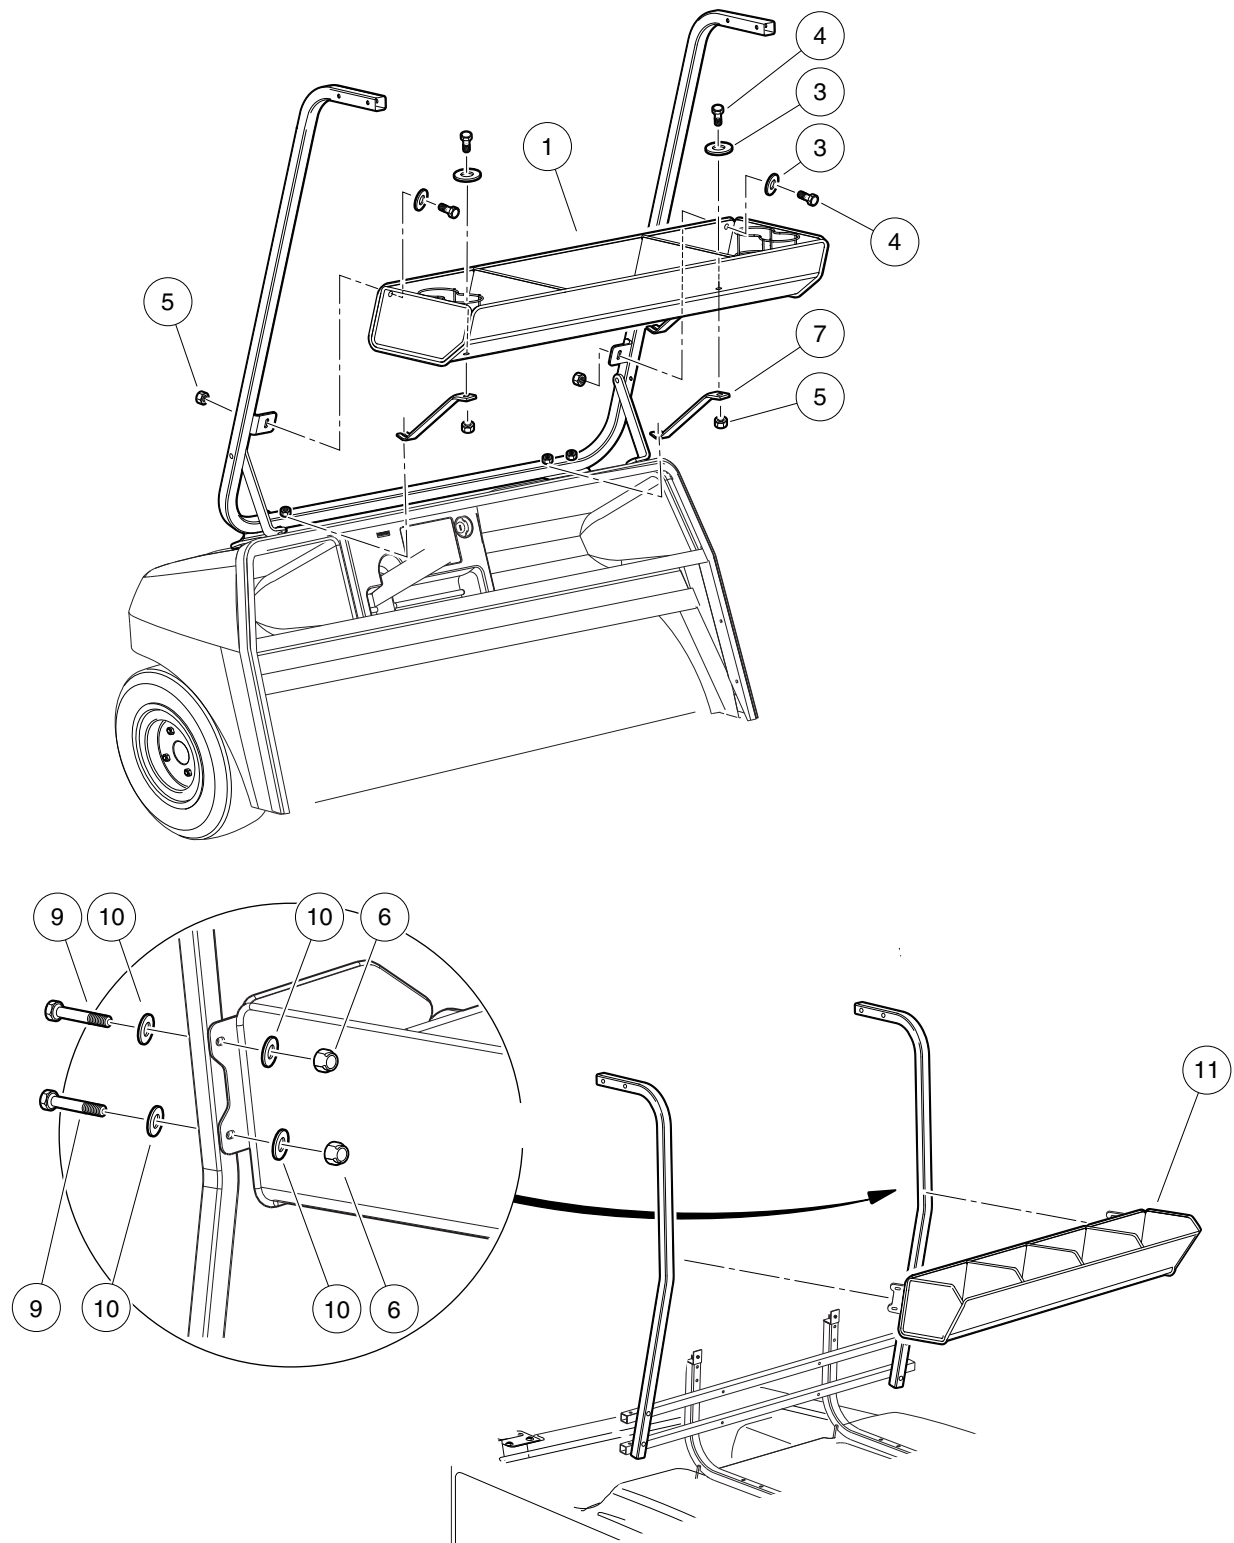1**G****E**

000774-001

BASKETS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	103194401	Basket, Storage, Front	1	
2	103357401	Kit, Hrdwr, Basket, Frnt & Rr (includes items 3 through 10)	1	
3	1014306	Washer, 1/4" Type B Flat	4	
4	1015521	Screw, 1/4-20 X .88 Hex Hd Cap	4	
5	1015661	Nut, Lock Hx Flanged 1/4-20	4	
6	102242401	Nut - Nylon Insert W/cap	4	
7	102967801	Bracket, Support, Basket, Frnt	2	
8	N/A	Instr, Kit, Basket Hardware	1	
9	1703	Screw, 1/4-20 X 1.50 Hx Hd Cap	4	
10	332	Washer, 1/4 Type A Narrow Flat	8	
11	103375201	Basket, Equipment, Rear	1	

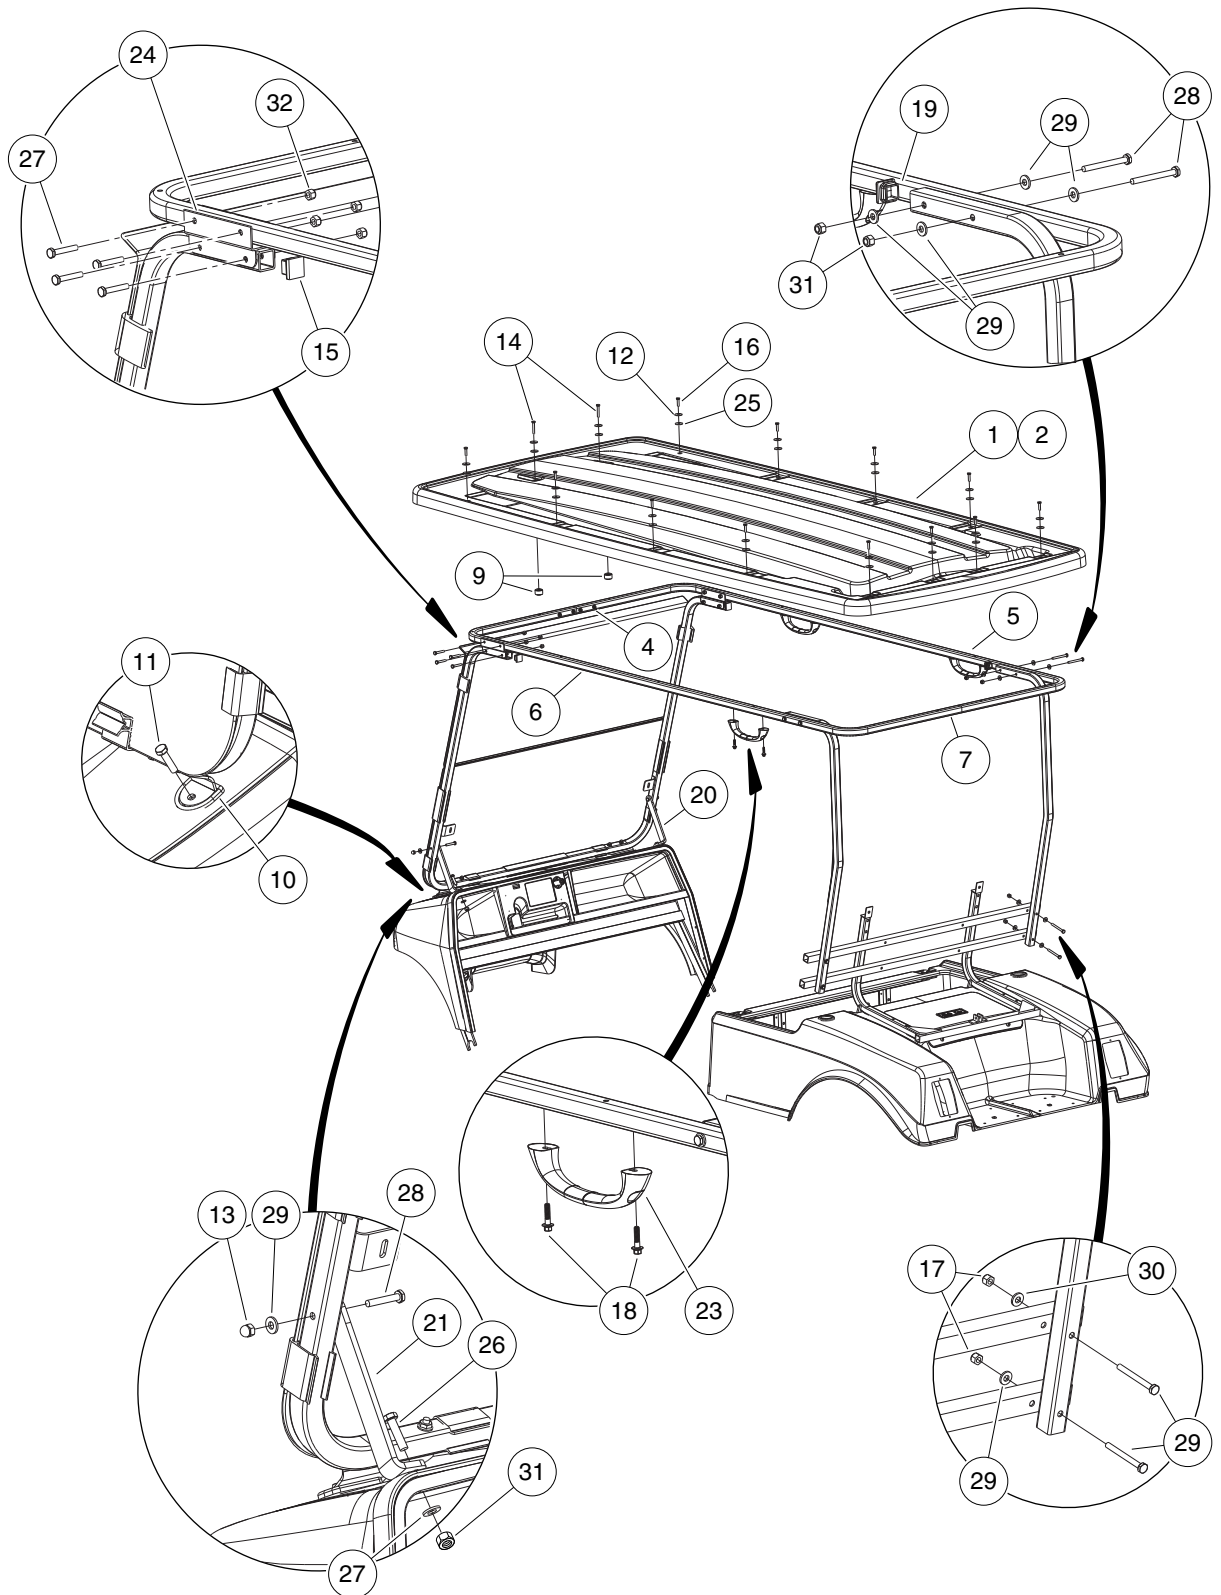
1**G****E**

000775-002

CANOPY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102955301	Canopy, Stretch, White	1
2	102955302	Canopy, Stretch, Beige	1
3	103367701	Assembly, Canopy Frame, Long (includes items 4 through 7)	1
4	1012285	Screw, 1/4 X 0.625 Hex-Head	8
5	N/A	Frame Half, Canopy, Long, Rh	1
6	N/A	Frame Half, Canopy, Long, Lh	1
7	N/A	Bar, Splice, Long	2
8	103367801	Kit, Hrdw, Canopy (includes items 9 through 32)	1
9	1010142	Cushion, Shock Absorber	2
10	1011883	Pad, Windshield Frame Mounting	2
11	1011937	Bolt, 5/16-18 X 1.25 Hex Head	2
12	1014306	Washer, 1/4" Type B Flat	14
13	1015091	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	2
14	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	2
15	1017271	Finishing Plug	2
16	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	12
17	102242401	Nut - Nylon Insert W/cap	4
18	102541425	Bolt-m6x1.0x25 Hex Flhd, Blk-I	6
19	102581201	Plug, Square - 25.4 mm	2
20	103224601	Brace, Windshield, Left	1
21	103224701	Brace, Windshield, Right	1
22	N/A	Instr, Canopy, Limo Rstl	1
23	103367101	Hand Hold, Canopy, Plastic	3
24	103367401	Bracket, Support, Canopy	2
25	103522401	Washer, Rubber, 7.1 Mm Id	14
26	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
27	1241	Washer, 5/16 Type A Flat	2
28	1703	Screw, 1/4-20 X 1.50 Hx Hd Cap	10
29	324	Screw, 1/4-20 X 2.50 Hx Hd Cap	8
30	332	Washer, 1/4 Type A Narrow Flat	12
31	7473	Locknut, 5/16-18 Nylon Insert	2
32	8233	Locknut, 1/4-20 Nylon Insert	12

1
G
E

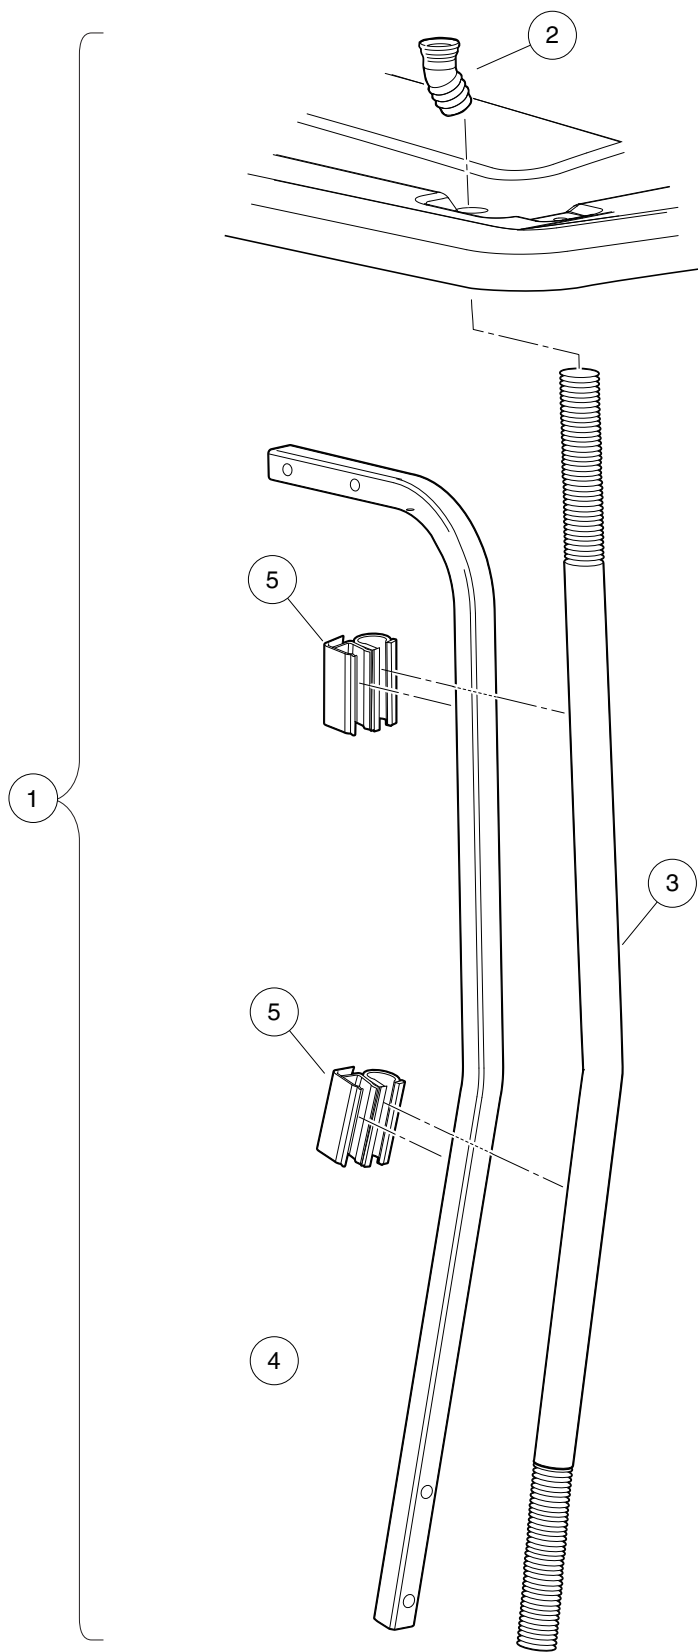

000776-001


CANOPY DRAIN KIT

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	103213101	Kit, Drain, Canopy (includes items 2 through 5)	1	
2	103203001	Grommet, Drain, Canopy, Angled	2	
3	103213001	Tubing, Drain, Canopy	2	
4	N/A	Instr, Drain, Canopy	1	
5	103411601	Clip, Rear Windshld/drain Tube	4	

1

G

E

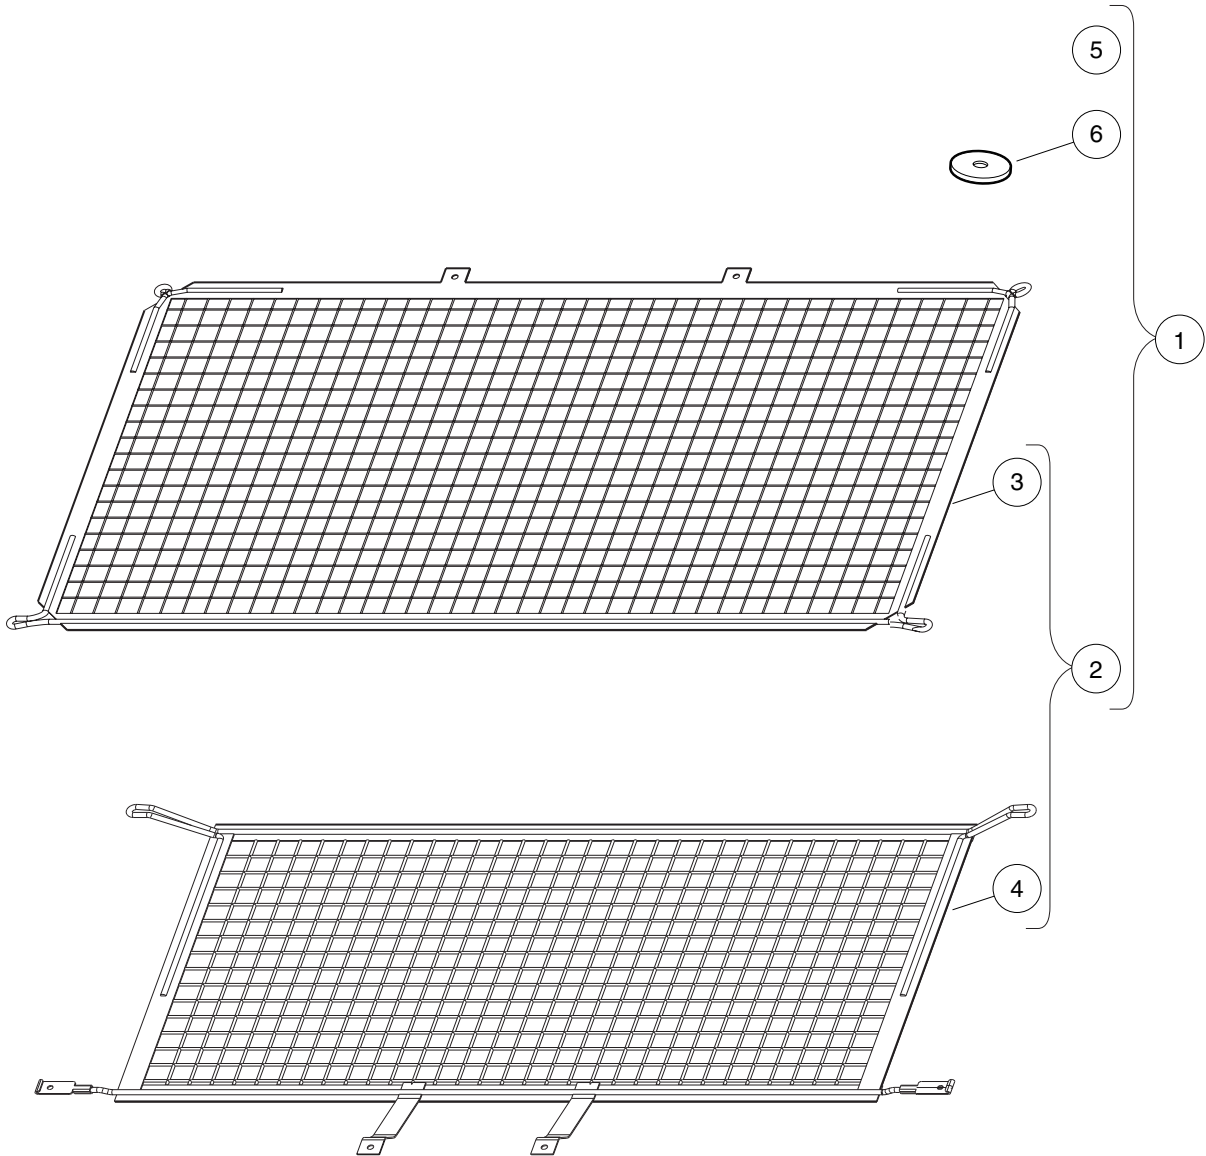

000772-001


CARGO NETS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	103238802	Kit, Cargo Nets, Field (includes items 2 through 6)	1	
2	103238801	Nets, Cargo, Front & Rear (includes items 3 and 4)	1	
3	N/A	Net, Cargo, Front	1	
4	N/A	Net, Cargo, Rear	1	
5	N/A	Instr, Net, Cargo	1	
6	103375101	Washer, Rubber, 1" Od X .25" Id	10	

1

G

E

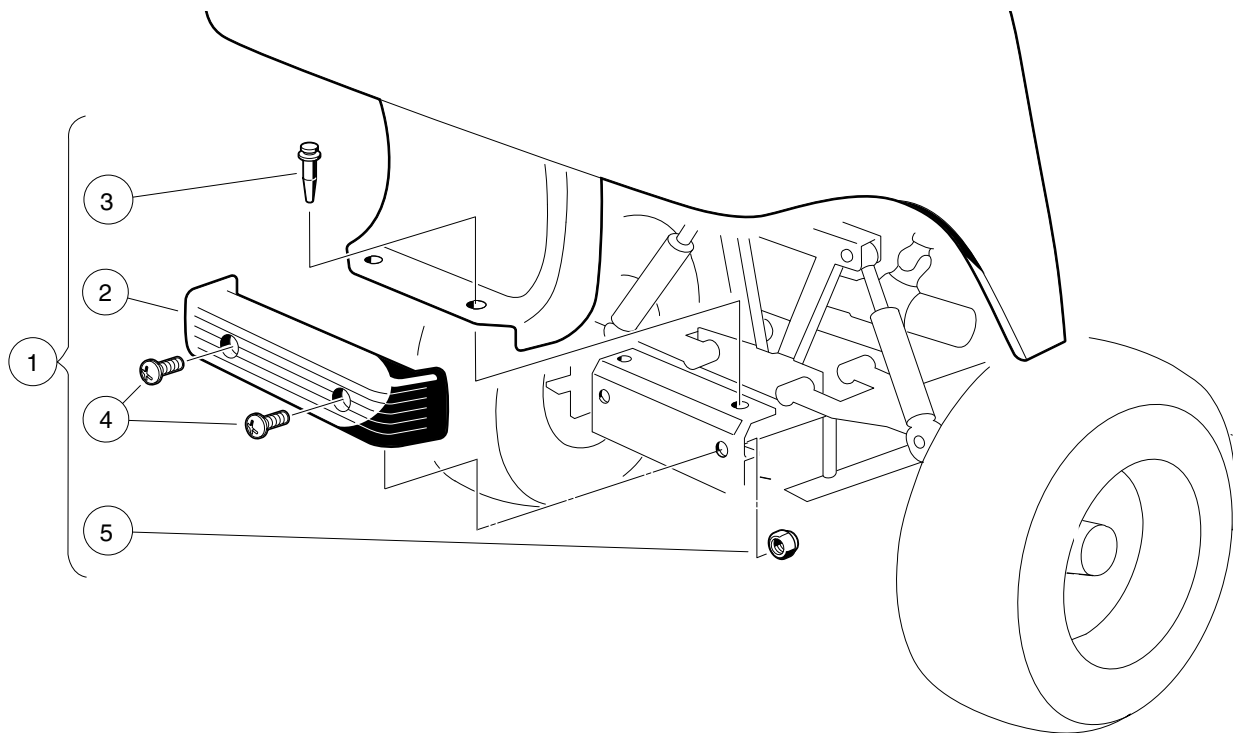

000743-001

FRONT BUMPER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017080	Kit, Front Bumper (includes items 2 through 5)	1
2	1016868	Front Bumper	1
3	1016967	Blind Rivet, Push Type	2
4	7251	Screw, 5/16-18 x 1.0 Truss-Head	2
5	7473	Locknut, 5/16-18 Nylon Insert	2

1


G

E

1

G

E

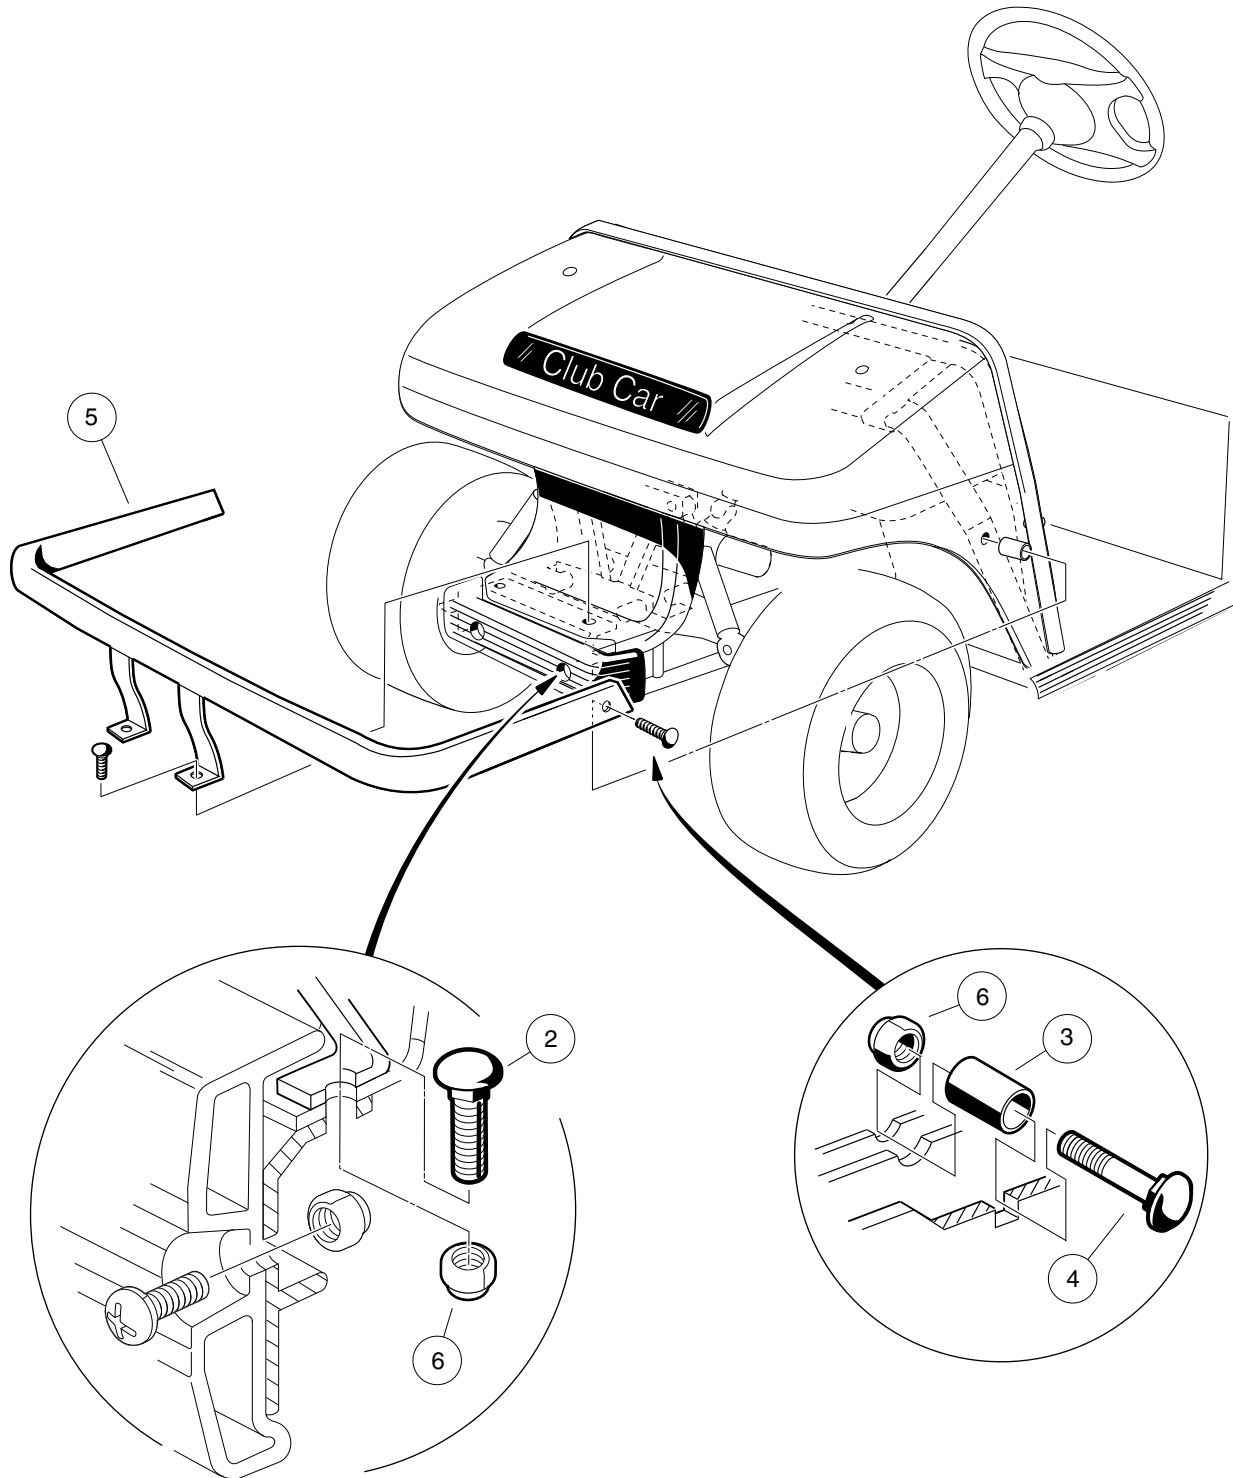

APM-000037-001


HEAVY-DUTY FRONT BUMPER KIT

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	101734802	Kit, Heavy-Duty Bumper (includes items 2 through 6)	1	
2	1010435	Bolt, Carriage, 5/16-18 X 1.00	2	
3	1010546	Spacer	2	
4	1015405	Bolt, Carriage, 5/16-18 X 2.0	2	
5	N/A	Weldment, Heavy Duty Bumper	1	
6	7473	Locknut, 5/16-18 Nylon Insert	4	

1

G

E

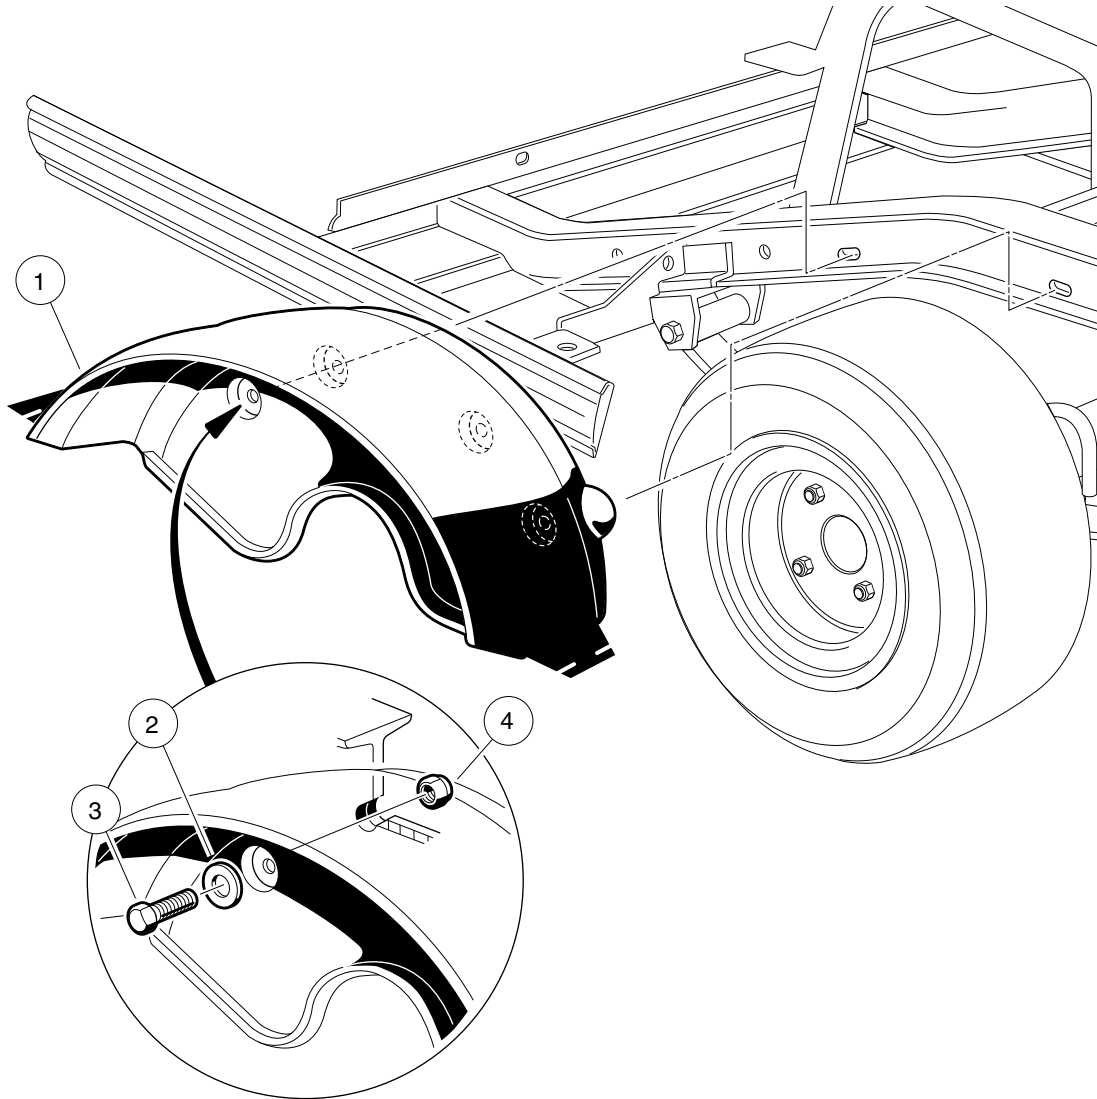

000747-001


INNER FENDER

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
1	1017936	Fender, Inner	2			
2	332	Washer, 1/4 Type A Narrow Flat	4			
3	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	4			
4	8233	Locknut, 1/4-20 Nylon Insert	4			

1

G

E

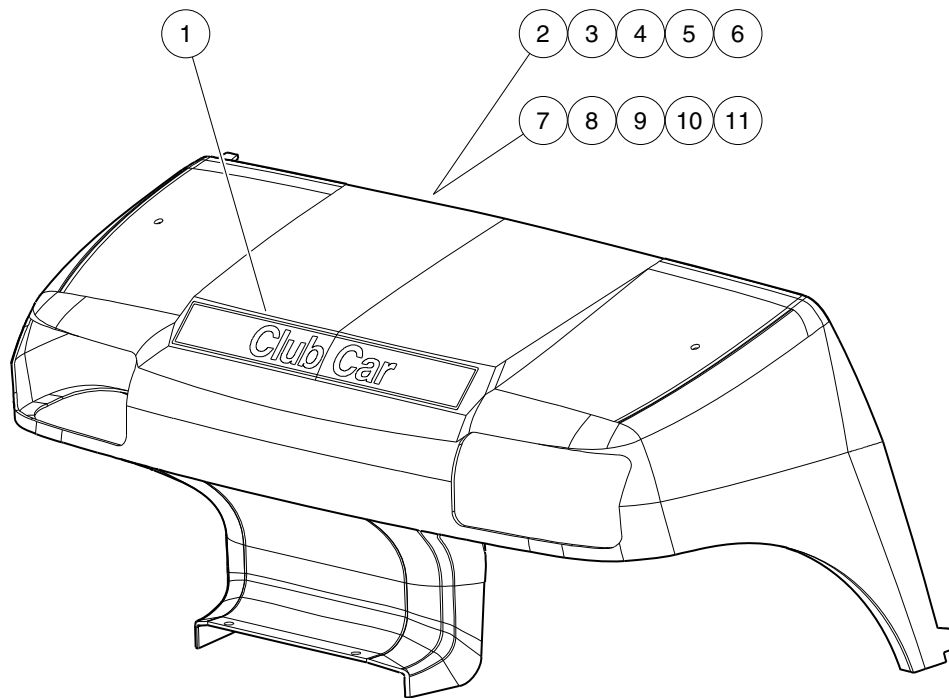

000748-001


FRONT BODY

ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		G
1	101414801	Nameplate, Club Car Amber	1	E
2	101692501	Cowl, TPO, Beige	1	
3	101692502	Cowl, TPO, White	1	
4	101692510	Cowl, TPO, Dark Green	1	
5	101692512	Cowl, TPO, Classic Blue (Navy)	1	
6	101692513	Cowl, TPO, Burgundy	1	
7	101693901	Cowl with Headlight Opening, TPO, Beige	1	
8	101693902	Cowl with Headlight Opening, TPO, White	1	
9	101693909	Cowl with Headlight Opening, TPO, Dark Green	1	
10	101693911	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1	
11	101693912	Cowl with Headlight Opening, TPO, Burgundy	1	
12	N/A	Opt, Color, 5 Pass, Elec	1	
13	N/A	Opt, Color, 5 Pass, Gas	1	

1

G

E

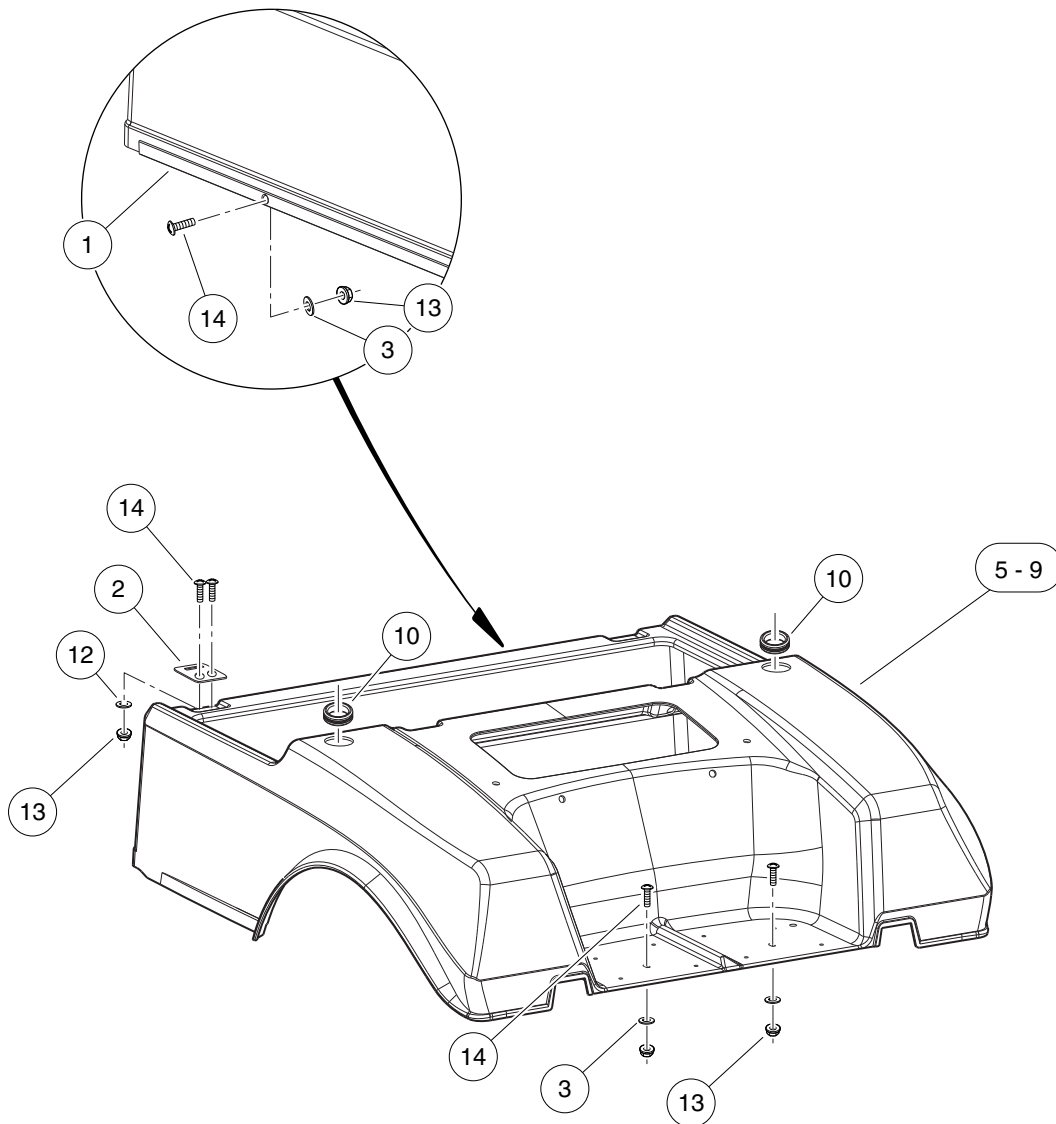

000749-001


REAR BODY WITHOUT LIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	1010993	Body Kick Plate	1			
2	1012412	Body, Hinge Plate	2			
3	1014306	Washer, 1/4" Type B Flat	4			
4	102842401	Decal, IQ Plus	1			
5	103219601	Body, Trimmed -g/e Beige	1			
6	103219602	Body, Trimmed -g/e White	1			
7	103219609	Body, Trimmed -g/e Dk Green	1			
8	103219611	Body, Trimmed -g/e Classic Blu	1			
9	103219612	Body, Trimmed -g/e Burgundy	1			
10	103252301	Grommet, Body, Drain Tube	2			
11	N/A	Opt, Color, 5 Pass, Elec	1			
12	332	Washer, 1/4 Type A Narrow Flat	4			
13	8233	Locknut, 1/4-20 Nylon Insert	8			
14	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	8			

1

G


E

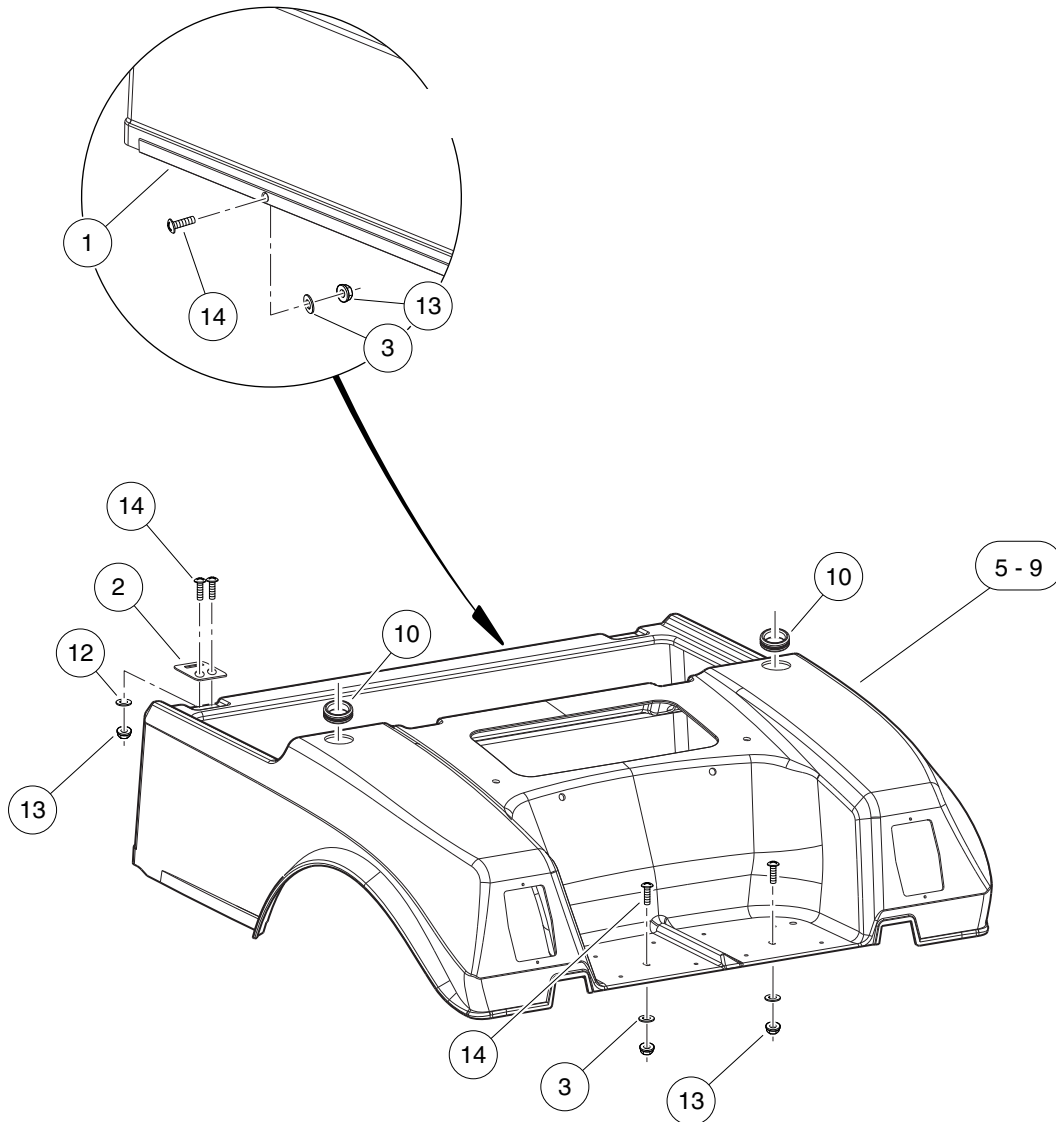

000749-002

REAR BODY WITH LIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	1010993	Body Kick Plate	1			
2	1012412	Body, Hinge Plate	2			
3	1014306	Washer, 1/4" Type B Flat	4			
4	102842401	Decal, IQ Plus	2			
5	103219631	Body, Trimmed -beige Lts	1			
6	103219632	Body, Trimmed -white Lts	1			
7	103219639	Body, Trimmed -dk Green Lts	1			
8	103219641	Body, Trimmed -classic Blue Lt	1			
9	103219642	Body, Trimmed -burgundy Lts	1			
10	103252301	Grommet, Body, Drain Tube	2			
11	N/A	Opt, Color, 5 Pass, Elec	1			
12	332	Washer, 1/4 Type A Narrow Flat	4			
13	8233	Locknut, 1/4-20 Nylon Insert	8			
14	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	8			

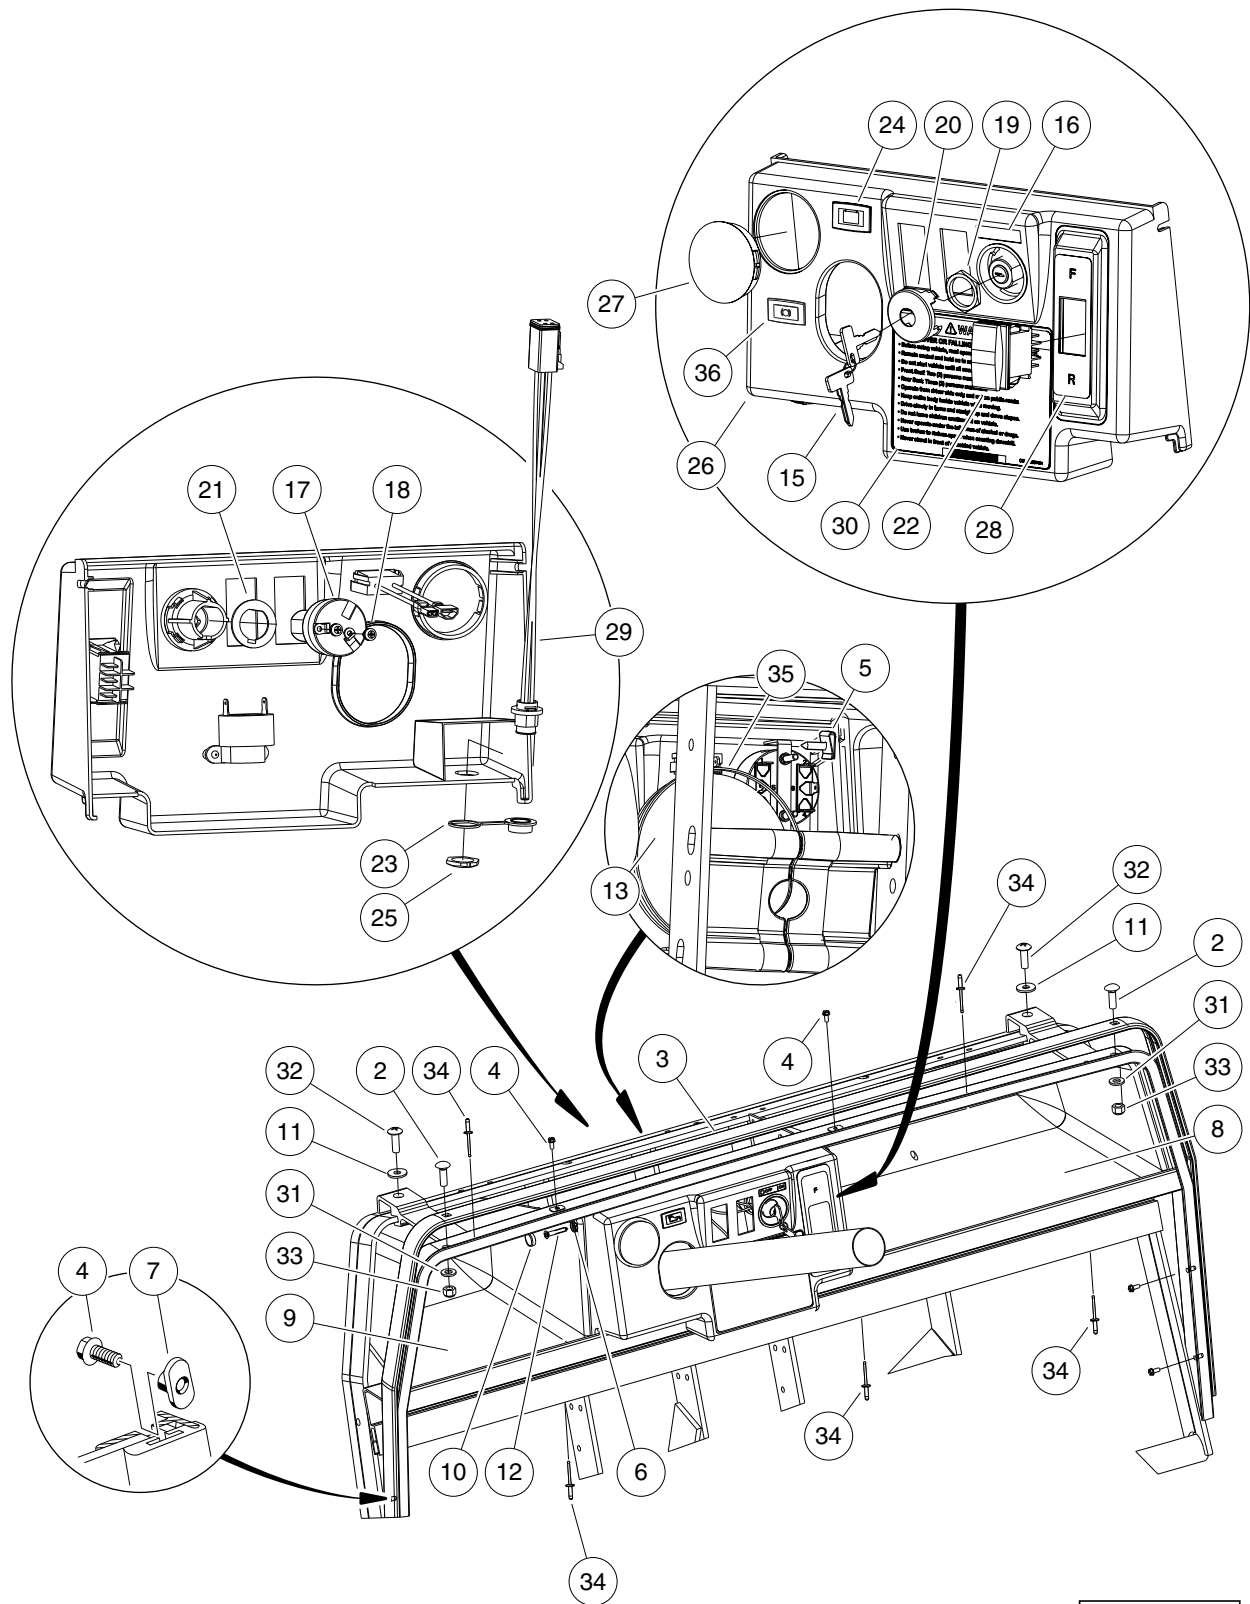1**G****E**

000741-005


DASH – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	N/A	Instl, Dash, Limo, Ele, Ab (includes items 2 through 35)	1	
2	1010435	Bolt, Carriage, 5/16-18 X 1.00	2	
3	1011014	Trim, Cowl	1	
4	1011017	Screw, #8-32 X 0.375	6	
5	1011019	Nut, Speed	2	
6	1011382	Washer, #10 Pan-Head Screw	2	
7	1011394	T-Nut Package (Set of 4)	1	
8	1013343	Dash Component, Passenger-Side, Black	1	
9	1013344	Dash Component, Driver-Side	1	
10	1013494	Cover, Screw Head	2	
11	1015075	Washer, 5/16 Flat Type A	2	
12	1015528	Screw, #10 x 1-1/4 Phillips Head	2	
13	102278001	Boot, Steering Column Round	1	
14	N/A	Asm, Dash, Ele, Limo, Ab (includes items 15 through 30)	1	
15	1012505	Keys (set of 2)	1	
16	101825101	Decal, Off/On	1	
17	101826201	Key Switch, On/Off	1	
18	101830601	Screw and Washer Assembly	2	
19	101830701	Nut, Key Switch	1	
20	101834502	Cap, Black Key Switch	1	
21	101851101	Washer, Key Switch	1	
22	101856002	Switch, Rocker, Single-Pole	1	
23	102196901	Dust Cap	1	
24	102508701	Light, Battery	1	
25	102572401	Nut, Diagnostic Port, Prec	1	
26	102977002	Panel, Dash, Center, Gas (Instrument Panel)	1	
27	103198301	Plug, Hole, Round, 2.0 In	1	
28	103210301	Decal, Forward/Reverse, Electric	1	
29	103218601	Harness, Diagnostic Port	1	
30	N/A	Decal, Warning, Dash	1	
31	1241	Washer, 5/16 Type A Flat	2	
32	7251	Screw, 5/16-18 x 1.0 Truss-Head	2	
33	7473	Locknut, 5/16-18 Nylon Insert	2	
34	7973	Rivet, 3/16 X .400 Blind	5	
35	8639	Tie Wrap, 11" Nylon	1	
36	103247601	Light, Indicator, Brake Sys	1	

1

G



E

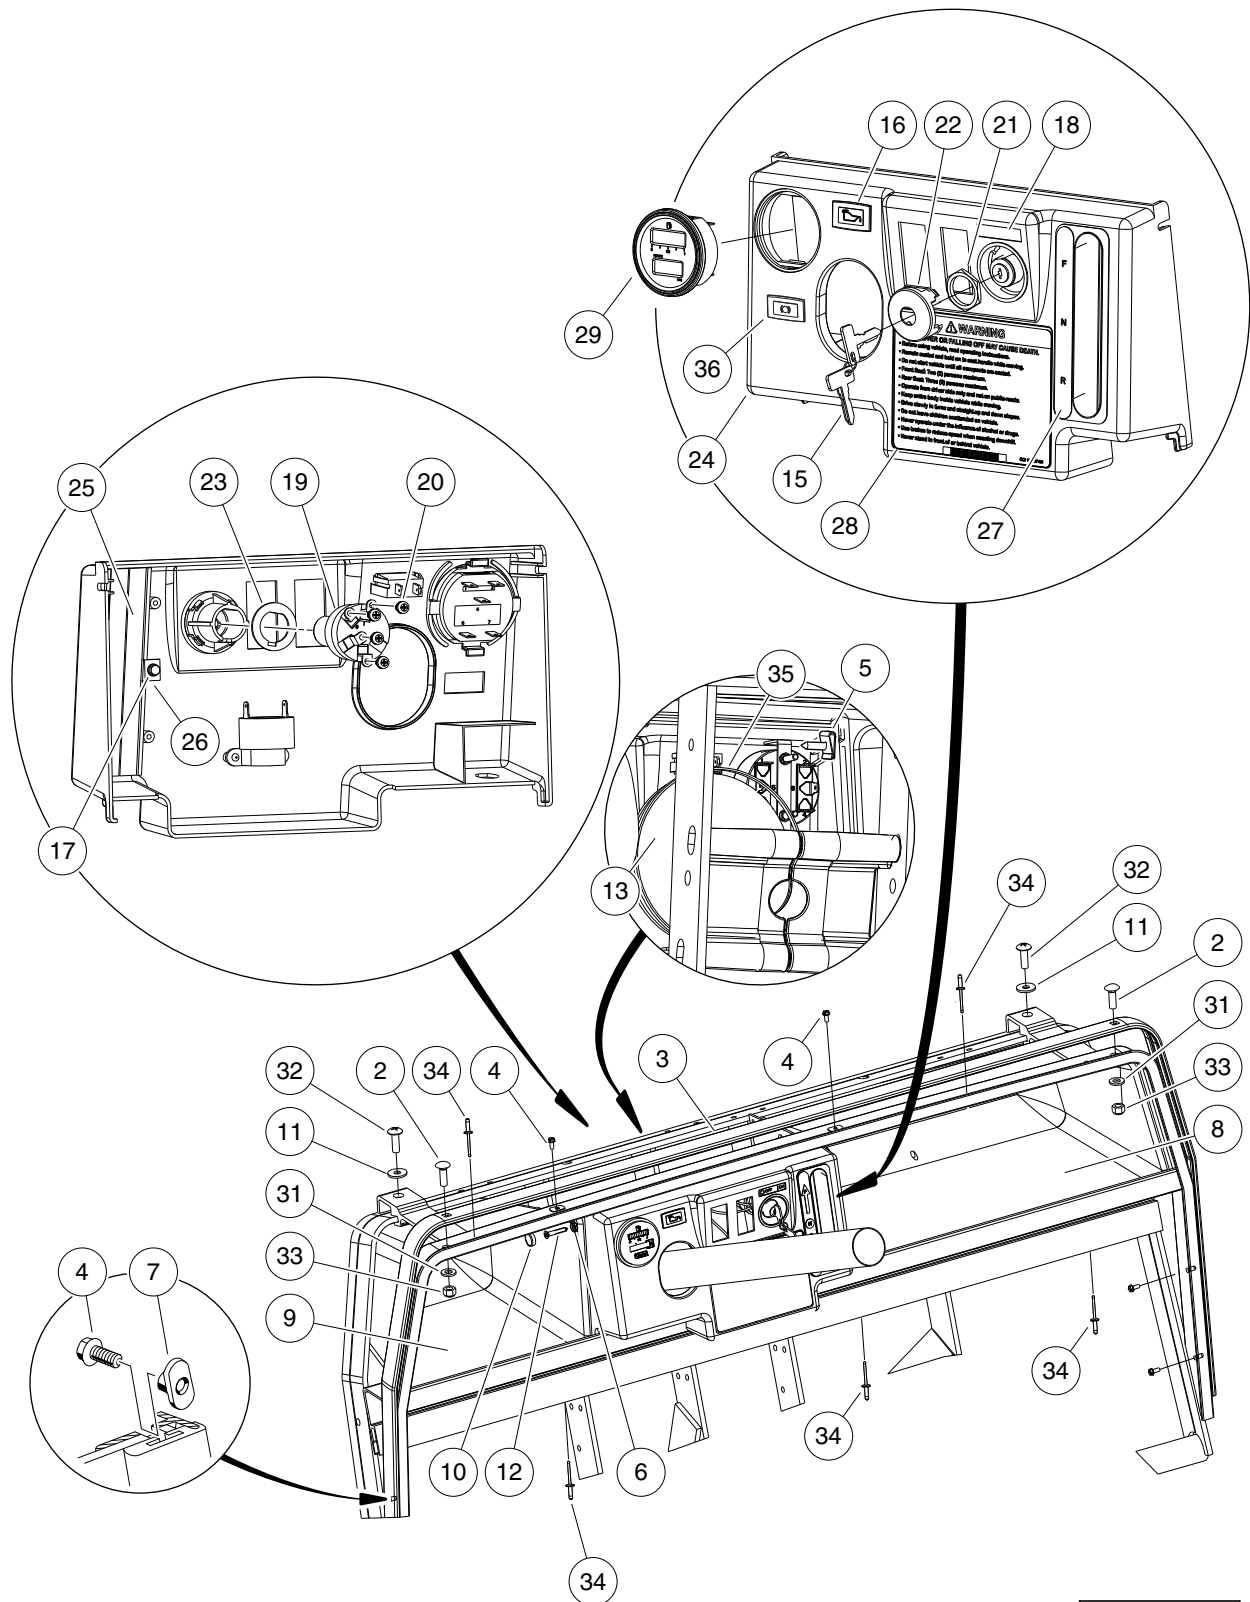

000741-004

DASH – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	N/A	Instl, Dash, Limo, Gas, Ab (includes items 2 through 35)	1	
2	1010435	Bolt, Carriage, 5/16-18 X 1.00	2	
3	1011014	Trim, Cowl	1	
4	1011017	Screw, #8-32 X 0.375	6	
5	1011019	Nut, Speed	2	
6	1011382	Washer, #10 Pan-Head Screw	2	
7	1011394	T-Nut Package (Set of 4)	1	
8	1013343	Dash Component, Passenger-Side, Black	1	
9	1013344	Dash Component, Driver-Side	1	
10	1013494	Cover, Screw Head	2	
11	1015075	Washer, 5/16 Flat Type A	2	
12	1015528	Screw, #10 x 1-1/4 Phillips Head	2	
13	102278001	Boot, Steering Column Round	1	
14	N/A	Asm, Dash, Gas, Limo, Ab (includes items 15 through 29)	1	
15	1012505	Keys (set of 2)	1	
16	1016630	Light, Oil	1	
17	101804301	Screw, #8 X 0.500, Hex-Head Hi-Lo	2	
18	101825101	Decal, Off/On	1	
19	101826301	Key Switch, 12-Volt, Off/On	1	
20	101830601	Screw and Washer Assembly	4	
21	101830701	Nut, Key Switch	1	
22	101834502	Cap, Black Key Switch	1	
23	101851101	Washer, Key Switch	1	
24	102977001	Panel, Dash, Center, Gas (Instrument Panel)	1	
25	103199001	Brush, Closeout, FNR	2	
26	103199101	Washer, Retaining, Brush, FNR	2	
27	103210201	Decal, Forward/Reverse, Gas	1	
28	N/A	Decal, Warning, Dash	1	
29	103348601	Gauge, Fuel-hour,sep Gnd,utl (includes item 30)	1	
30	103348201	Clip, Meter, Round	1	
31	1241	Washer, 5/16 Type A Flat	2	
32	7251	Screw, 5/16-18 x 1.0 Truss-Head	2	
33	7473	Locknut, 5/16-18 Nylon Insert	2	
34	7973	Rivet, 3/16 X .400 Blind	5	
35	8639	Tie Wrap, 11" Nylon	1	
36	103247601	Light, Indicator, Brake Sys	1	

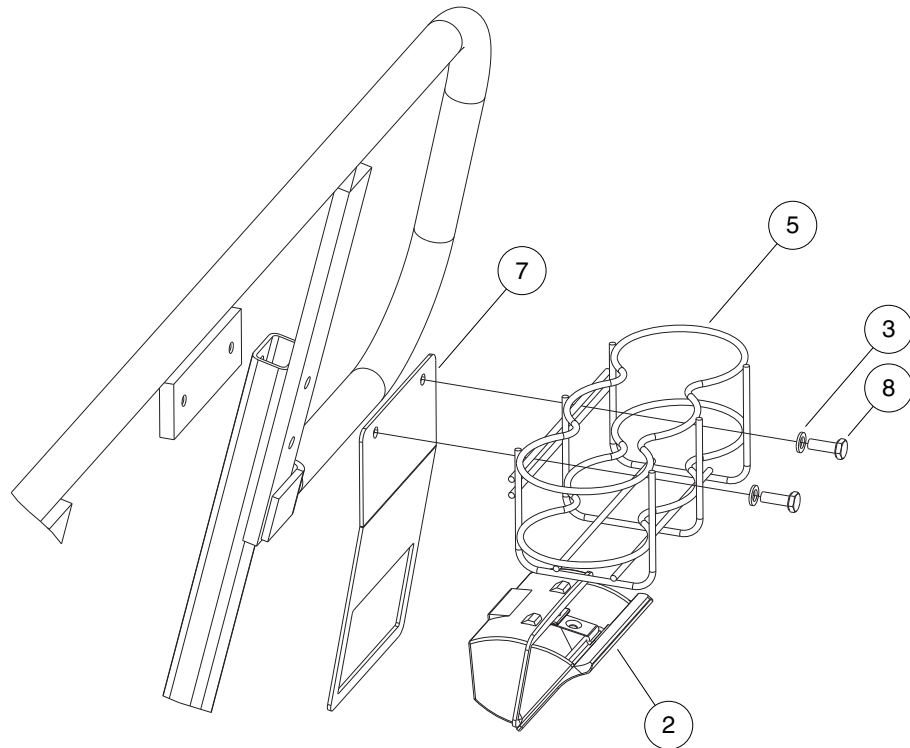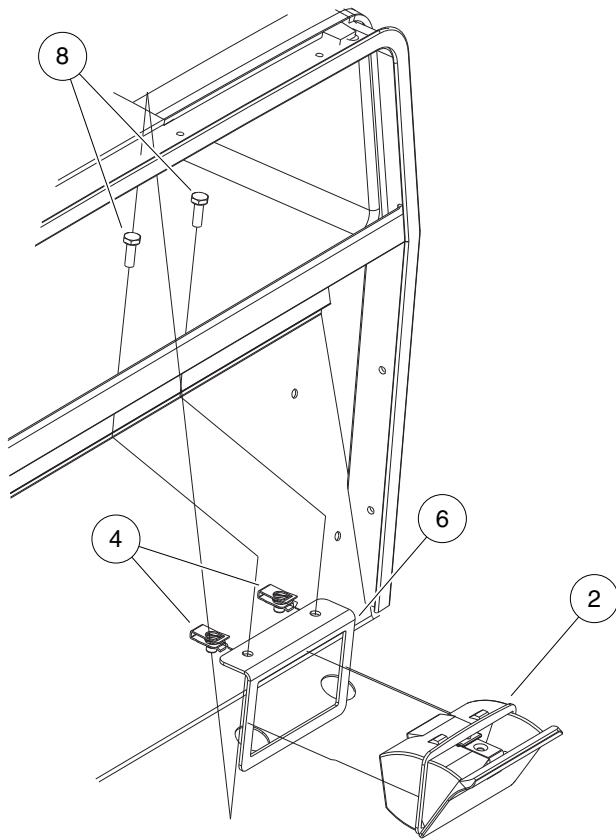1**G****E**

000740-001


CUP HOLDER AND ASHTRAYS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	N/A	Inst, Cupholder Ashtray, Limo (includes items 2 through 8)	1	
2	N/A	Ashtray Assy	2	
3	1014007	Washer, 1/4 Flat	2	
4	1016952	U-Nut, 1/4-20	2	
5	102961801	Cupholder, Wireform	1	
6	102977801	Bracket, Ashtray, Front	1	
7	103204901	Bracket, Ashtray, Rear	1	
8	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	

1

G


E

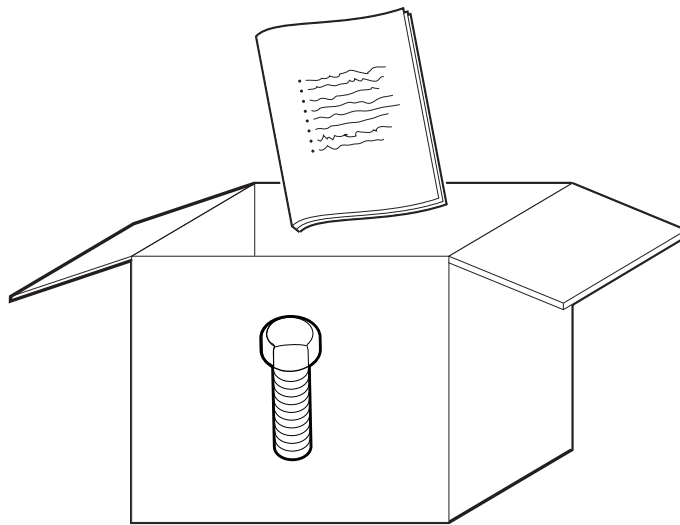

000KIT-001

STAINLESS STEEL HARDWARE KIT


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	103402801	1 2 3 4 Kit, Hardware, Stainless, Limo Note: Includes replacement hardware for: front and rear suspension, bumpers, and baskets, front seat, choke cable, charger receptacle, rear seat frame and body, seat back cap, cupholder/ashtray, bagrack and canopy.	1	

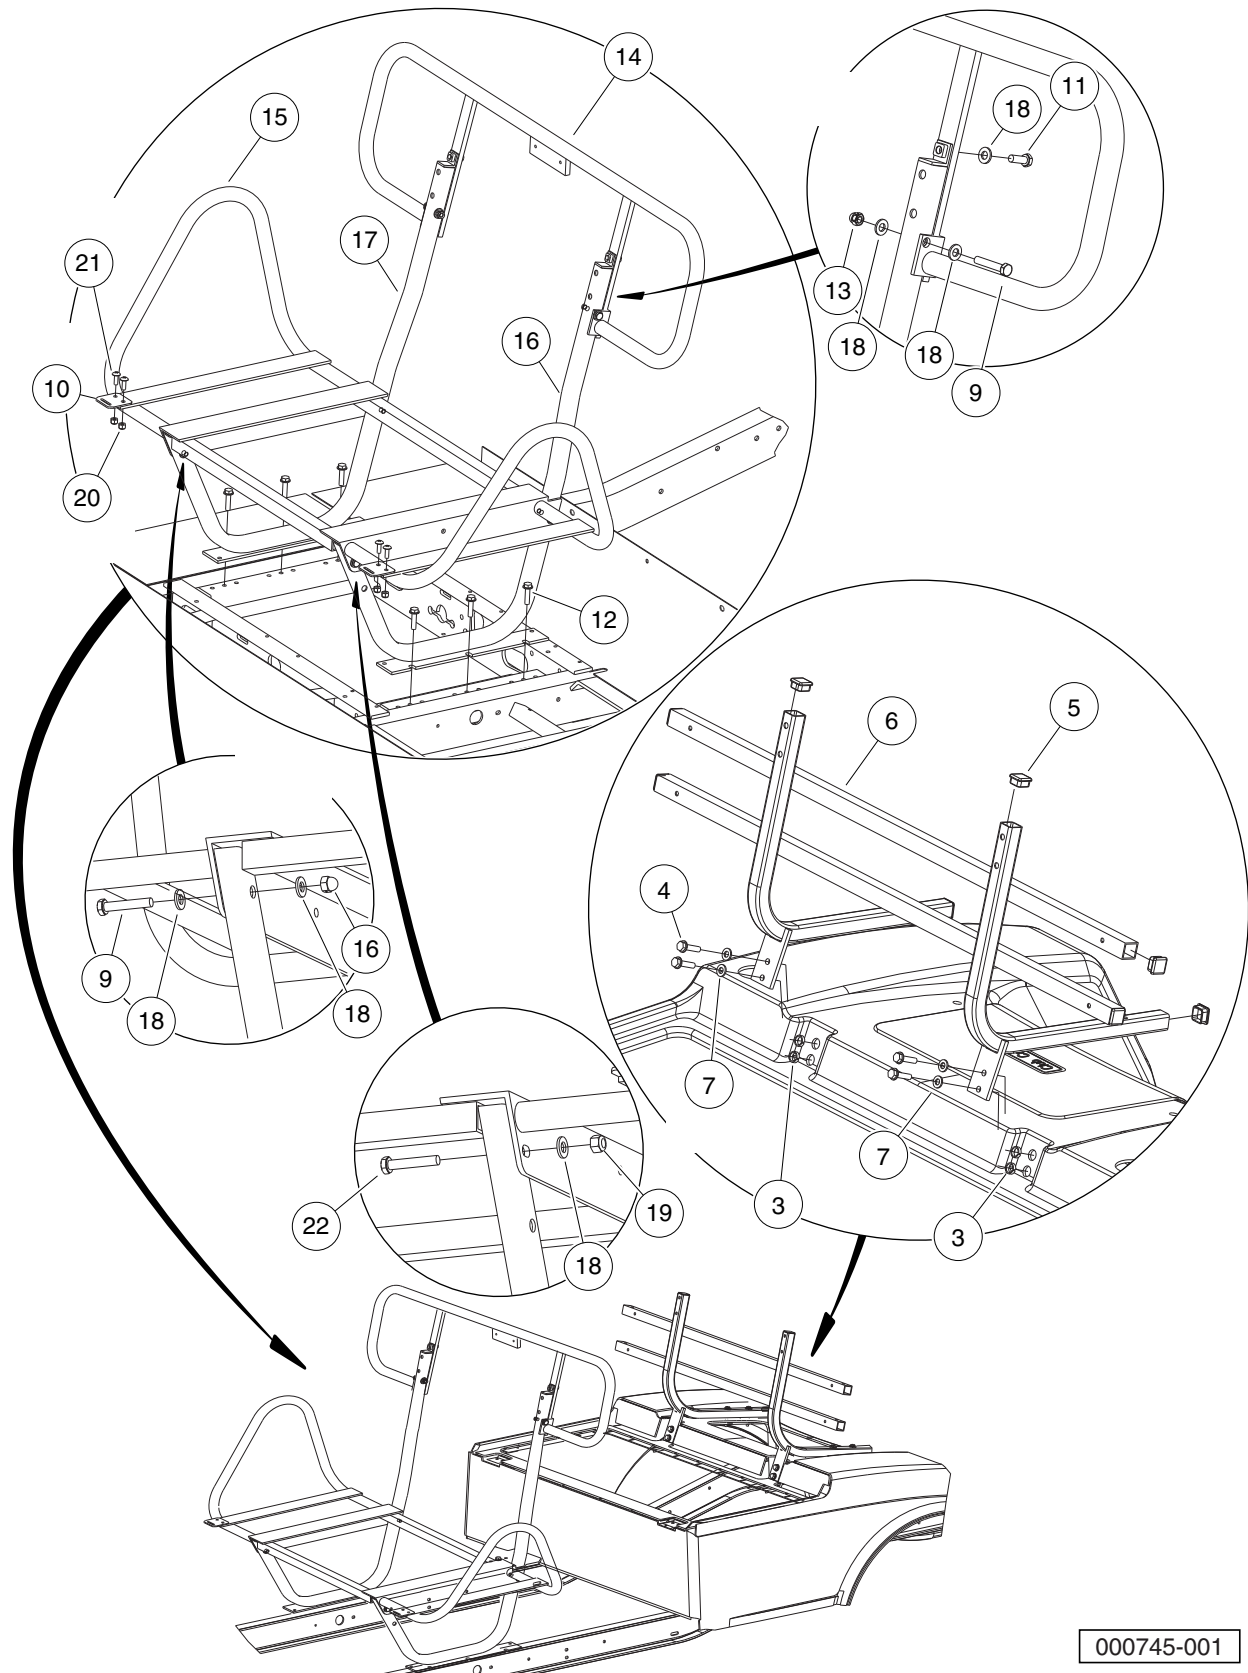1**G****E**

000745-001

SEAT SUPPORT

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	N/A	Instl, Seat Structure (includes items 2 through 8)	1	
2	N/A	Instl, Rear Seat Frame (includes items 3 through 7)	1	
3	1017774	Body Spacer	4	
4	101910401	Screw, 5/16-18 X 1.25 Thrd Frm	4	
5	102581201	Plug, Square - 25.4 mm	8	
6	103312101	Weldment, Seatframe, Rear	1	
7	1241	Washer, 5/16 Type A Flat	4	
8	N/A	Instl, Front Seat Support (includes items 9 through 22)	1	
9	1010577	Bolt, Hex-Head, 5/16-18 X 1.50	5	
10	1012412	Body, Hinge Plate	2	
11	101834701	Screw, 5/16-18 X .875 Hex Cap	2	
12	101910401	Screw, 5/16-18 X 1.25 Thrd Frm	6	
13	103245301	Nut, Hex, Cp, Mech Def, 5/16-1	5	
14	103345101	Weldment, Seat Back, Front	1	
15	103345201	Weldment, Seat Bottom, Front	1	
16	103345301	Wldmnt, Seat Leg, Driver, Frt	1	
17	103345401	Wldmnt, Seat Leg, Pssnger, Frt	1	
18	1241	Washer, 5/16 Type A Flat	13	
19	7473	Locknut, 5/16-18 Nylon Insert	1	
20	8233	Locknut, 1/4-20 Nylon Insert	4	
21	8248	Screw, 1/4-20 X 0.75 Truss-Head Machine	4	
22	8963	Screw, 5/16-18 X 1.75 Hex-Head Cap	1	

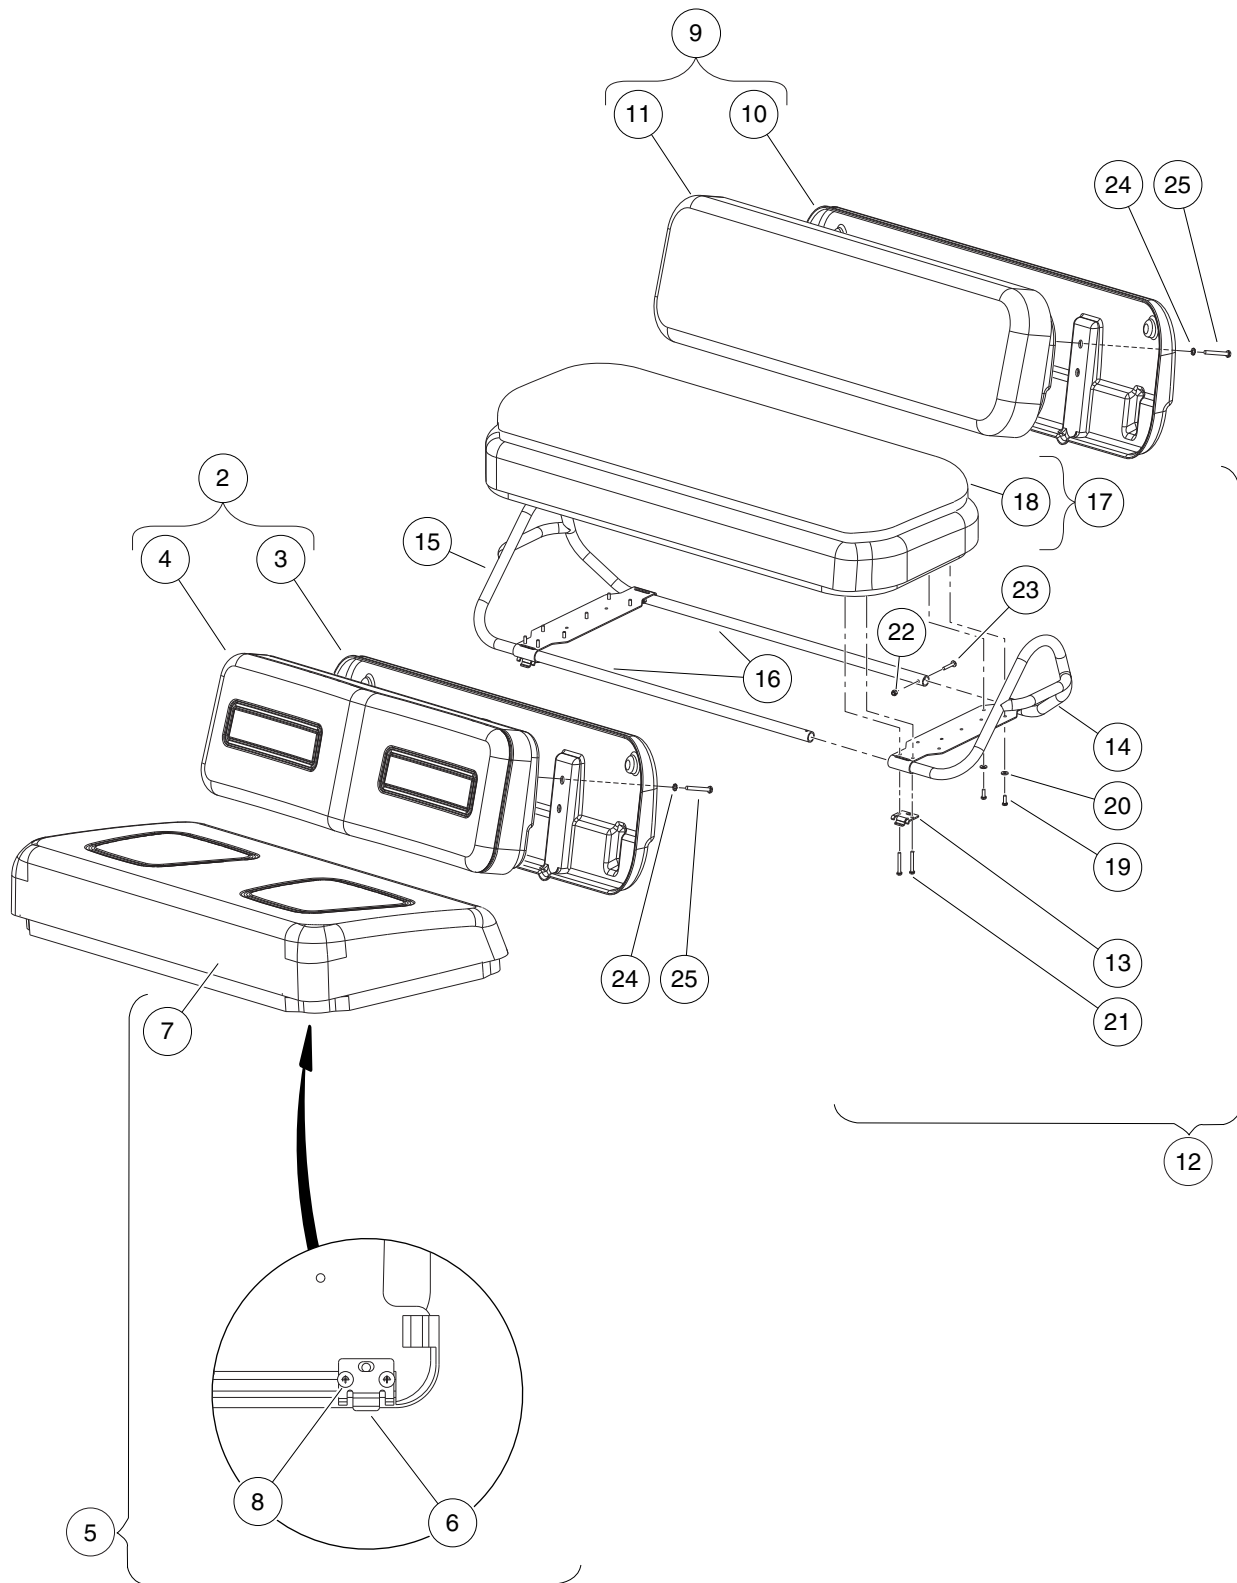
1**G****E**

000746-001

SEATS, BUFF

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Color Opt, Seat, Buff (includes items 2 through 25)	1
2	101677703	Seat Back Assembly, Beige (includes items 3 and 4)	1
3	1016751	Cap, Seat Back	1
4	101675511	Vinyl Seat Back, Beige	1
5	103212201	Asm, Seat Btm, Front, Buff (includes items 6 through 8)	1
6	1011652	Hinge Plate	2
7	101998211	Vinyl Cover Seat Btm - Buffsvc	1
8	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	4
9	103224901	Seat Back Asm, 3pass-beige (includes items 10 and 11)	1
10	103225701	Cap, Seat Back-3pass	1
11	103313801	Asm, Seat Back, 3 Pass, Be	1
12	103225001	Seat Btm Asm-3pass, Beige (includes items 13 through 23)	1
13	1011652	Hinge Plate	2
14	N/A	Weldment, Hip, Rear,3pass,drv	1
15	103282402	Weldment, Hip, Rear,3pass,pas	1
16	103305401	Tube, Straight, Cut, 1 Od	2
17	103313701	Asm, Seat Bot, 3 Pass, Be (includes item 18)	1
18	N/A	Cover, Seat Bot, 3pass, Be	1
19	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	10
20	332	Washer, 1/4 Type A Narrow Flat	10
21	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	4
22	8233	Locknut, 1/4-20 Nylon Insert	2
23	8418	Screw, 1/4-20 X 1.50 Phillips Truss-Head	2
24	332	Washer, 1/4 Type A Narrow Flat	8
25	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	8

1
G
E

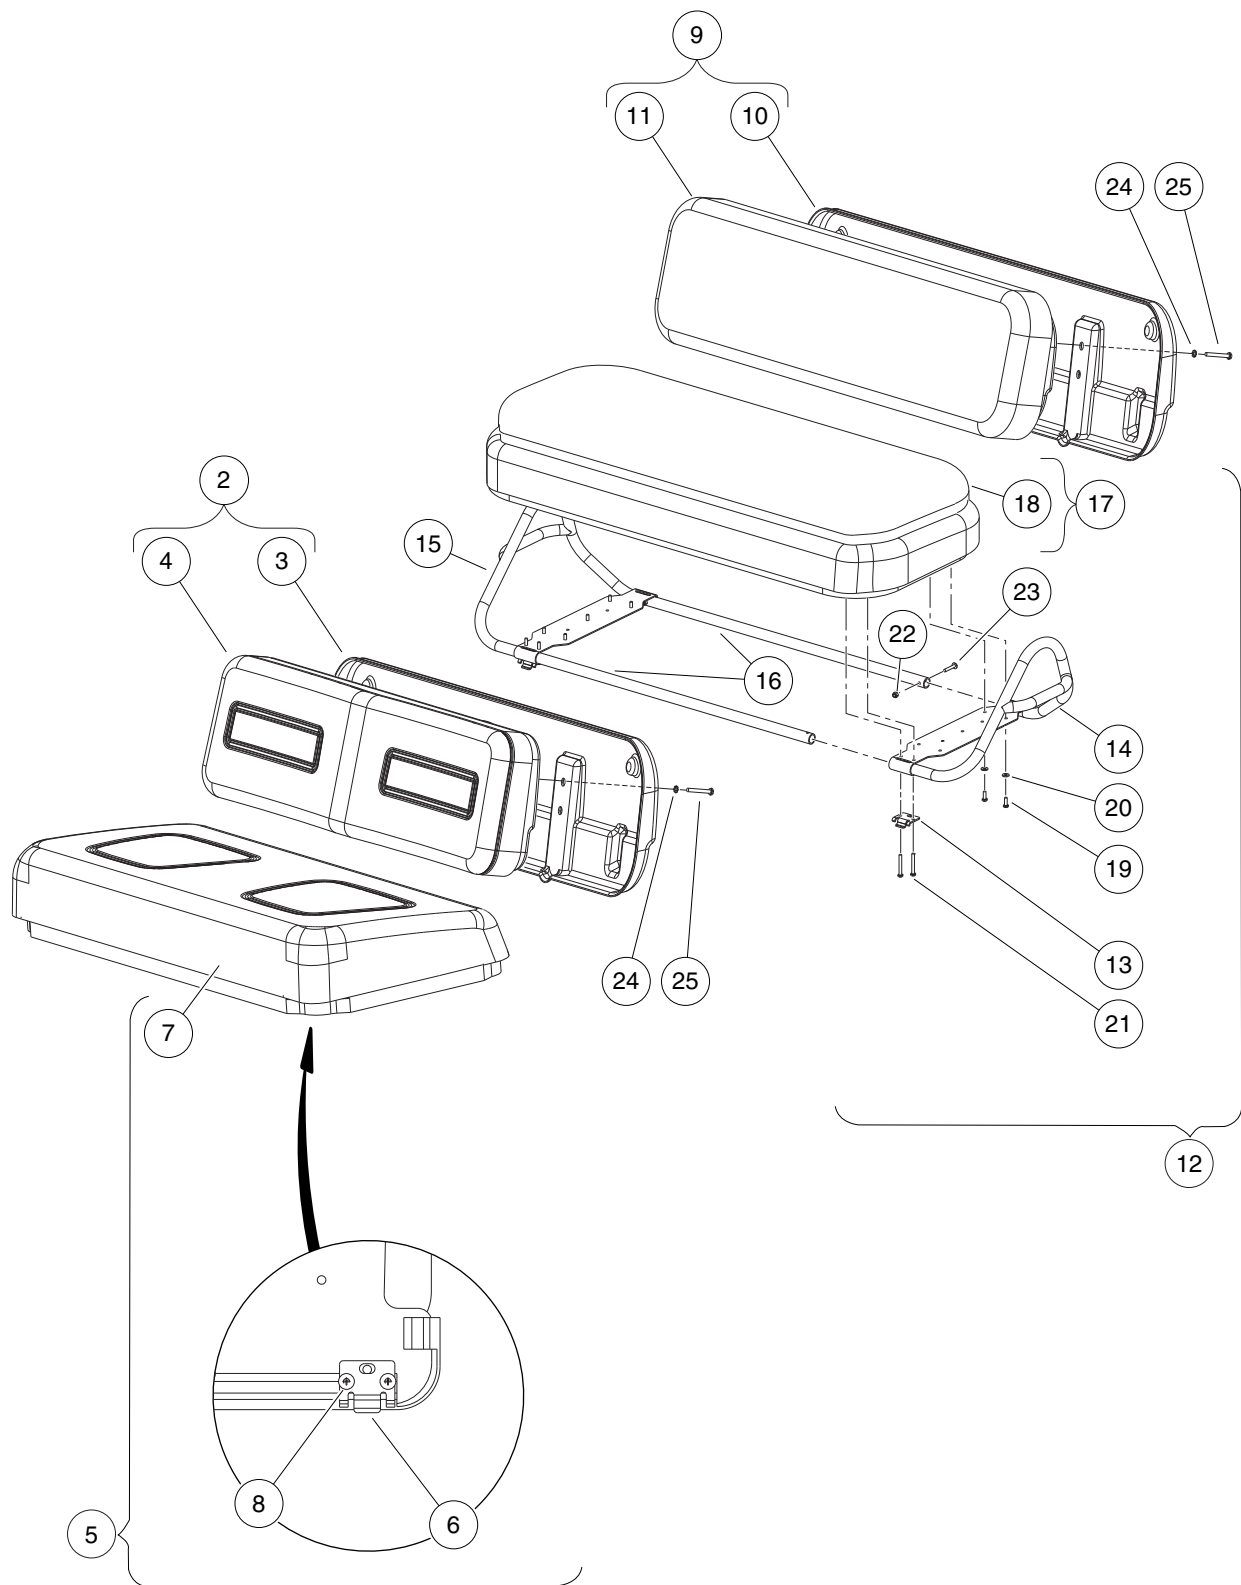

000746-001


SEATS, WHITE

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	N/A	Color Opt, Seat, Wht (includes items 2 through 25)	1			
2	101677701	Seat Back Assembly, White (includes items 3 and 4)	1			
3	1016751	Cap, Seat Back	1			
4	101675512	Vinyl Seat Back, White	1			
5	103212202	Asm, Seat Btm, Front, White (includes items 6 through 8)	1			
6	1011652	Hinge Plate	2			
7	101998212	Vinyl Cover, Seat Bottom, White	1			
8	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	4			
9	103224902	Seat Back Asm, 3pass-white (includes items 10 and 11)	1			
10	103225701	Cap, Seat Back-3pass	1			
11	103313802	Asm, Seat Back, 3 Pass, Wh	1			
12	103225002	Seat Btm Asm-3pass, Wht (includes items 13 through 23)	1			
13	1011652	Hinge Plate	2			
14	N/A	Weldment, Hip, Rear,3pass,drv	1			
15	103282402	Weldment, Hip, Rear,3pass,pas	1			
16	103305401	Tube, Straight, Cut, 1 Od	2			
17	103313702	Asm, Seat Bot, 3 Pass, Wh (includes item 18)	1			
18	N/A	Cover, Seat Bot, 3 Pass, Wh	1			
19	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	10			
20	332	Washer, 1/4 Type A Narrow Flat	10			
21	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	4			
22	8233	Locknut, 1/4-20 Nylon Insert	2			
23	8418	Screw, 1/4-20 X 1.50 Phillips Truss-Head	2			
24	332	Washer, 1/4 Type A Narrow Flat	8			
25	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	8			

1

G

E

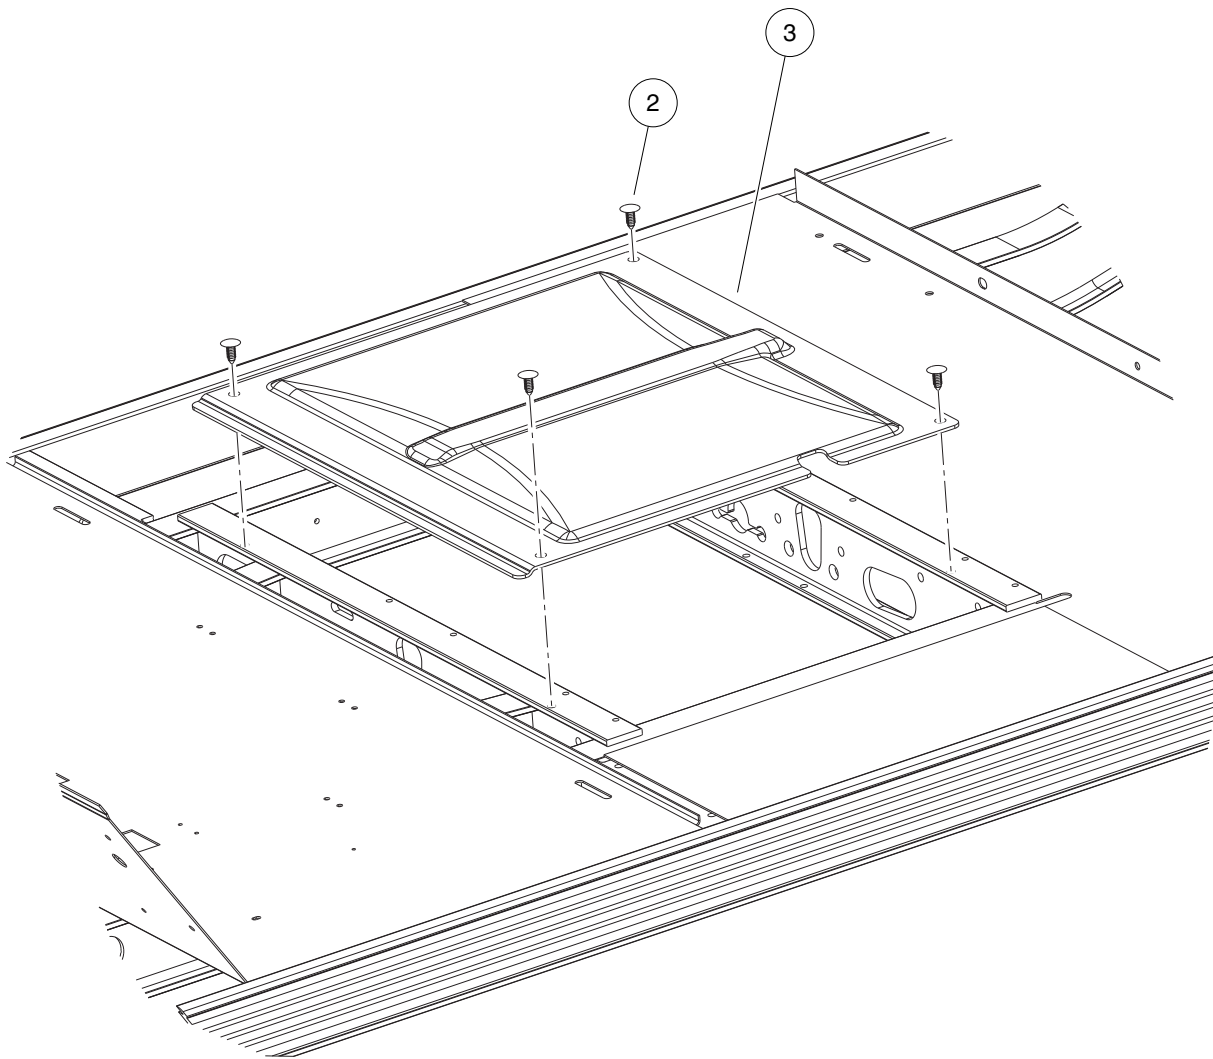

000739-001


CLOSEOUT, UNDER SEAT

ITEM	PART NO.	DESCRIPTION	QTY	1
1	N/A	1 2 3 4 Instl, Closeout, Under Seat (includes items 2 and 3)	1	G
2	1010434	Barrel - Plastic	4	E
3	103407001	Cover, Under Seat, Manual Brk	1	

1

G

E

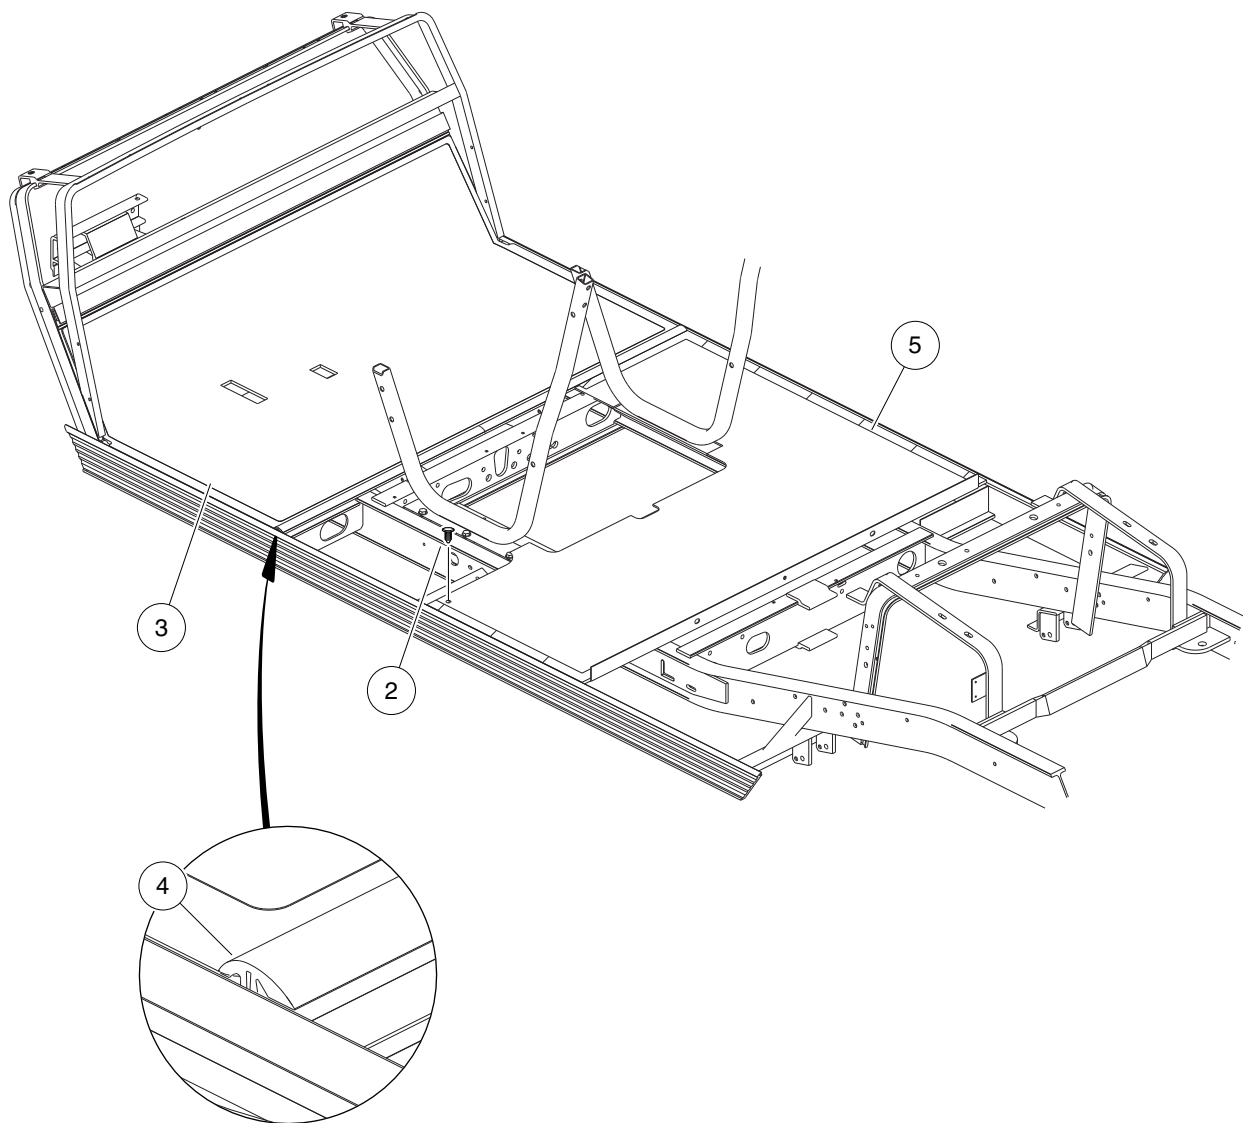

000742-001


FLOORMATS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	N/A	1 2 3 4 Instl, Floormat, No Body, Gas (includes items 2 through 5)	1	
2	1010434	Barrel - Plastic	1	
3	101503202	Floormat	1	
4	103296101	Trim, Floormat	1	
5	103296402	Floormat, Rear, No Body, Gas	1	

1

G

E

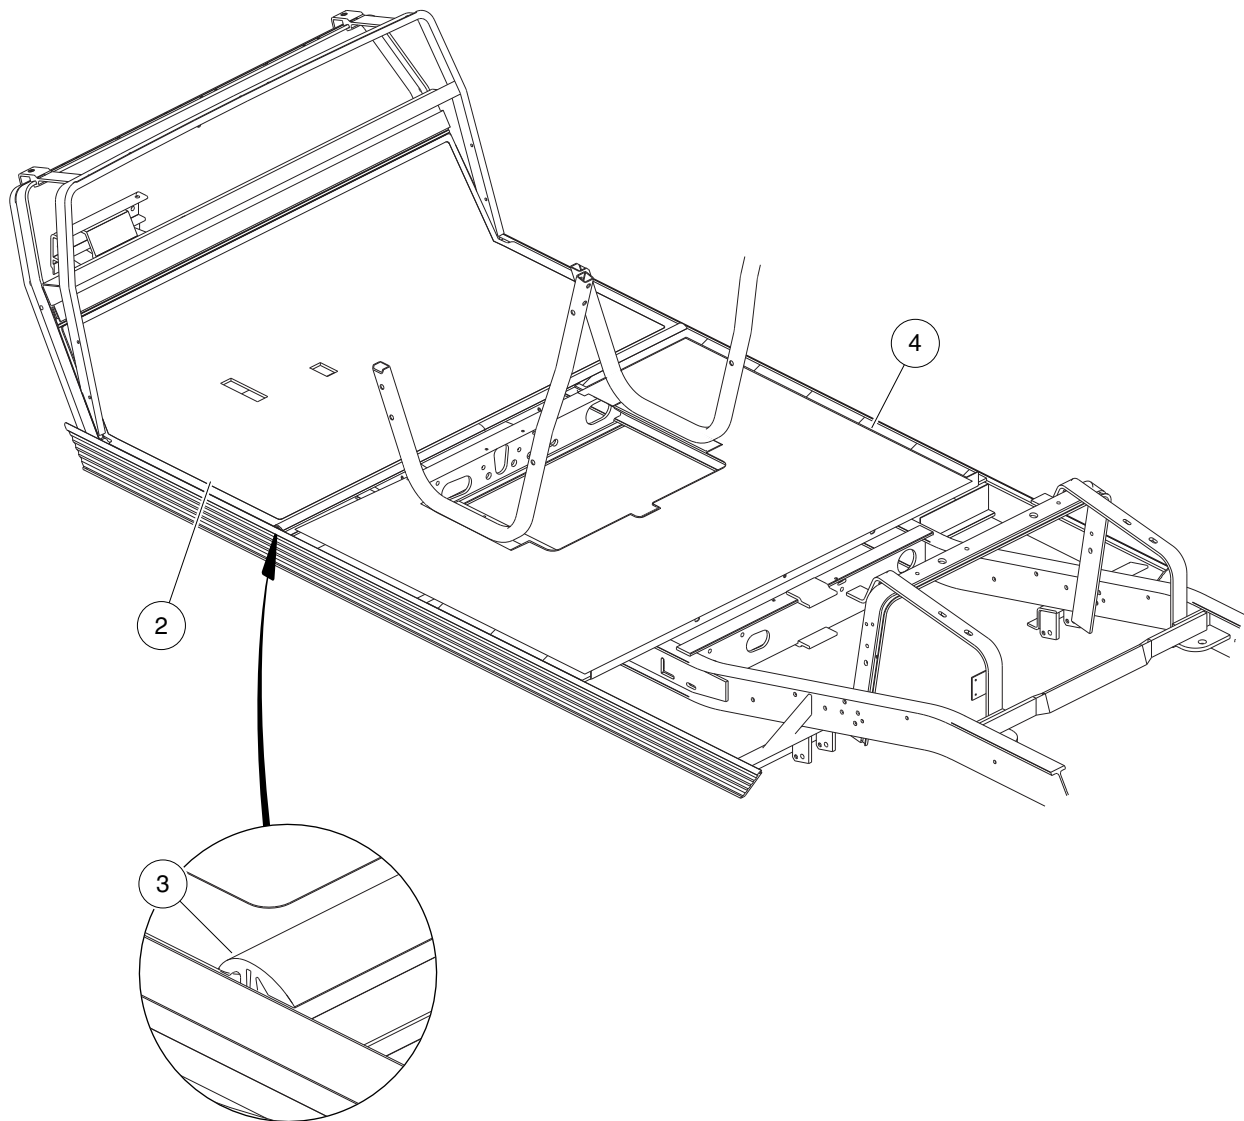

000742-002

FLOORMATS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
1	N/A	1 2 3 4 Instl, Floormat, No Body, Elec (includes items 2 through 4)	1
2	101503202	Floormat	1
3	103296101	Trim, Floormat	1
4	103296401	Floormat, Rear, No Body, Elec	1

1


G

E

1

G

E

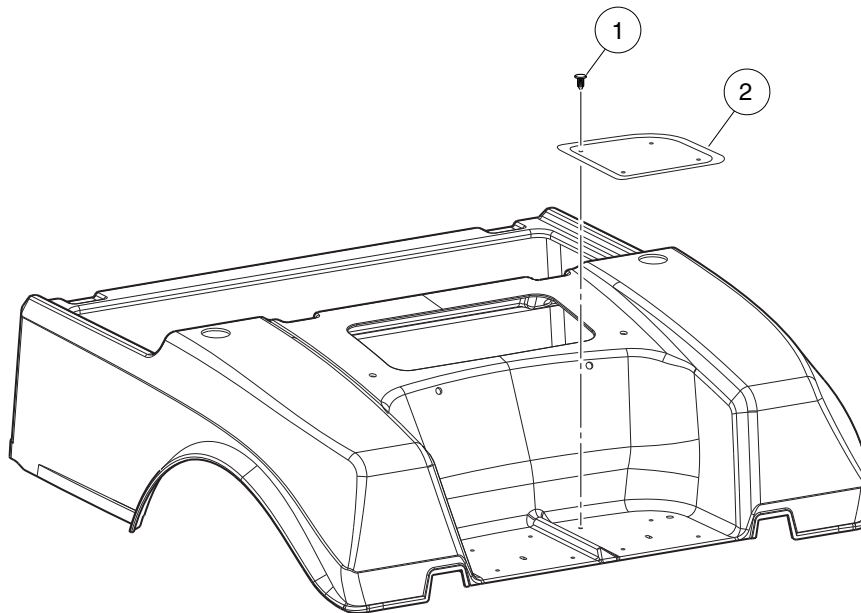

000777-001


BAG REST MATS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	1010434	1 2 3 4 Barrel - Plastic	8	
2	1014392	Bag Rest Mat	2	

1

G

E

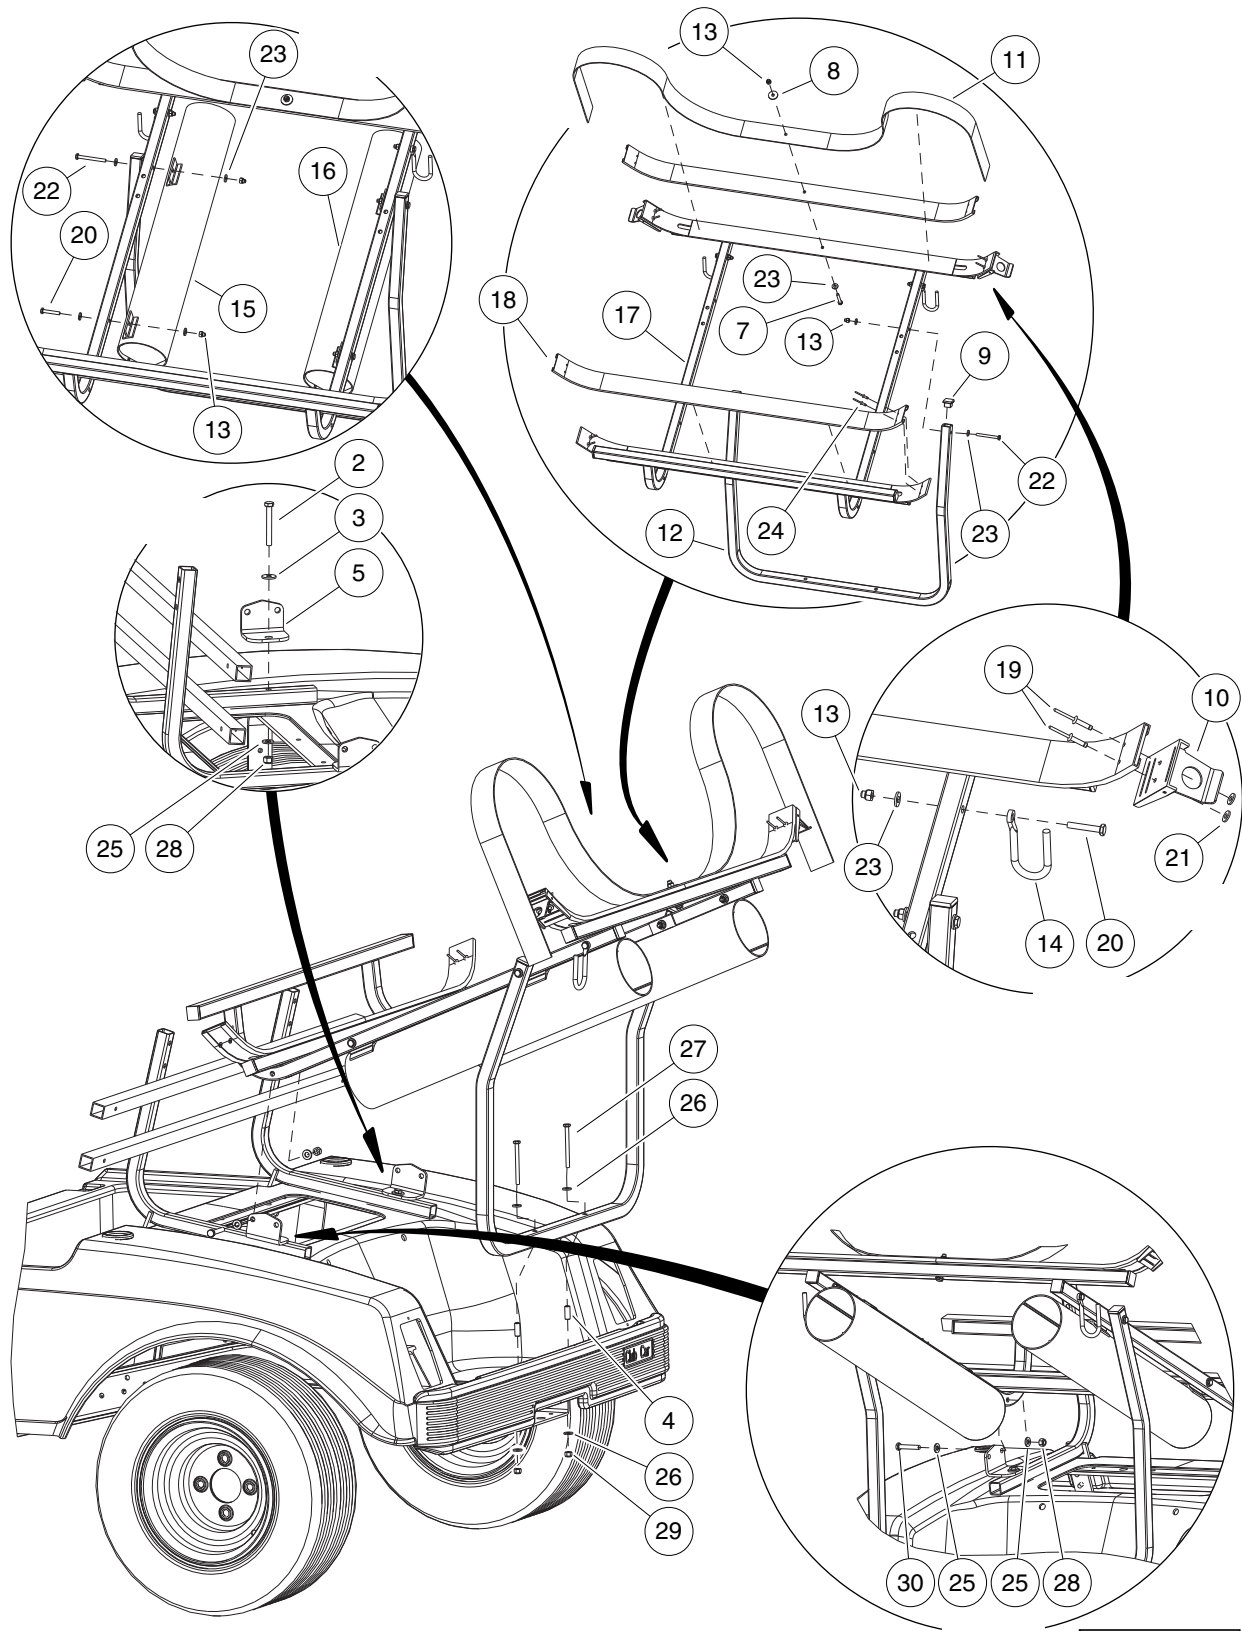

000738-001


BAGRACK

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	N/A	Instl, Rack W/tubes, Four Bag (includes items 2 through 30)	1	
2	1010921	Screw, 5/16-18 X 2.50 Hex Cap	2	
3	1011697	Washer, 5/16 Flat	2	
4	1017841	Spacer - Steel	2	
5	103371001	Brkt, Mtg, Rack, Four Bag	2	
6	103371102	Asm, Rack, Four Bag, W/tubes (includes items 7 through 24)	1	
7	1013509	Screw, 1/4-20 X 1.75 Hx Hd Cap	1	
8	1014306	Washer, 1/4" Type B Flat	1	
9	1017271	Finishing Plug	10	
10	1017284	Strap Buckle	2	
11	1017299	Bag Strap Limo	1	
12	1017672	Bag Rack Support	1	
13	102242401	Nut - Nylon Insert W/cap	7	
14	102579601	L2 Bag Hook	2	
15	102579801	Putter Tube Weldment Rh	1	
16	102579802	Putter Tube Weldment Lh	1	
17	103370801	Weldment, Rack, Four Bag	1	
18	103380301	Cover, Bagrack Slat, Vinyl	2	
19	1606	Rivet, 3/16 X .500 Alum Pop	4	
20	1703	Screw, 1/4-20 X 1.50 Hx Hd Cap	2	
21	183	Washer, #10 Type A Flat	4	
22	324	Screw, 1/4-20 X 2.50 Hx Hd Cap	2	
23	332	Washer, 1/4 Type A Narrow Flat	11	
24	7973	Rivet, 3/16 X .400 Blind	4	
25	1241	Washer, 5/16 Type A Flat	6	
26	332	Washer, 1/4 Type A Narrow Flat	4	
27	343	Screw, 1/4-20 X 3.00 Hx Hd Cap	2	
28	7473	Locknut, 5/16-18 Nylon Insert	4	
29	8233	Locknut, 1/4-20 Nylon Insert	2	
30	8963	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	

1

G

E

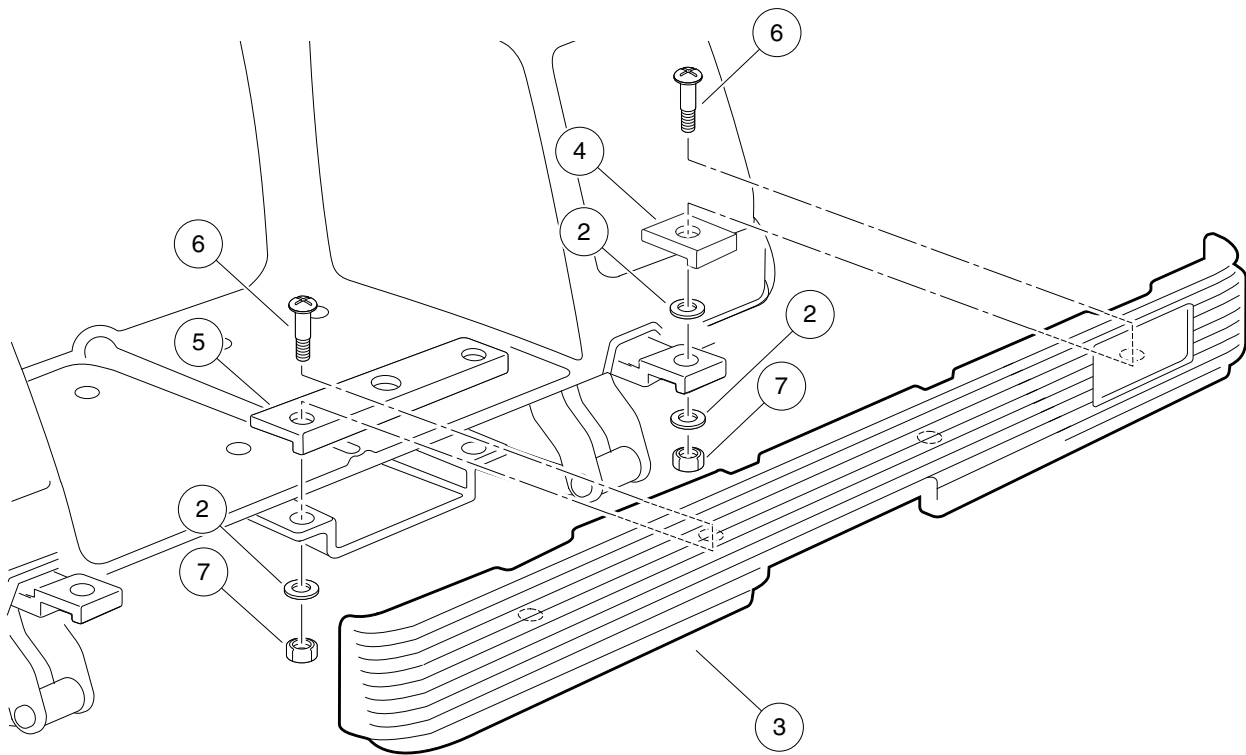

000666-001

REAR BUMPER

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1017079	Kit, Rear Bumper (includes items 2 through 7)	1	
2	1011697	Washer, 5/16 Flat	6	
3	1016379	Bumper, Rear	1	
4	1016874	Plate, Bumper Mounting, Short	2	
5	1016875	Plate, Bumper Mounting, Long	1	
6	1016876	Bolt, 3/8 Shoulder	4	
7	7473	Locknut, 5/16-18 Nylon Insert	4	
Note: Item 4 not used in all applications.				

1

G

E

WHEELS AND TIRES

2


G

E

2

G


E

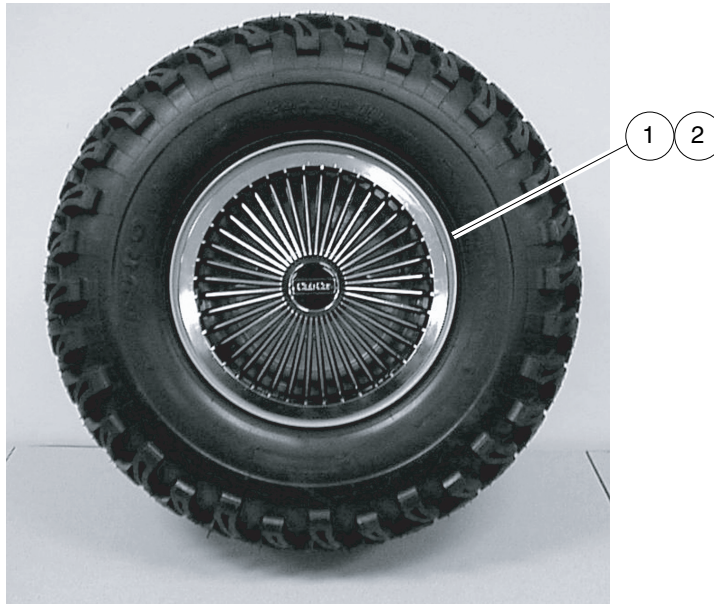

000780-001

WHEEL COVERS

ITEM	PART NO.	DESCRIPTION	QTY	2
1	AM10839	1 2 3 4 Wheel Cover, 10" Chrome (pair of 2)	2	G
2	AM10840	Wheel Cover, 10" Gold (pair of 2)	2	E

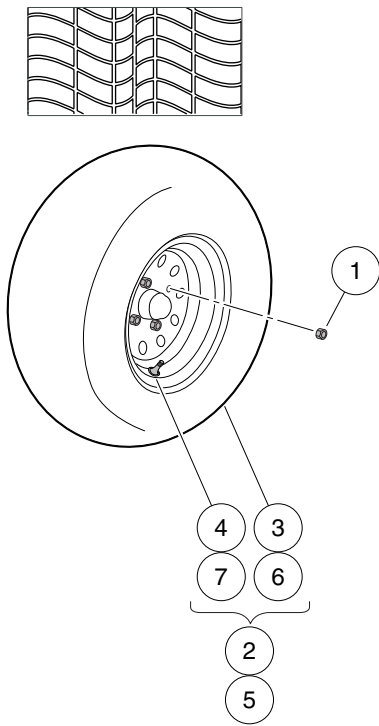

000737-001

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	1010984	.500-20 Unf Lug Nut	16	E
2	102979201	Asm, Wheel/tire, 10" Rim, Wh (includes items 3 and 4)	4	
3	102556701	Tire, Pro Tour, 205-50 X 10	1	
4	7310	Valve Stem	1	
5	102979202	Asm, Wheel/tire, 10" Rim, Be (includes items 6 and 7)	4	
6	102556701	Tire, Pro Tour, 205-50 X 10	1	
7	7310	Valve Stem	1	

2

G

E

DECALS

3

G

E

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Front Seat: Two (2) persons maximum.
- Rear Seat: Three (3) persons maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 103327401

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place Forward/Reverse switch in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- When stopped, park brake will be applied automatically.
- Place Forward/Reverse switch in NEUTRAL (N) position.
- Turn key OFF and remove key when not in use.

BRAKE CONTROL

- Brake control regulates maximum speed.
- Operator must apply brake to reduce speed as required.
- System is activated only when Mode switch is in the RUN position.
- To tow this vehicle, TOW Mode must be activated.
- See Owner's Manual for TOW Mode operation instructions.
- Park Brake will be released when TOW Mode is activated.
- For overnight storage, the Mode switch must be in the STORAGE position.

CCI 103325201

1 OFF | ON

2 F
N
R

3

4

5

6

⚠ WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle when moving.
- Hold on to seat handle or handrail at all times.
- Front Seat: Two (2) persons maximum.
- Rear Seat: Three (3) persons maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCI 103327501

NOTICE
Vehicle Alert Indications


- Beeping Alarm - Indicates vehicle movement while parked.
- Continuous Alarm - Indicates Reverse direction is selected.
- Lamp Flashing - Brake system malfunction. Return for maintenance.
- Lamp Flashing With Continuous Alarm - Brake system malfunction. Maintenance required. Do not operate or tow.
- Lamp On With Beeping Alarm - Tow mode engaged and park brake released. Return to Run or Storage mode.

CCI 103325301

000813-001

SAFETY DECALS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	101825101	Decal, Off/On	1	
2	103210301	Decal, Forward/Reverse, Electric	1	
3	103325201	Decal, Operating Instr, Ab	1	
4	103325301	Decal, Alert Indications, Ab	1	
5	N/A	Decal, Warning, Dash	1	
6	103327501	Decal, Warning, Pass	1	

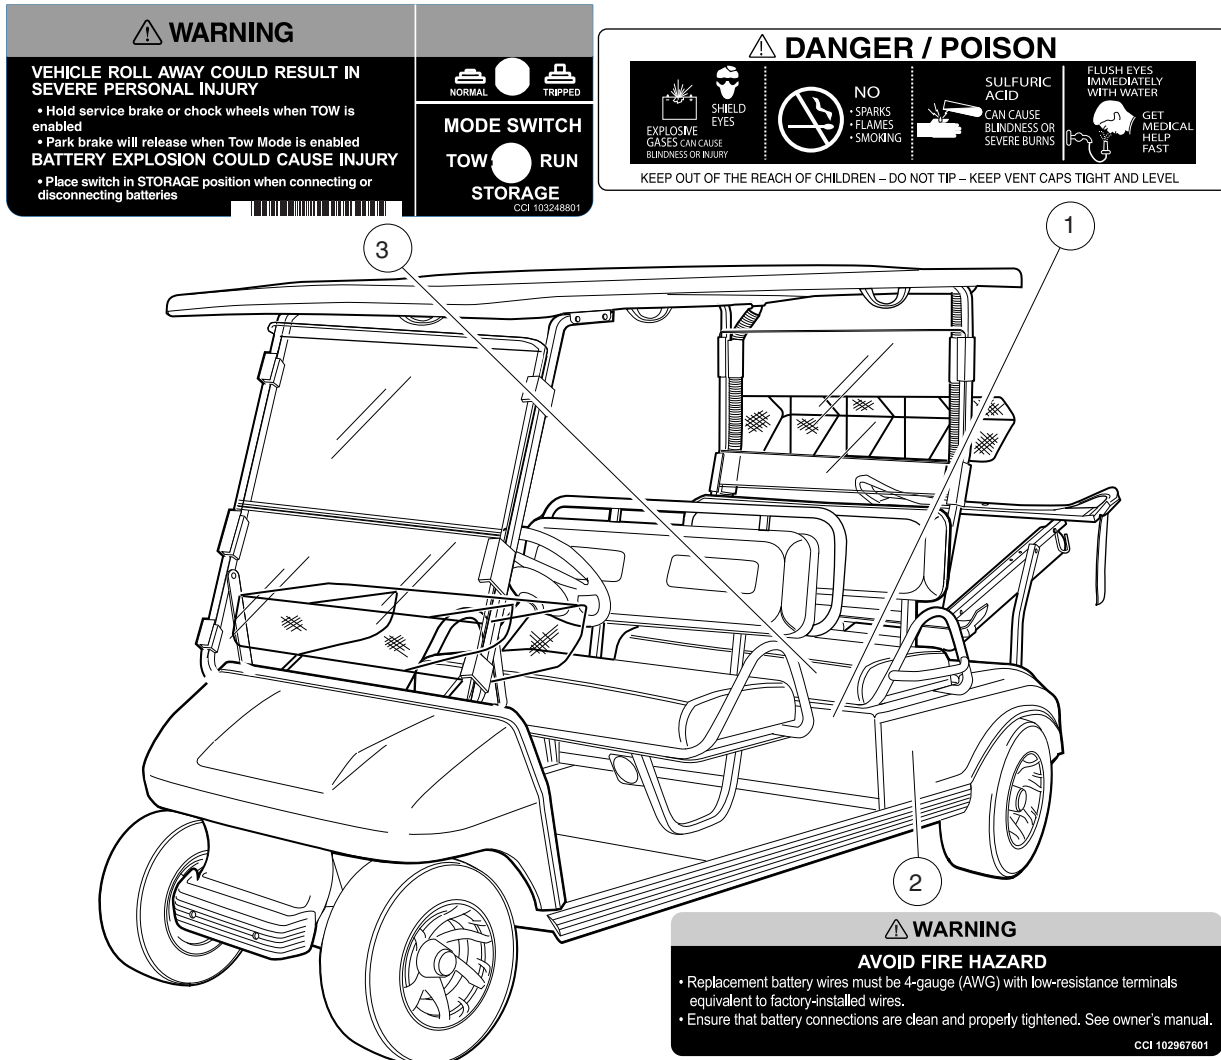

000814-001

SAFETY DECALS – ELECTRIC VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	1013677	1 2 3 4 Decal, Battery Danger	1	
2	102967601	Decal, Warning, 4 Gauge Wire	1	
3	103248801	Decal, Stow Switch, Elec	1	

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Front Seat: Two (2) persons maximum.
- Rear Seat: Three (3) persons maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 103327401

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place Forward/Reverse switch in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- When stopped, park brake will be applied automatically.
- Place Forward/Reverse switch in NEUTRAL (N) position.
- Turn key OFF and remove key when not in use.

BRAKE CONTROL

- Brake control regulates maximum speed.
- Operator must apply brake to reduce speed as required.
- System is activated only when Mode switch is in the RUN position.
- To tow this vehicle, TOW Mode must be activated.
- See Owner's Manual for TOW Mode operation instructions.
- Park Brake will be released when TOW Mode is activated.
- For overnight storage, the Mode switch must be in the STORAGE position.

CCI 103325201

OFF | ON

⚠ WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle when moving.
- Hold on to seat handle or handrail at all times.
- Front Seat: Two (2) persons maximum.
- Rear Seat: Three (3) persons maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCI 103327501

NOTICE

Vehicle Alert Indications


- Beeping Alarm - Indicates vehicle movement while parked.
- Continuous Alarm - Indicates Reverse direction is selected.
- Lamp Flashing - Brake system malfunction. Return for maintenance.
- Lamp Flashing With Continuous Alarm - Brake system malfunction. Maintenance required. Do not operate or tow.
- Lamp On With Beeping Alarm - Tow mode engaged and park brake released. Return to Run or Storage mode.

CCI 103326301

000815-001

SAFETY DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	101825101	Decal, Off/On	1	
2	103210201	Decal, Forward/Reverse, Gas	1	
3	103325201	Decal, Operating Instr, Ab	1	
4	103325301	Decal, Alert Indications, Ab	1	
5	N/A	Decal, Warning, Dash	1	
6	103327501	Decal, Warning, Pass	4	

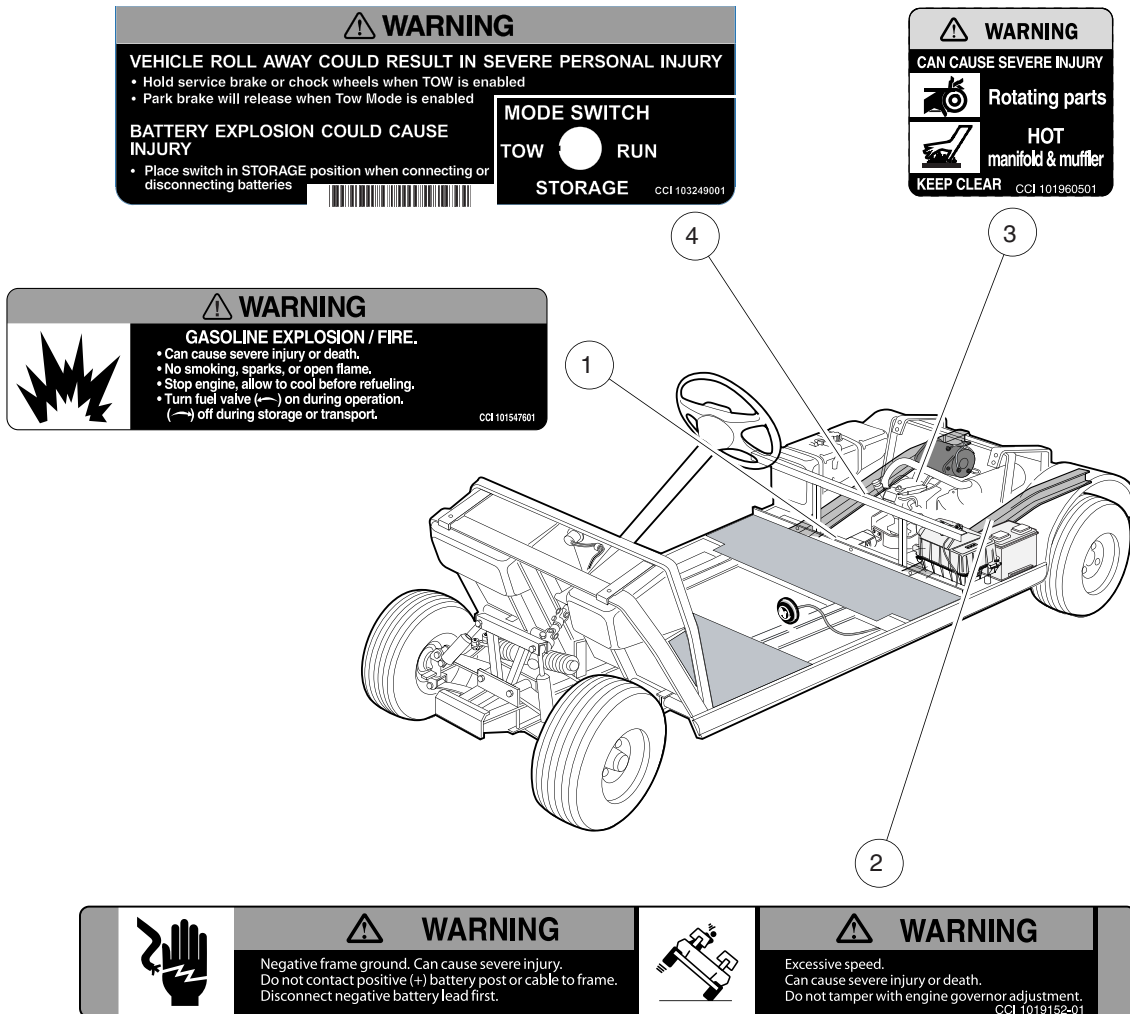

000816-001


SAFETY DECALS – GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	101547601	Decal, Gasoline Explosion/Fire Warning	1	
2	101915201	Decal, Frame Ground and Governor Warning	1	
3	101960501	Decal, Rotating Parts/Hot Manifold	1	
4	103249001	Decal, Stow Switch, Gas	1	

3

G

E

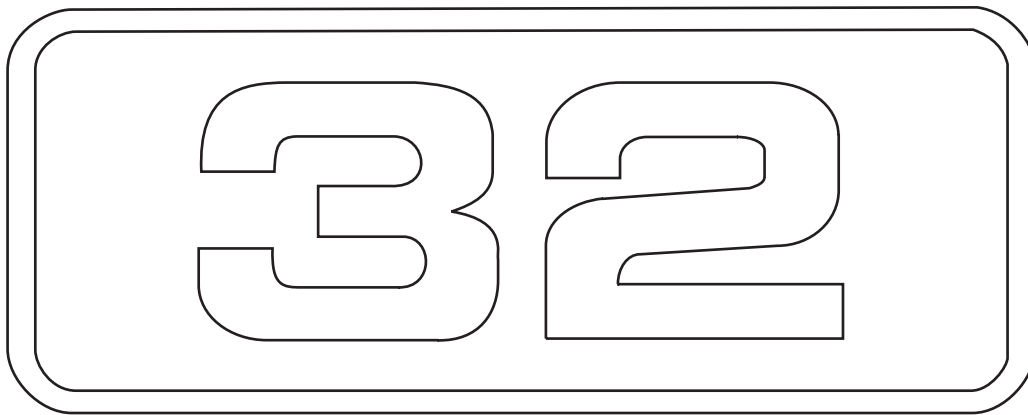

000779-001

FLEET NUMBERING DECALS

ITEM	PART NO.	DESCRIPTION	QTY
1	101217301	1 2 3 4 Number Decal 1 Ea B/g Loose	1

3

G

E

3

G


E

BRAKE, PEDAL, AND CABLE ASSEMBLIES

4

G


E

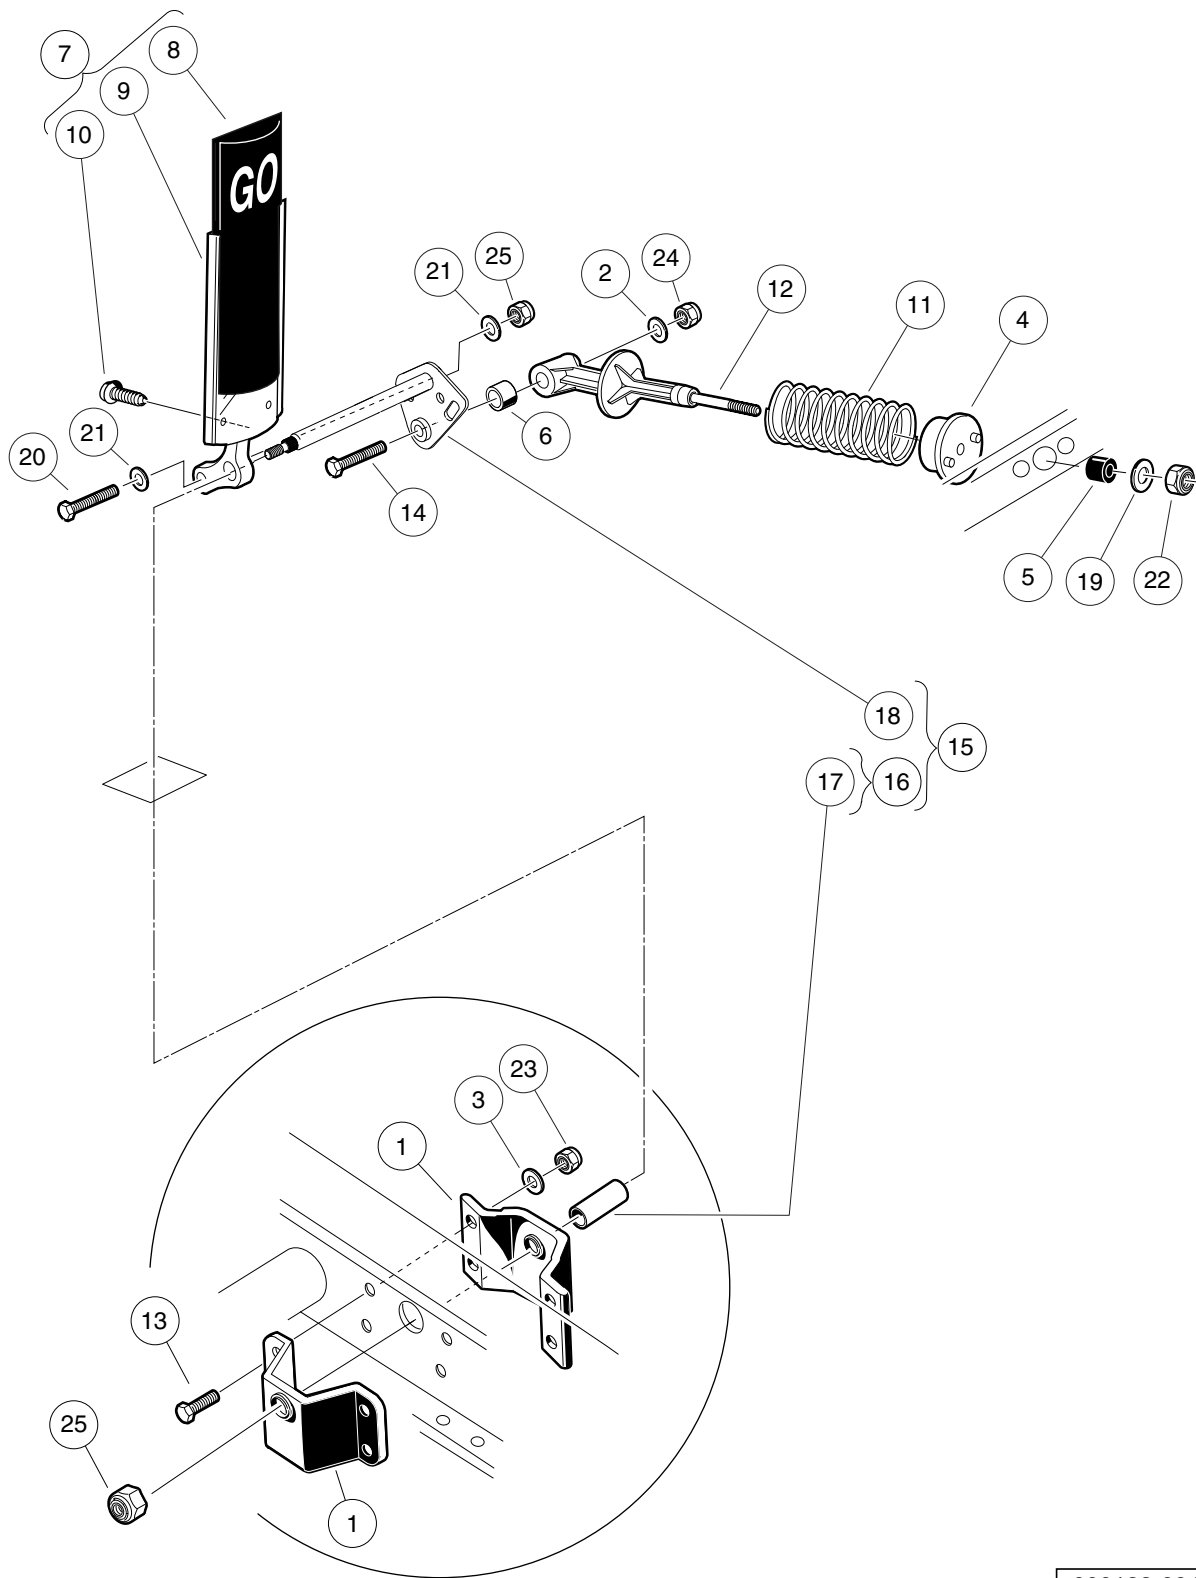

000188-004

ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	1011694	Accelerator Bracket and Bearing Assembly	2	
2	1011931	Washer, 1/4 Flat	1	
3	1014007	Washer, 1/4 Flat	4	
4	1017378	Cup, Spring	1	
5	1017380	Bumper, Spring Return	1	
6	1017424	Bearing, Pivot Support	1	
7	1017696	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	101817401	Retainer, Spring	1	
13	101861901	Screw, 1/4-20 X 1.125 Hex Cap	4	
14	101862001	Screw, 1/4-20 X 1.500 Flange	1	
15	102026001	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1	
16	1011700	Spacer Assembly (includes item 17)	1	
17	101919801	Spacer, Accelerator	1	
18	N/A	Pivot Rod Weldment	1	
19	1241	Washer, 5/16 Type A Flat	1	
20	1624	Screw, 3/8-16 X 1.50 Hex-Head Cap	1	
21	334	Washer, 3/8 Type A Flat	2	
22	7473	Locknut, 5/16-18 Nylon Insert	1	
23	8233	Locknut, 1/4-20 Nylon Insert	4	
24	8717	Locknut, 1/4-28 Nylon Insert	1	
25	8754	Locknut, 3/8-16 Hex	2	

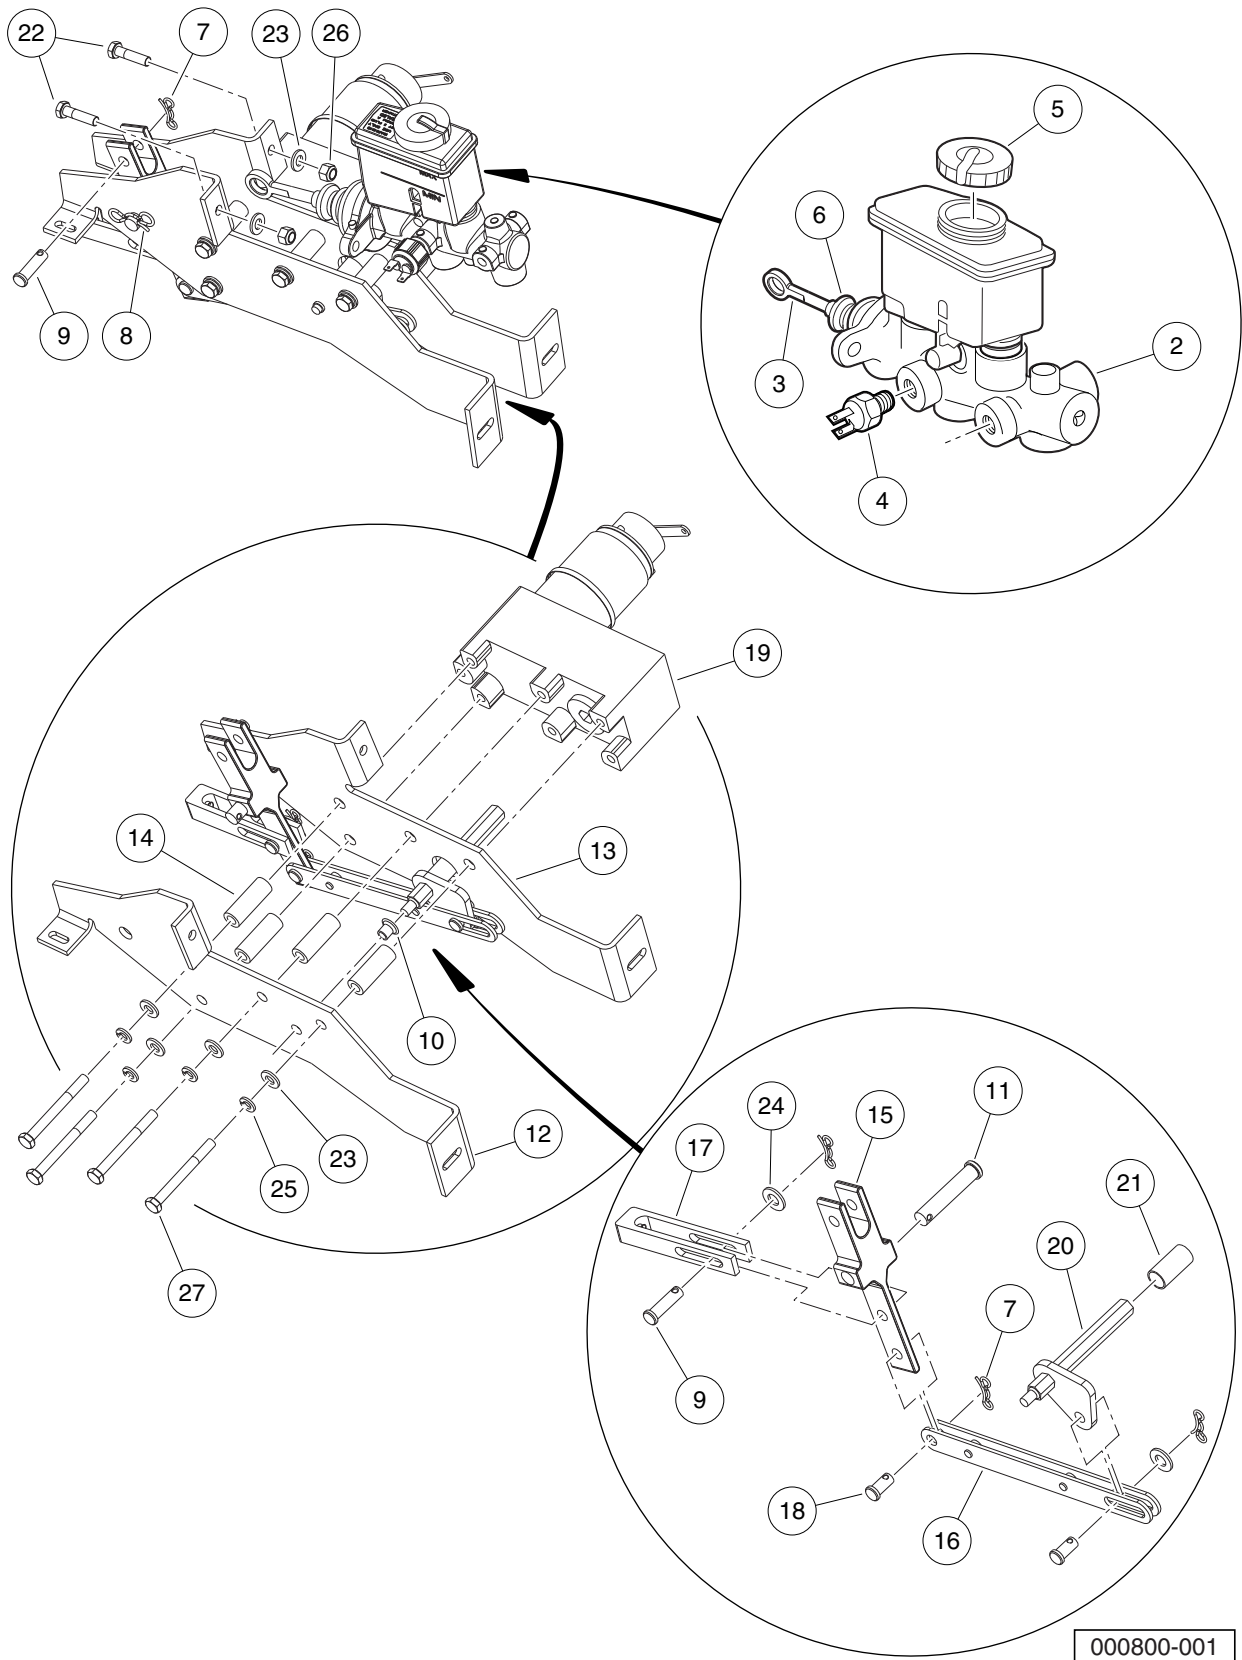

000800-001

AUTO BRAKE MOTOR, MASTER CYLINDER, AND BELL CRANK


ITEM	PART NO.	DESCRIPTION	QTY	4	G	E
		1 2 3 4				
1	103195501	Asm, Auto Svc Brake (includes items 2 through 27)	1			
2	102033201	Master Cylinder (includes items 3 through 6)	1			
3	102051201	Push Rod	1			
4	102051301	Pressure Switch	1			
5	102051401	Filler Cap Asm	1			
6	8574	Master Cylinder Boot	1			
7	102292801	Pin, Bow Tie Locking - .072	4			
8	102323101	Pin, Bow Tie Locking	1			
9	102323201	Pin, 3/8 X 1-5/16 Clevis	2			
10	102442901	Bushing, Greaseless	1			
11	102519001	Pin, 1/2 X 2-1/2 Clevis	1			
12	102976201	Support, Autobrake, L	1			
13	102976301	Support, Autobrake, R	1			
14	102976401	Support, Autobrake, Spacer	4			
15	102976501	Bellcrank, Autobrake, Square	1			
16	102976601	Rod, Push, Motor, Autobrake	1			
17	102976701	Clevis, Bellcrank, Autobrake	1			
18	103020601	3/8 X .75 Clevis Pin	2			
19	103198701	Motor, 12vdc, Gearhead W/brk	1			
20	103264901	Bellcrank, Rod, Weld Asm	1			
21	103318501	Spacer, Tube, 11/16" Od	1			
22	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	2			
23	1241	Washer, 5/16 Type A Flat	6			
24	334	Washer, 3/8 Type A Flat	2			
25	7174	Lockwasher, 5/16 Split	4			
26	7473	Locknut, 5/16-18 Nylon Insert	2			
27	8915	Screw, 5/16-18 X 3.0 Hx Hd Cap	4			

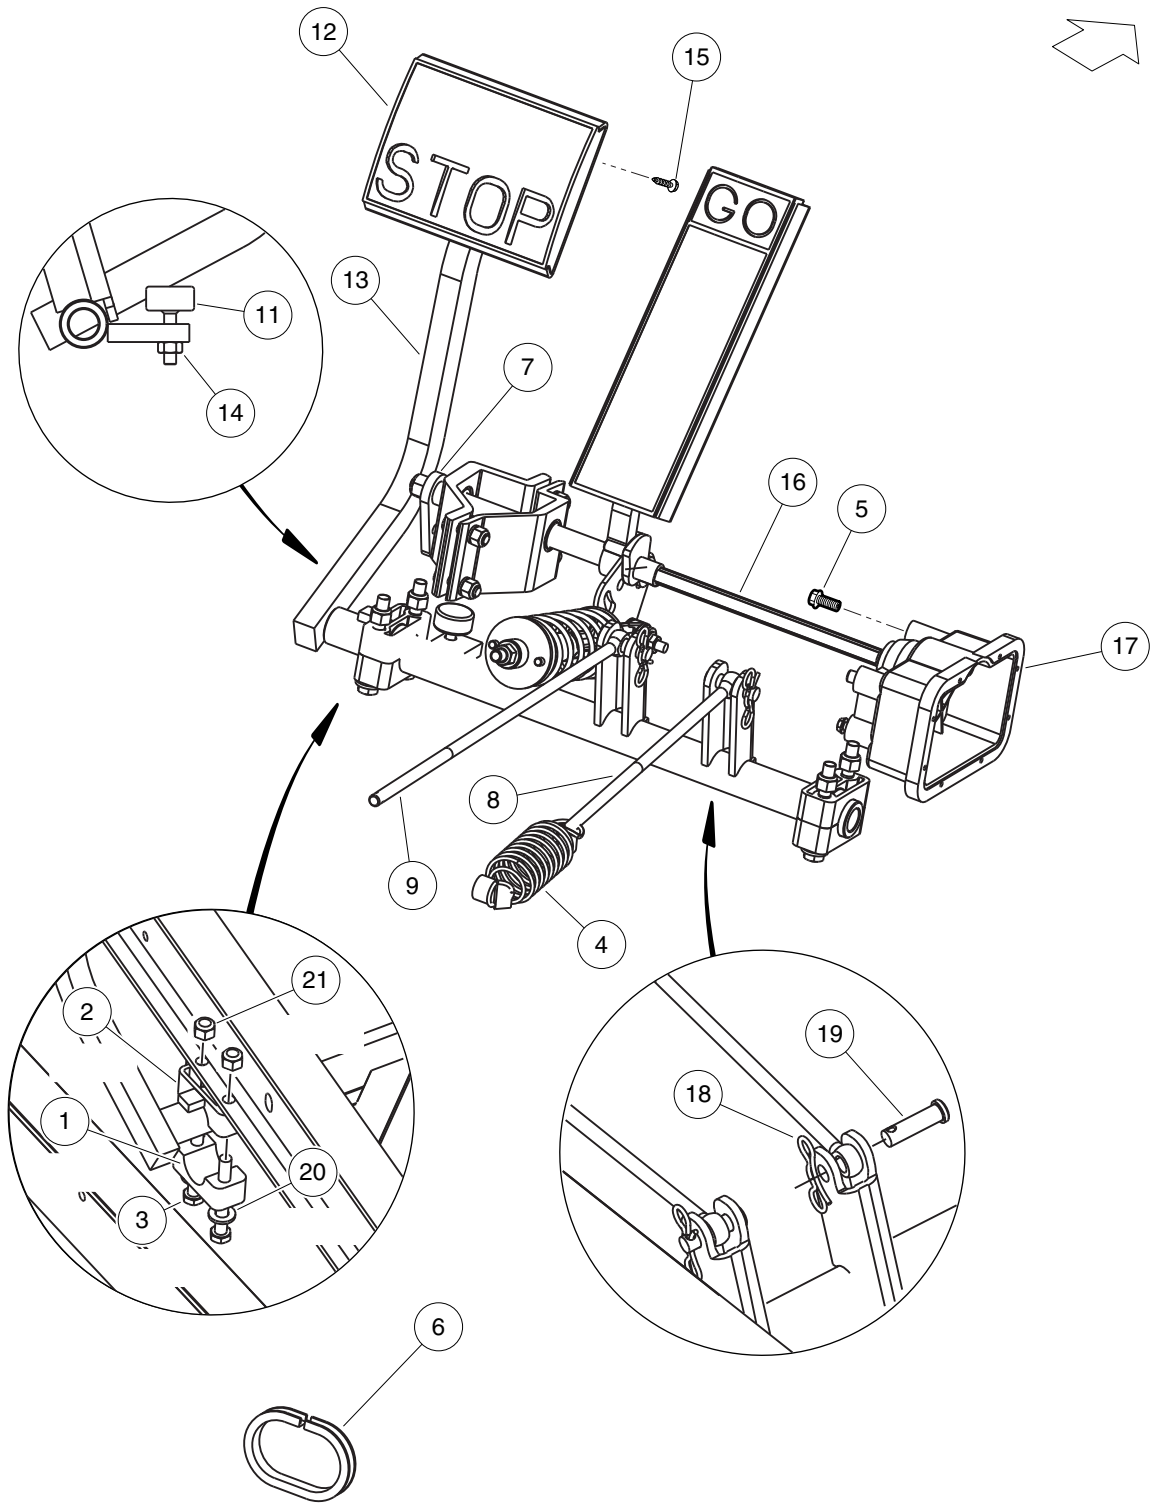4**G****E**

000798-001

BRAKE PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	1010811	Mount-brake (b)	2	E
2	1010812	Mount, A-side Brake	2	
3	1010921	Screw, 5/16-18 X 2.50 Hex Cap	4	
4	1013531	Spring, Brake Return	1	
5	1015752	Screw, #12-16 X 0.625 Hi-Lo	2	
6	101806005	I-beam Grommet - 6.75	3	
7	101916901	Ratchet, Support	1	
8	101953101	Rod, Equalizer, 8.91"	1	
9	101953105	Rod, Equalizer, 13.30"	1	
10	102028903	Brake Pedal Asm (includes items 11 through 15)	1	
11	1010878	Bumper, Rubber	1	
12	102028601	Pad, Hydraulic Brake Pedal	1	
13	N/A	Brake Pedal Weld Asm	1	
14	1028	Nut, 1/4-20 Hex	1	
15	7716	Screw, #10-16 Type AB, Sheet Metal	4	
16	102101001	Bar, Drive, Cast	1	
17	102101101	MCOR	1	
18	102323101	Pin, Bow Tie Locking	2	
19	102323201	Pin, 3/8 X 1-5/16 Clevis	2	
20	1241	Washer, 5/16 Type A Flat	4	
21	7473	Locknut, 5/16-18 Nylon Insert	4	

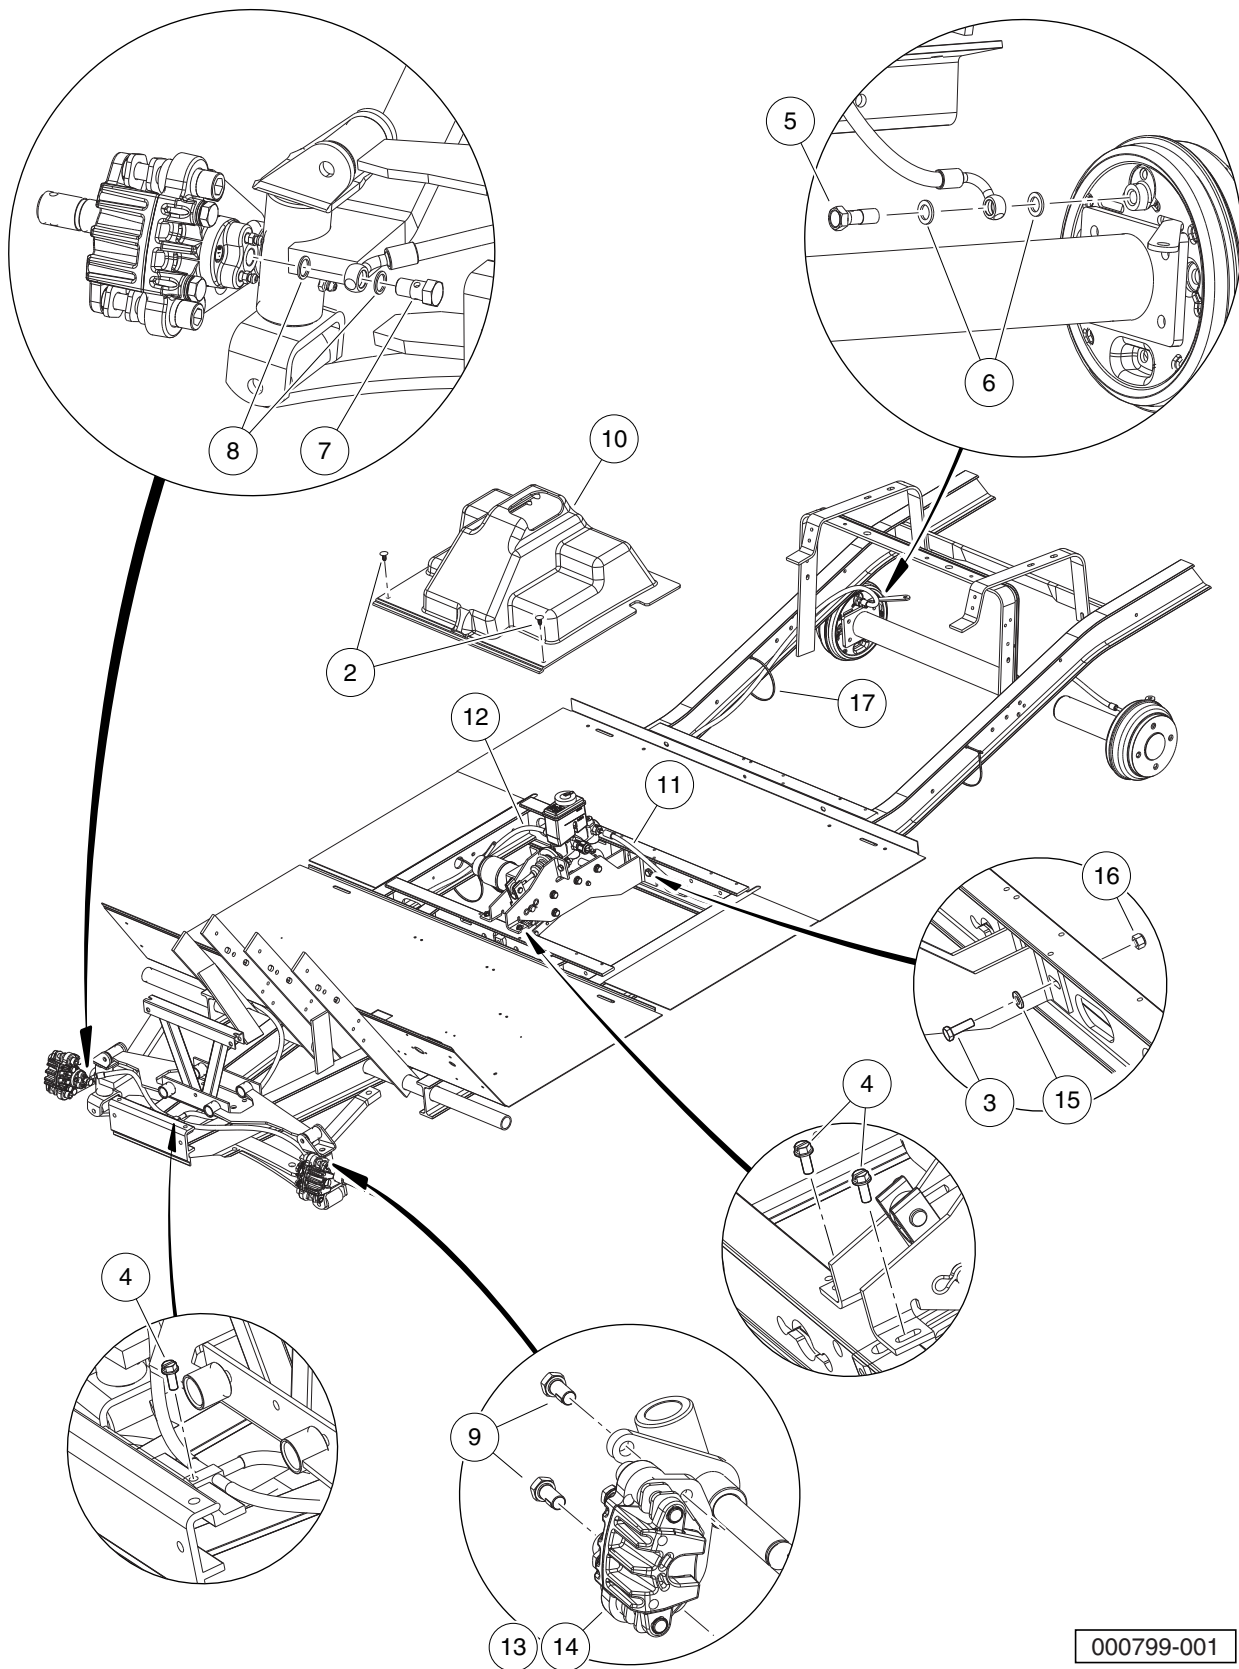4**G****E**

000799-001


BRAKE CABLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	N/A	Installation, Service Brake (includes items 2 through 17)	1	E
2	1010434	Barrel - Plastic	2	
3	1010934	Screw, 5/16-18 X 1.00 Hex Cap	2	
4	1012285	Screw, 1/4 X 0.625 Hex-Head	3	
5	102044401	Bolt, Banjo	2	
6	102045501	Copper Washer	4	
7	102488001	Bolt, Banjo, M10x1x19	2	
8	102491601	Washer, Copper, M10 Crush	4	
9	102493301	Bolt Flange Head, 3/8-24x.750 with Loctite	4	
10	103190401	Cover- Under Seat	1	
11	103194701	Assembly, Brakeline, Front	1	
12	103194801	Brakeline, Rear Common	2	
13	103263101	Caliper, Front, Autobrake	2	
14	103333701	Service Kit, Brake Pad, Sc2c	1	
15	1241	Washer, 5/16 Type A Flat	2	
16	7473	Locknut, 5/16-18 Nylon Insert	2	
17	8990	Tie Wrap, 8" Nylon	6	

4

G


E

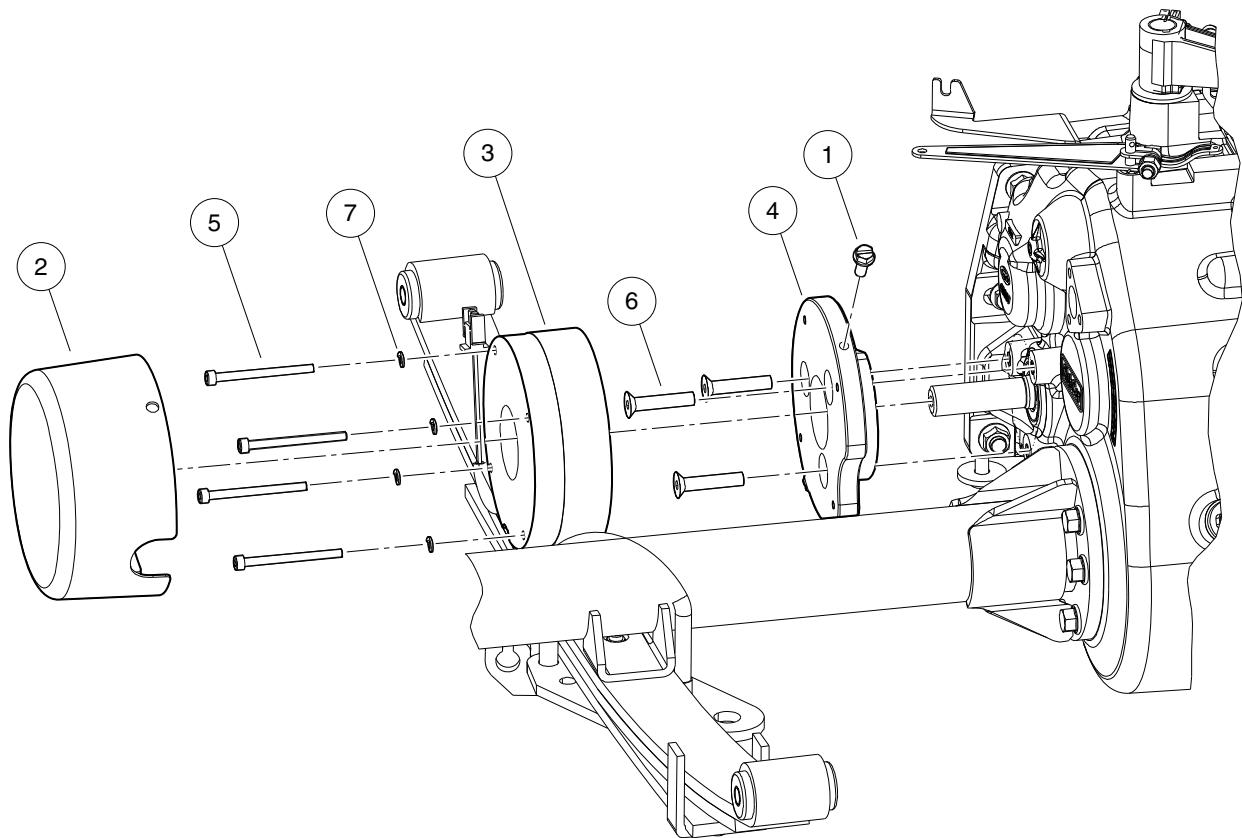

000806-001

PARK BRAKE

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	1012285	Screw, 1/4 X 0.625 Hex-Head	2	E
2	103311101	Cover, Brake, Emag	1	
3	103334001	Brake, Park, Emag	1	
4	103334101	Spacer, Emag Brake, Universal	1	
5	103354501	Bolt, M5 X 0.8 X 60 Soc-hd	4	
6	103354601	Bolt, M8 X 1.25 X 40 Flt Hx Hd	3	
7	103358801	Washer, M5 Helical Spring	4	

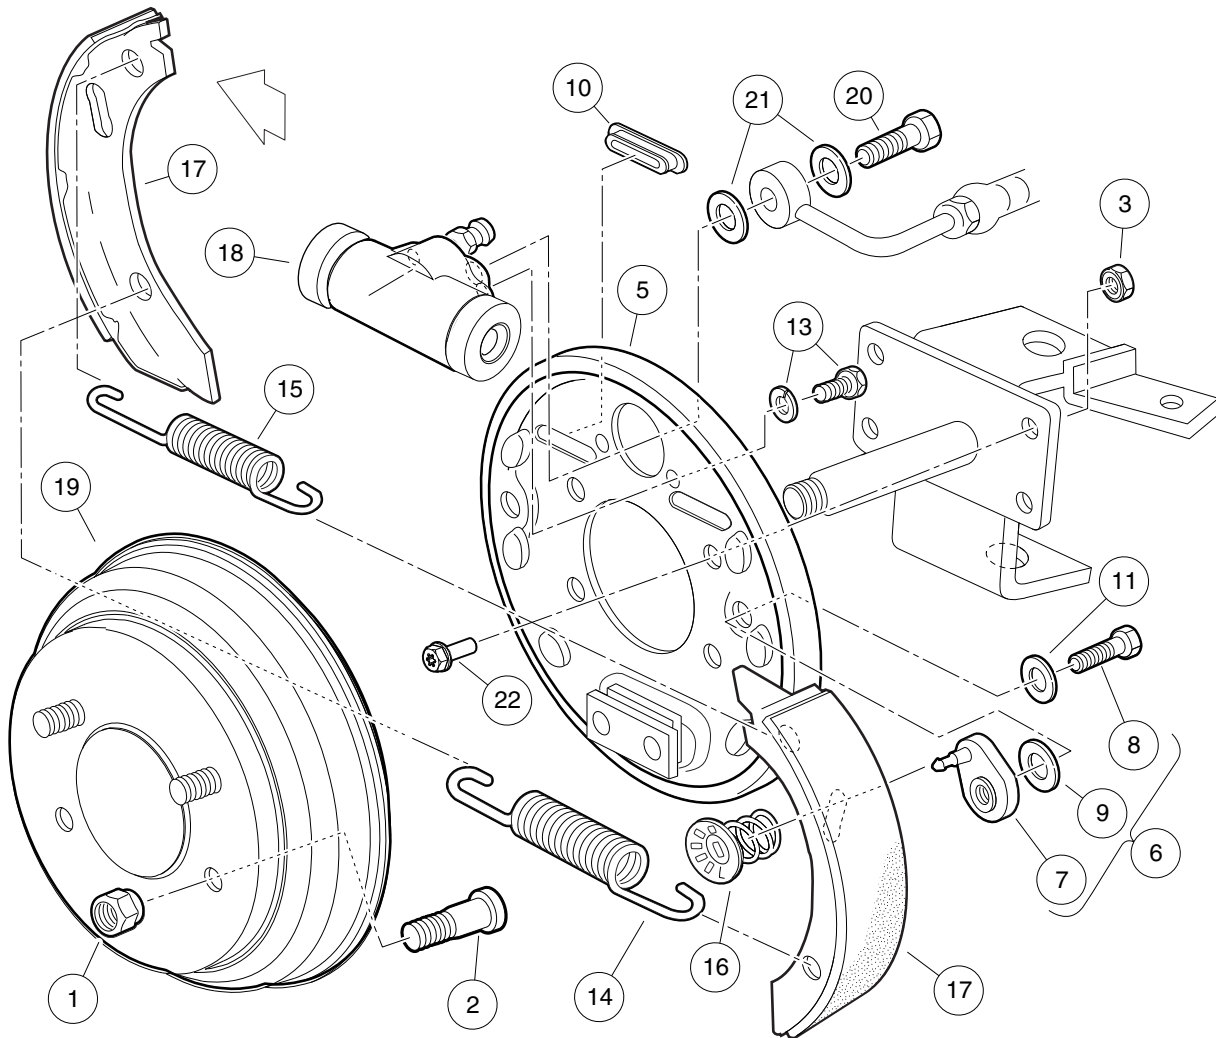

000807-001

REAR BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010984	.500-20 Unf Lug Nut	8
2	1013787	Lug Stud	8
3	1013924	Nut, 5/16-24 Hex Head Cone	8
4	102033301	Cluster, Front Brake (includes items 5 through 18)	2
5	102049401	Backing Plate Asm	1
6	102049601	Kit, Axle Adjuster (includes items 7 through 11)	1
7	102049501	Adjuster	4
8	102049901	Bolt, 1/4-28 UNF X .31	4
9	102050001	Washer	4
10	102050101	Dust Cover	4
11	N/A	Washer, 1/4 Flat	4
12	102049701	Kit, Axle Hardware (includes items 13 through 16)	1
13	102050401	Bolt, Wheel Cylinder	2
14	102050501	Spring, Shoe To Shoe, Lower	1
15	102050601	Spring, Shoe To Shoe, Upper	1
16	102050701	Shoe Hold Down	2
17	102050201	Shoe Kit, Axle Set	1
18	102050301	Wheel Cylinder Assembly 0.625 Dia	1
19	102044101	Brake Drum	2
20	102044401	Bolt, Banjo	2
21	102045501	Copper Washer	4
22	103229601	Bolt, Brake Cluster Mnt, Hyd	8

4

G

E


4
G
E

STEERING AND FRONT AND REAR SUSPENSION

5

G

E

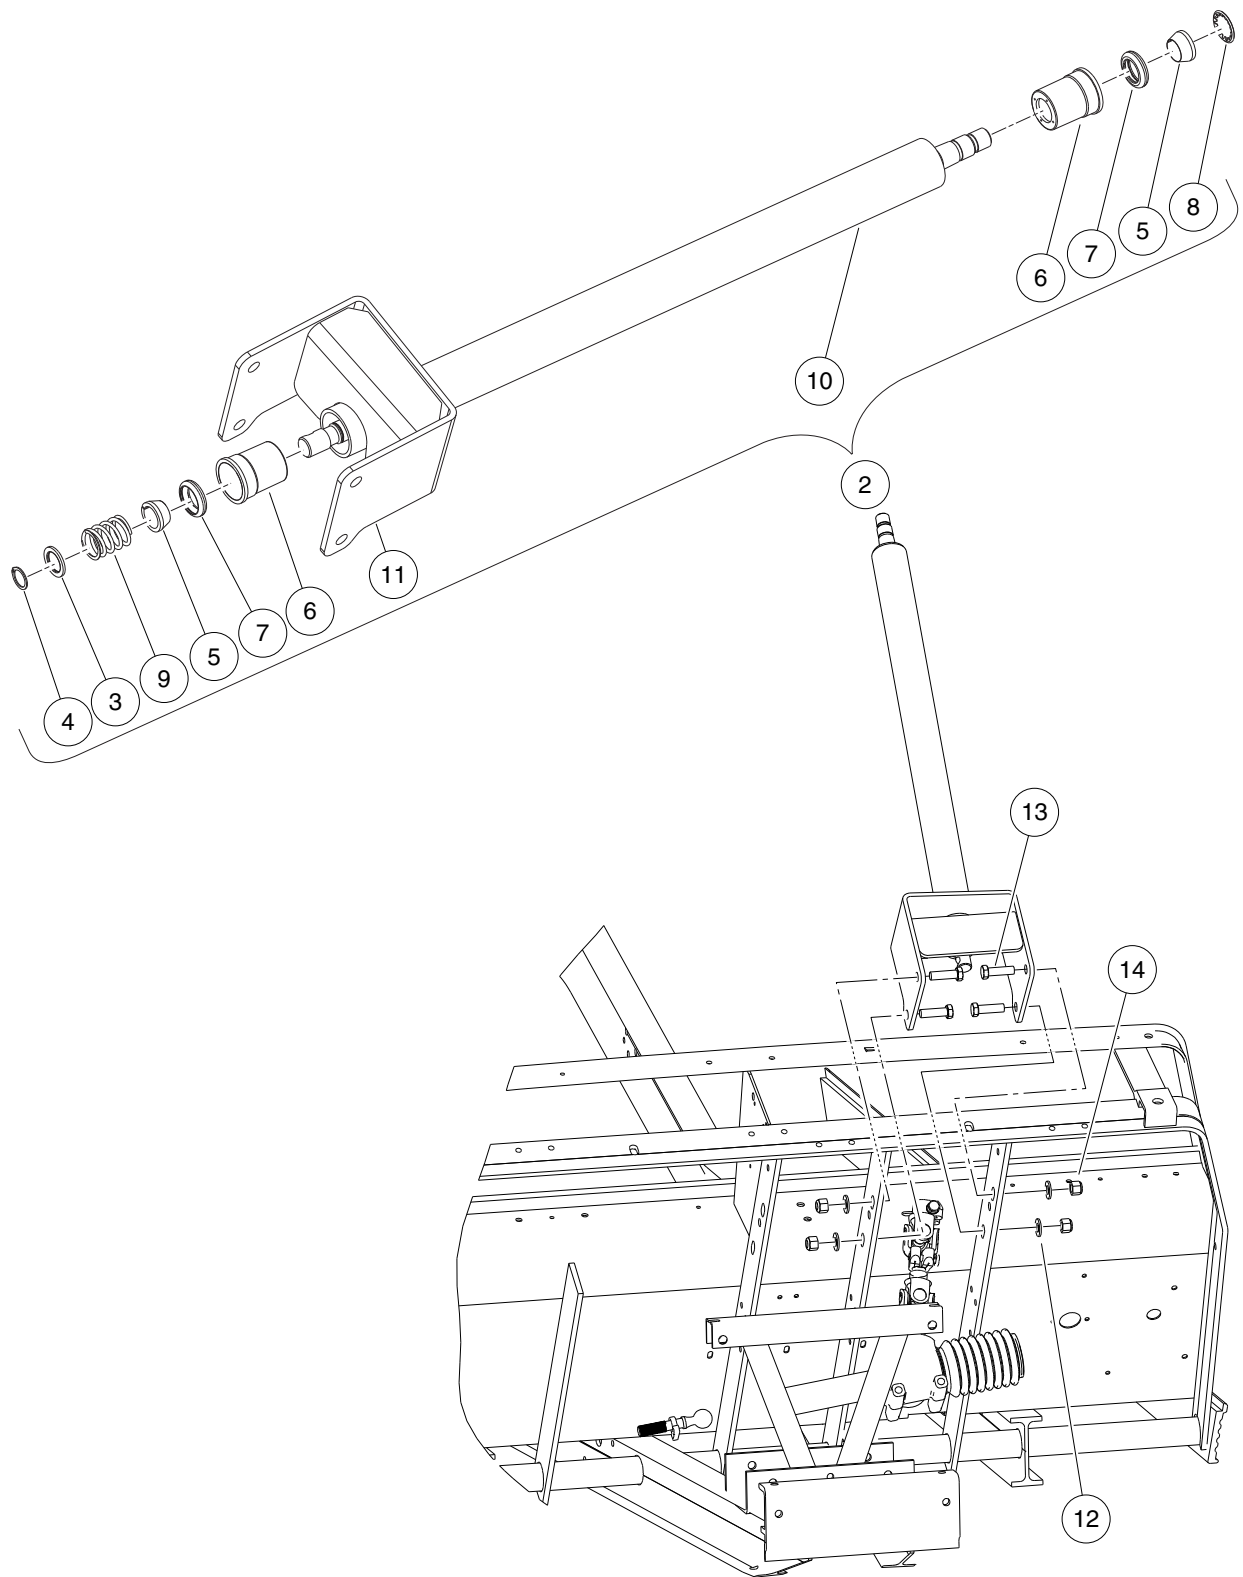

000753-001


STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	N/A	Instl, Steering Column (includes items 2 through 14)	1	
2	103232101	Assy, Steering Column, Short (includes items 3 through 11)	1	
3	1012604	Washer, 0.675 ID X 1.19 OD	1	
4	1012605	Ring, 0.579 Internal Retaining	1	
5	1014125	Wedge, Molded	2	
6	1014126	Seat, Plastic Bearing	2	
7	1014213	Bearing, Ball	2	
8	1014214	Ring, Retaining	1	
9	1014217	Spring, Steering Shaft	1	
10	N/A	Shaft, Steering, 667.8 Oal	1	
11	N/A	Weldment, Column, Short	1	
12	334	Washer, 3/8 Type A Flat	4	
13	705	Screw, Cap-hex Hd 3/8-16x1.25	4	
14	8754	Locknut, 3/8-16 Hex	4	

5

G

E

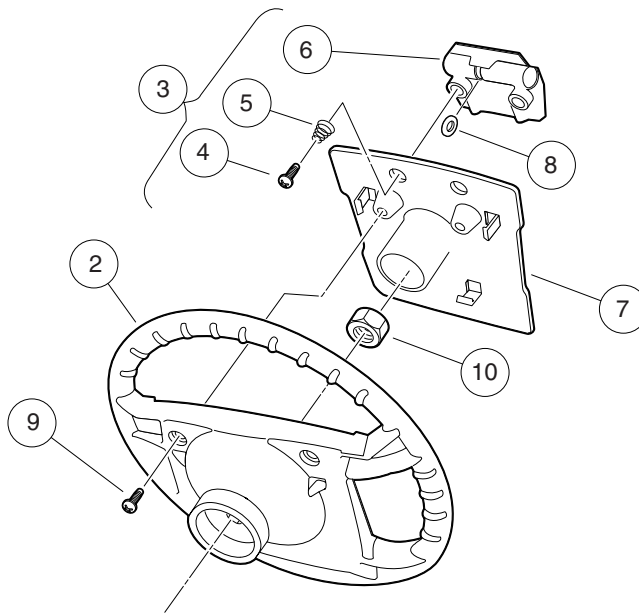


000471-002

STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Scorecard Holder (includes items 2 through 10)	1
2	1016156	Wheel, Steering	1
3	1016219	Plate, Scorecard (includes items 4 through 8)	1
4	1012565	Screw, #12 Phillips Round Head	2
5	1012566	Tapered Compression Spring	2
6	1016154	Clip, Scorecard	1
7	N/A	Plate, Score Card	1
8	N/A	Pencil Grip	1
9	1016663	Screw, #12-14 X 0.625	2
10	1017273	Nut, 5/8-18 Nylon Insert Jam	1


5
G
E

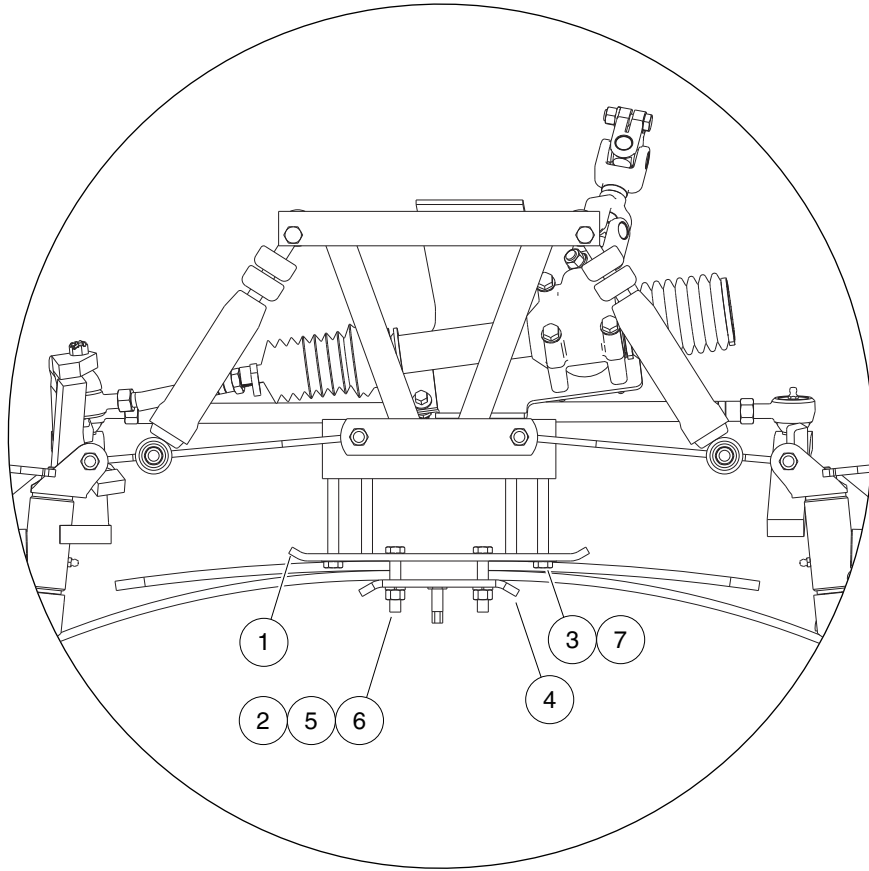

000754-001

FRONT SUSPENSION COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY	5
		1 2 3 4		G
1	1010124	Plate, Spring Mount	1	E
2	1010177	Bolt, 3/8-16 X 2.00 Hex Head	4	
3	1010200	Bolt, 3/8-16 X 4.25 Hex Head	4	
4	1014276	Plate, Front Spring Retainer	1	
5	357	Lockwasher, 3/8 Split	4	
6	706	Nut, Hex 3/8-16	4	
7	8754	Locknut, 3/8-16 Hex	4	

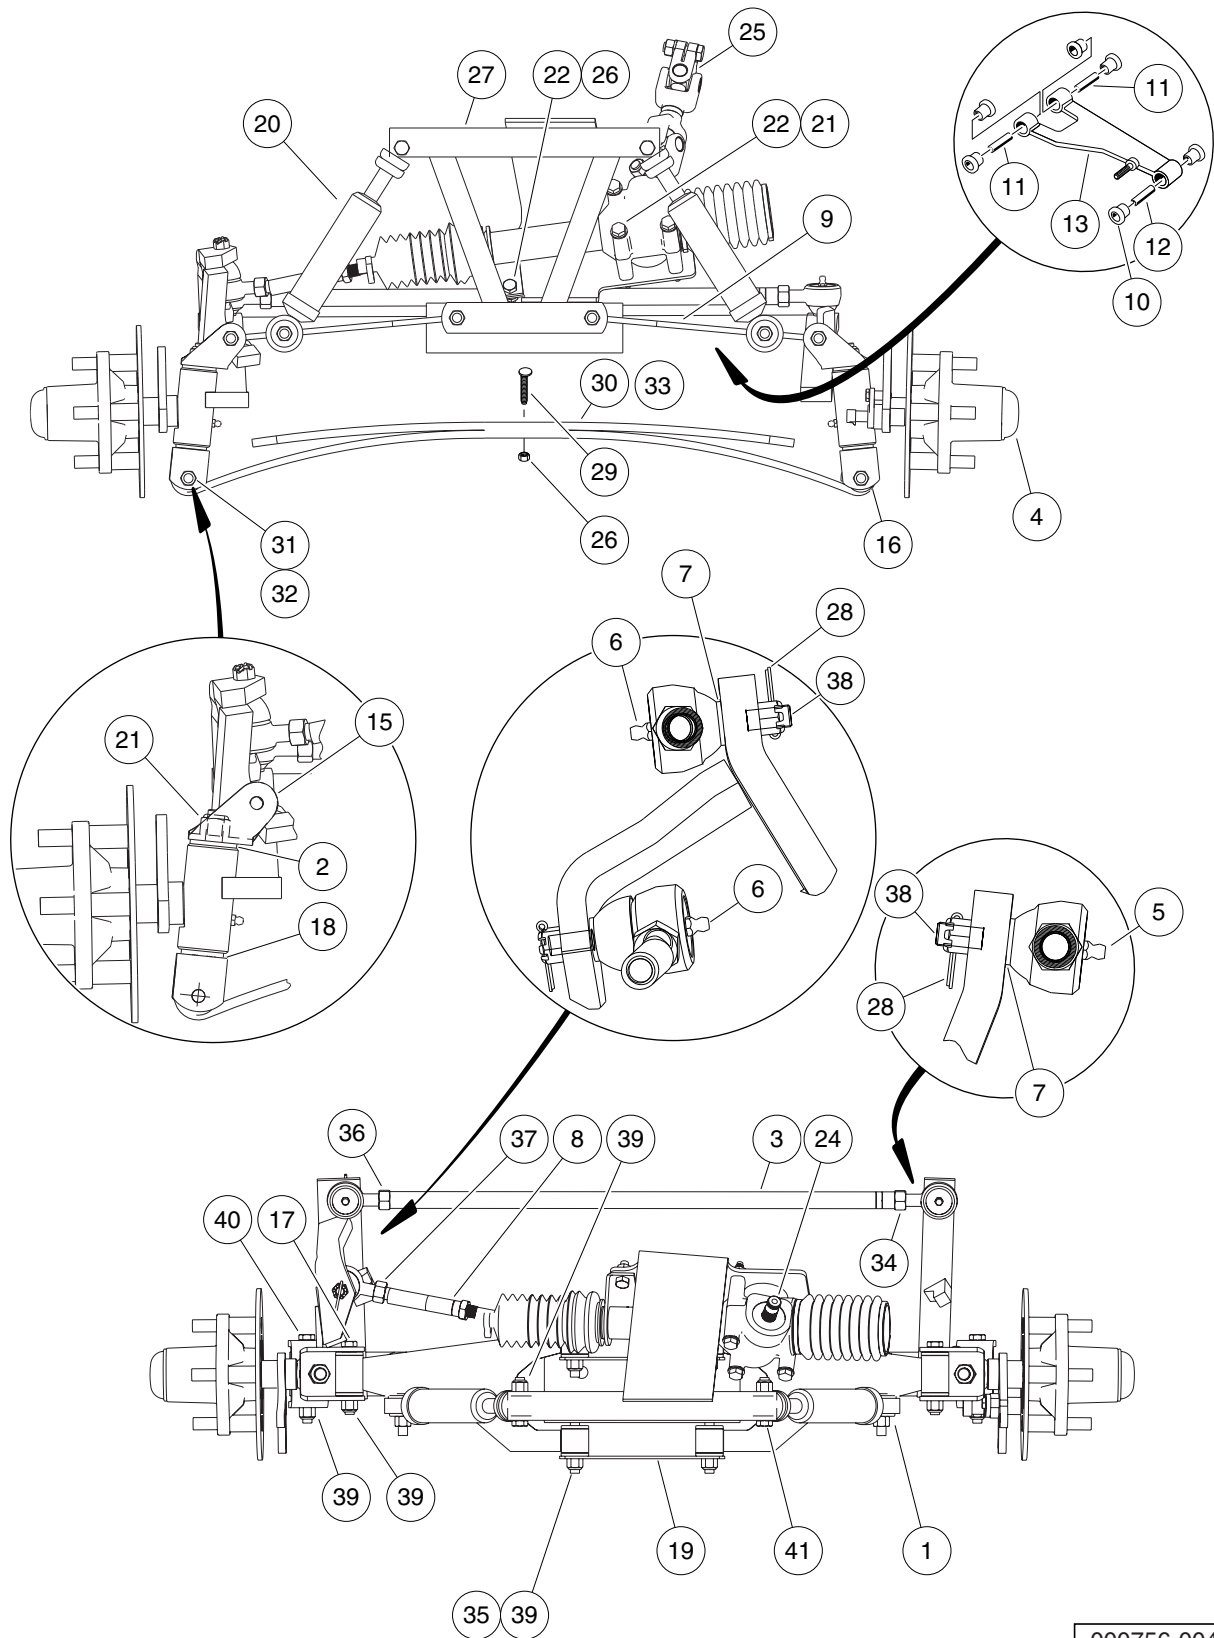5**G****E**

000756-004

FRONT SUSPENSION COMPONENTS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010138	Locknut, 3/8-16 Dimpled	2
2	1010150	Bearing, Thrust	2
3	101021902	Tie Rod 20.643" Lg	1
4	1011887	Dust Cover	2
5	1011893	Socket, RH Vertical	1
6	1011895	Socket, LH Vertical	2
7	1011930	Seal, Vertical Socket Dust	3
8	1012467	Link, Rack and Pinion Drag	1
9	1016353	Sub-Assembly, Delta A-Plate (includes items 10 through 13)	2
10	1016346	Bushing, Urethane	6
11	1016349	Sleeve, Delta Inner	2
12	1016350	Sleeve, Delta Outer	1
13	1016351	Delta A-Plate	1
14	N/A	Front Suspension Assembly	1
15	1016384	Clevis, Delta Upper	2
16	1016386	King Pin Assembly	2
17	1016387	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
18	1016389	Washer, 1.125 Od Wave	2
19	1017266	A-Plate Strap	2
20	101870602	Shock Absorber, Frnt, 2 Bumper	2
21	101903101	Locknut, 1/2-20 Nylon Insert	2
22	102298401	Nut,m8,all Metal Lock	5
23	102534201	Bolt - Fl Hd, M8 X 95	3
24	103233101	Rack, Steering, Modular	1
25	103234101	Steering, I-shaft, Mod Rack	1
26	103262201	Bolt Flg Blk, M8 X 25, Loctite	2
27	103264801	Weldment, Shock & Rack Mount	1
28	1035	Cotter Pin, 3/32 x 1	3
29	103507001	Eccentric Bolt Common	1
30	103628801	Spring Asm, Front, 2 Leaf (includes items 31 through 33)	1
31	1012303	Bushing, Steel	2
32	1015583	Bushing, Urethane	4
33	103502701	Spring, Front, 2 Leaf	1
34	1308	Nut, 1/2-20 Hex	1
35	2402	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
36	706	Nut, Hex 3/8-16	1
37	7555	Nut, 1/2-20 Hex, Left-Hand Thread	2
38	7602	Nut, 3/8-24 UNF Hex	3
39	8754	Locknut, 3/8-16 Hex	10
40	8755	Screw, 3/8-16 X 3.375 Hex Cap	2
41	8861	Bolt, 3/8-16 X 1.75 Hex	2

5
G
E

5

G


E

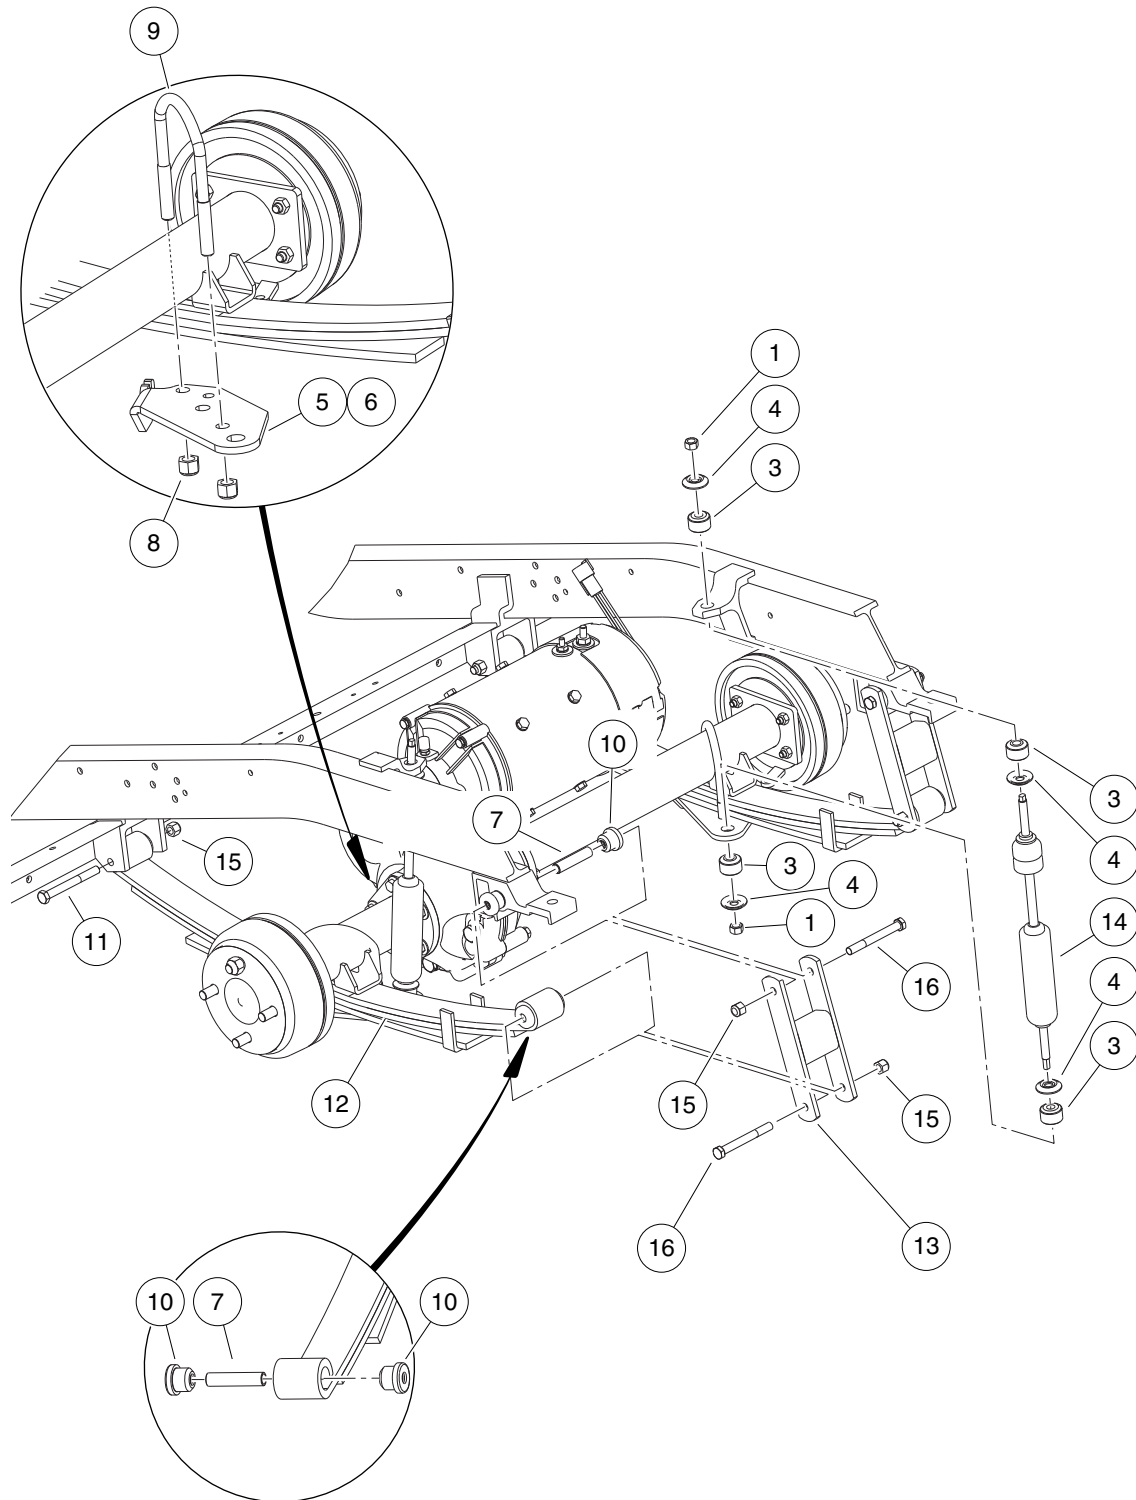

000759-001

REAR SUSPENSION – LEAF SPRINGS AND SHOCKS


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	1010145	Nut, 3/8-24 Hex	4	
2	1011415	Kit, Shock Absorber Cushion (includes items 3 and 4)	1	
3	1010142	Cushion, Shock Absorber	2	
4	1010144	Retainer, Shock Absorber Cushion	2	
5	1012181	Bracket, Shock Mounting, Right (Passenger)	1	
6	1012182	Bracket, Shock Mounting, Left (Driver)	1	
7	1012303	Bushing, Steel	6	
8	1014555	Locknut, 7/16-14 Nylon Hex	4	
9	1014902	U-Bolt	2	
10	1015583	Bushing, Urethane	12	
11	102066201	Screw, 3/8-16 X 3.50 Hex Cap	2	
12	102871801	Spring, Multi Leaf	2	
13	102917101	Weldment, Shackle	2	
14	103351101	Shock, Absorber, Utility	2	
15	8754	Locknut, 3/8-16 Hex	6	
16	8755	Screw, 3/8-16 X 3.375 Hex Cap	4	

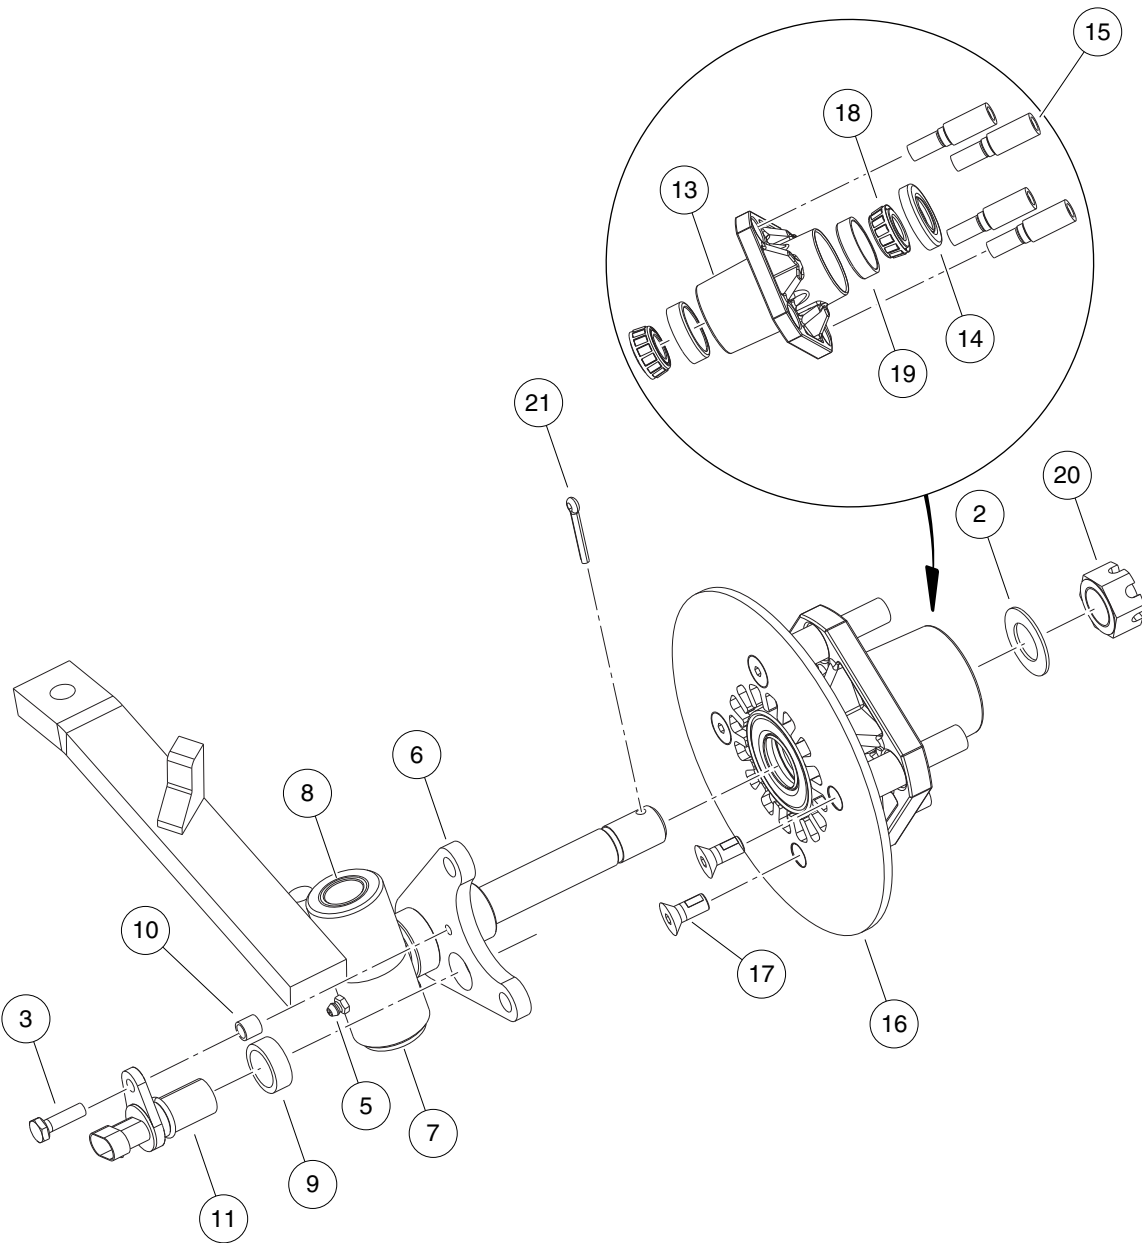

000804-001

SPINDLE AND HUB – DRIVER SIDE

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	N/A	Asm, Spindle-hub, Lh, Db (includes items 2 through 21)	1	
2	1010005	Washer, 3/4 Flat	1	
3	1015521	Screw, 1/4-20 X .88 Hex Hd Cap	1	
4	103194101	Spindle, Disc Asm Left (includes items 5 through 8)	1	
5	1015597	Fitting, 1/4-28 Thread-Forming Grease	1	
6	103193901	Asm, Spindle -lh Disc	1	
7	7048	Bushing, Flanged Bronze	1	
8	8067	Bushing, Bronze Spindle	1	
9	103196301	Sensor, Speed, Spacer	1	
10	103196401	Bolt, Sensor, Spacer	1	
11	103196501	Sensor, Speed	1	
12	103217401	Asm, Hub, Disc Brake (includes items 13 through 19)	1	
13	1011153	Front Hub	1	
14	1013135	Seal, Double Lip	1	
15	102920201	Stud, Lug, Rotor Mounting	4	
16	102949701	Rotor, Disc	1	
17	103196201	5/16-18x.75, Bolt, Loctite	4	
18	7274	Bearing, Front Hub Wheel	2	
19	7308	Race, Front Hub Bearing	2	
20	7840	Nut, 3/4-16 Hex Slotted	1	
21	7910	Pin, 5/32 X 1.00 Cotter	1	

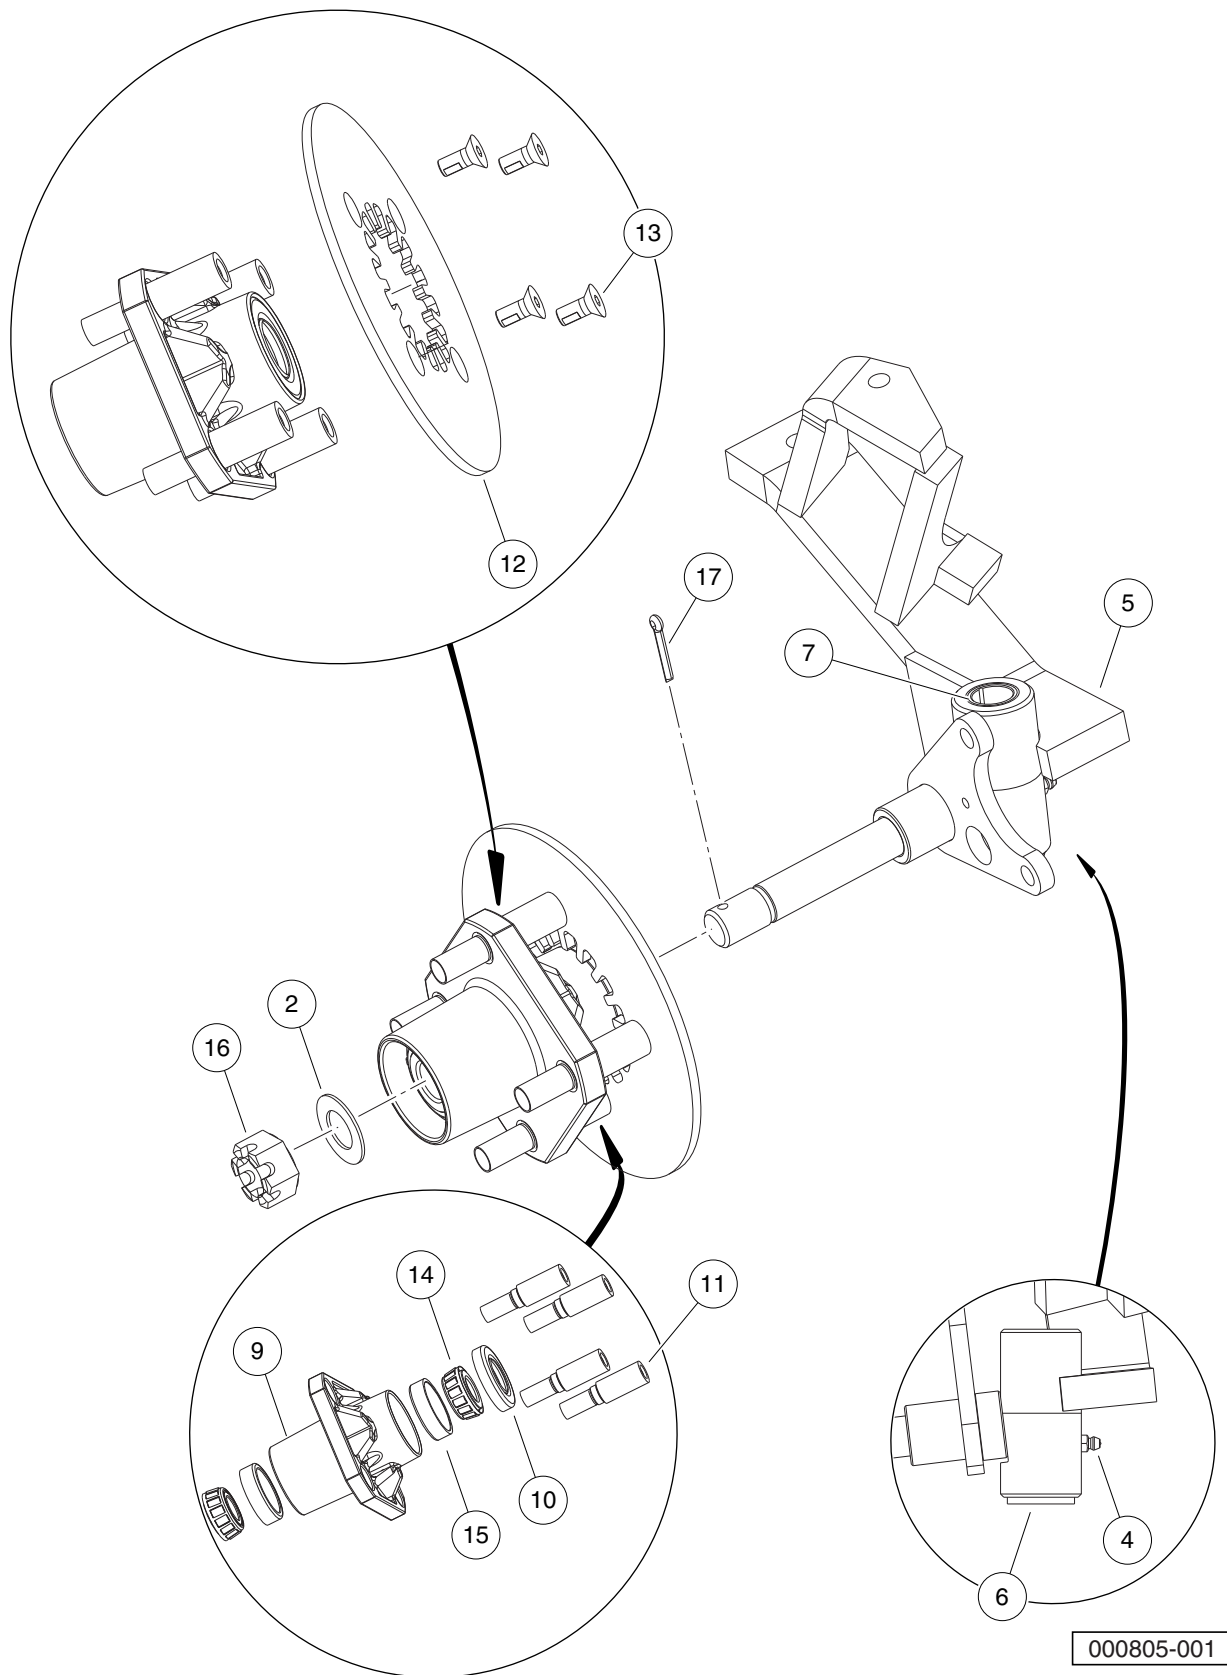

000805-001

SPINDLE AND HUB – PASSENGER SIDE

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	N/A	Asm, Spindle-hub, Rh, Db (includes items 2 through 17)	1	
2	1010005	Washer, 3/4 Flat	1	
3	103194201	Spindle, Disc Asm Right (includes items 4 through 7)	1	
4	1015597	Fitting, 1/4-28 Thread-Forming Grease	1	
5	N/A	Asm, Spindle -rh Disc	1	
6	7048	Bushing, Flanged Bronze	1	
7	8067	Bushing, Bronze Spindle	1	
8	103217401	Asm, Hub, Disc Brake (includes items 9 through 15)	1	
9	1011153	Front Hub	1	
10	1013135	Seal, Double Lip	1	
11	102920201	Stud, Lug, Rotor Mounting	4	
12	102949701	Rotor, Disc	1	
13	103196201	5/16-18x.75, Bolt, Loctite	4	
14	7274	Bearing, Front Hub Wheel	2	
15	7308	Race, Front Hub Bearing	2	
16	7840	Nut, 3/4-16 Hex Slotted	1	
17	7910	Pin, 5/32 X 1.00 Cotter	1	

5


G

E

ELECTRICAL SYSTEM – GASOLINE VEHICLE

6

G

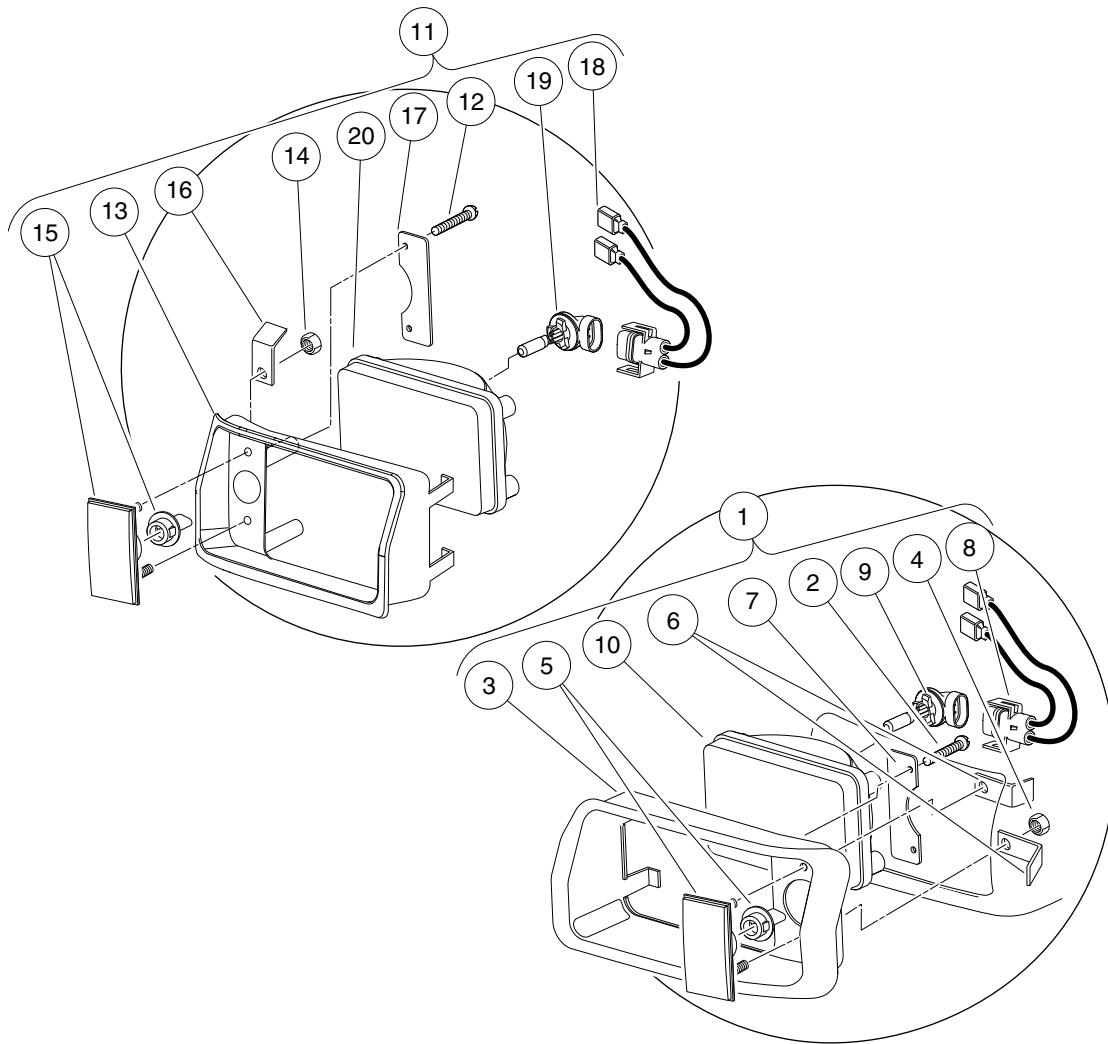


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101988001	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
3	1016880	Headlight Bezel, Left	1
4	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
5	1017062	Turn Signal Lens Assy	1
6	1017064	Mounting Bracket	2
7	1017065	Retainer, Headlight	1
8	101987901	Connector Harness Assembly, Headlight	1
9	101988101	Bulb, Headlight	1
10	101988201	Lens, Headlight	1
11	101988002	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
13	1016879	Headlight Bezel, Right	1
14	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
15	1017062	Turn Signal Lens Assy	1
16	1017064	Mounting Bracket	2
17	1017065	Retainer, Headlight	1
18	101987901	Connector Harness Assembly, Headlight	1
19	101988101	Bulb, Headlight	1
20	101988201	Lens, Headlight	1

6


G

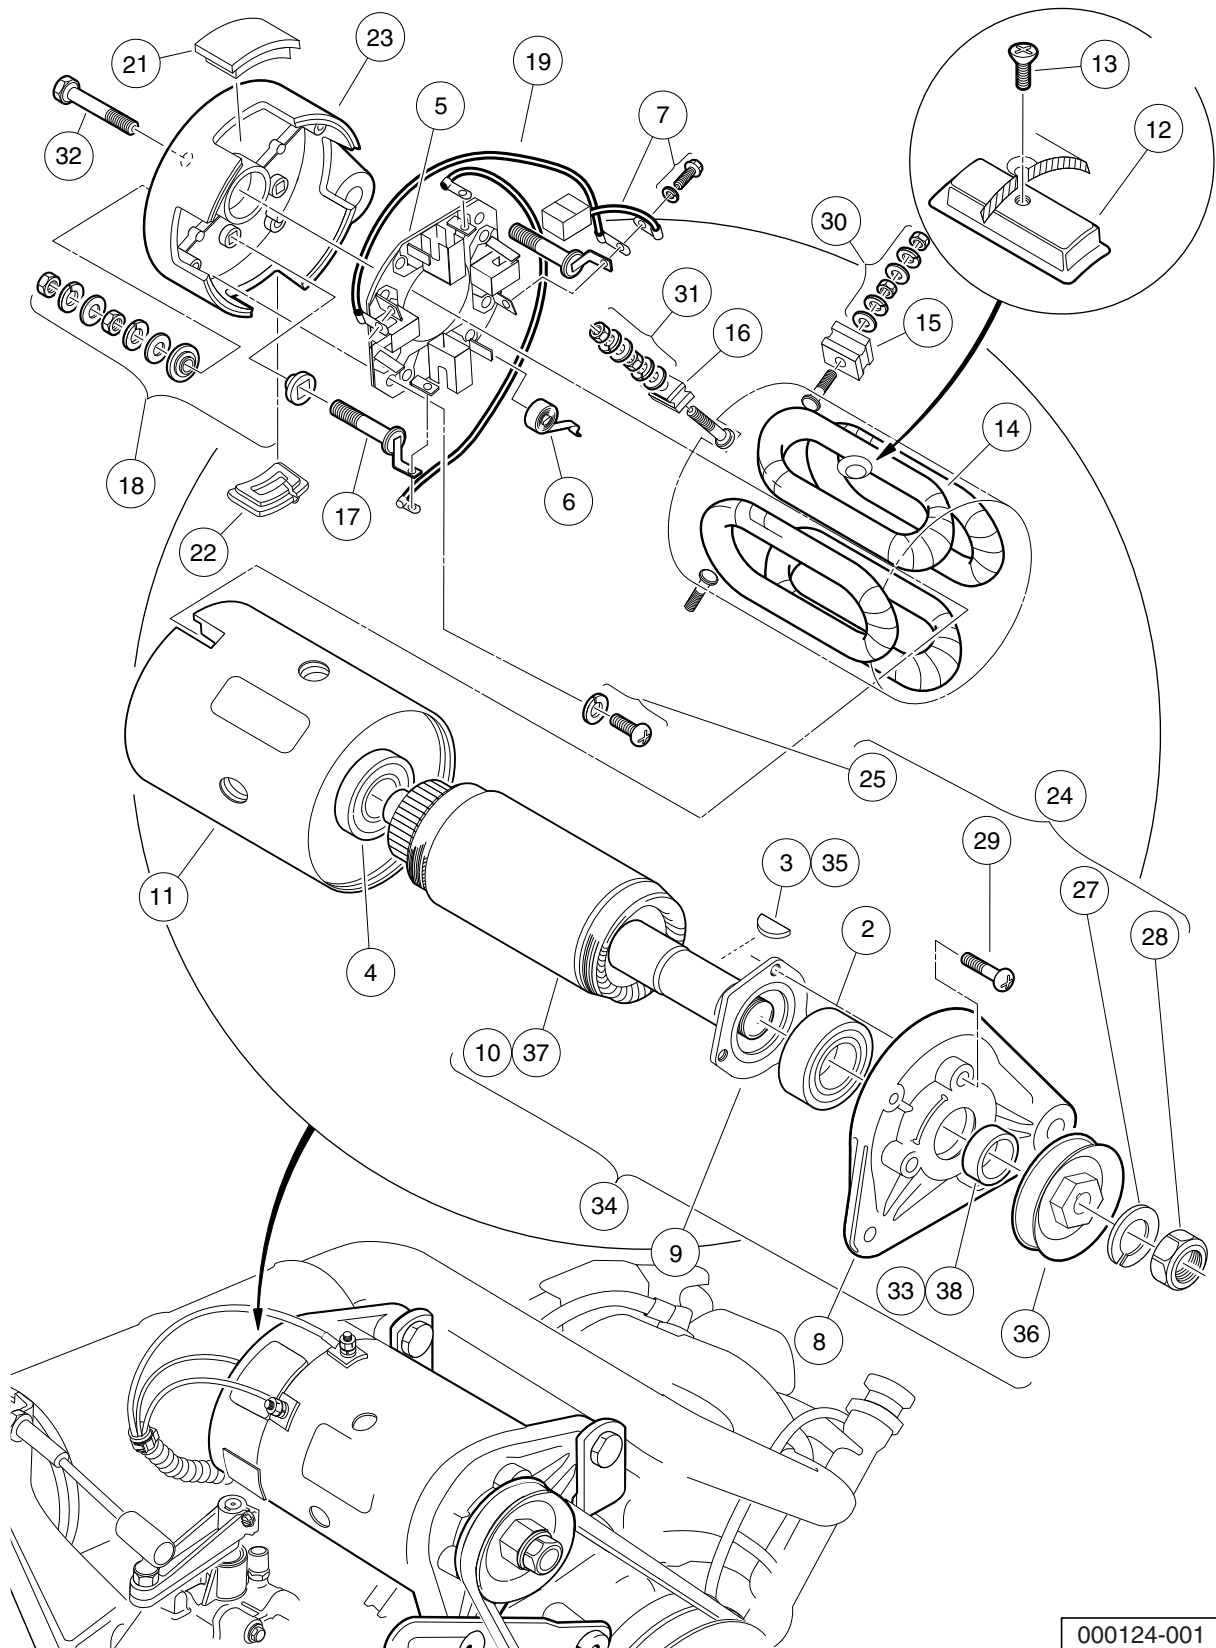

000124-001

STARTER/GENERATOR ASSEMBLY MODEL G425419 – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	6 G
		1 2 3 4		
1	101833701	Starter/Generator (cw) (includes items 2 through 33)	1	
2	1013001	Bearing, Output Shaft Ball	1	
3	1013003	Key, Starter/Generator	1	
4	1013005	Bearing, Ball	1	
5	101301102	Brush Holder Assembly (cw) (includes item 6)	1	
6	101878101	Brush Spring Set	4	
7	101869302	Brush and Screw Set (cw)	1	
8	101874901	Front Bracket	1	
9	101875001	Retainer	1	
10	101875101	Armature	1	
11	101875201	Field Coil Housing	1	
12	101875301	Pole Set	1	
13	101875401	Screw Set	1	
14	101875501	Field Stator Coil Assembly	1	
15	101875601	F Insulator Set	2	
16	101875701	DF Insulator	1	
17	101875802	A Connector (cw)	1	
18	101876001	Screw and Mold Assembly	2	
19	101876202	Brush Connector Assembly (cw)	2	
20	101876301	Cover Set (includes items 21 and 22)	1	
21	1012991	Brush Inspection Port Cover	3	
22	1017653	Brush Port Cover w/Drain	1	
23	101876402	Rear Bracket (cw)	1	
24	101876501	Nut and Screw Set (includes items 25 through 29)	1	
25	101896501	Brush Holder Asm Screw	2	
26	N/A	Washer, M5 Flat	1	
27	N/A	Washer, M14 Lock	1	
28	N/A	Nut, Hex, M14 x 2	1	
29	N/A	Screw, M5 x 0.8 x 18mm	3	
30	101877601	Nut and Washer Set	2	
31	101877701	Nut and Washer Set	1	
32	101879001	Through Bolt Set	2	
33	101939901	Spacer	1	
34	101875102	Armature Asm Conversion Kit (includes items 35 through 38)	1	
35	1013003	Key, Starter/Generator	1	
36	1014289	Pulley, Starter/Generator	1	
37	101875101	Armature	1	
38	101939901	Spacer	1	
		Note: Item 36 will ONLY fit Model G425419 Starter/Generator.		

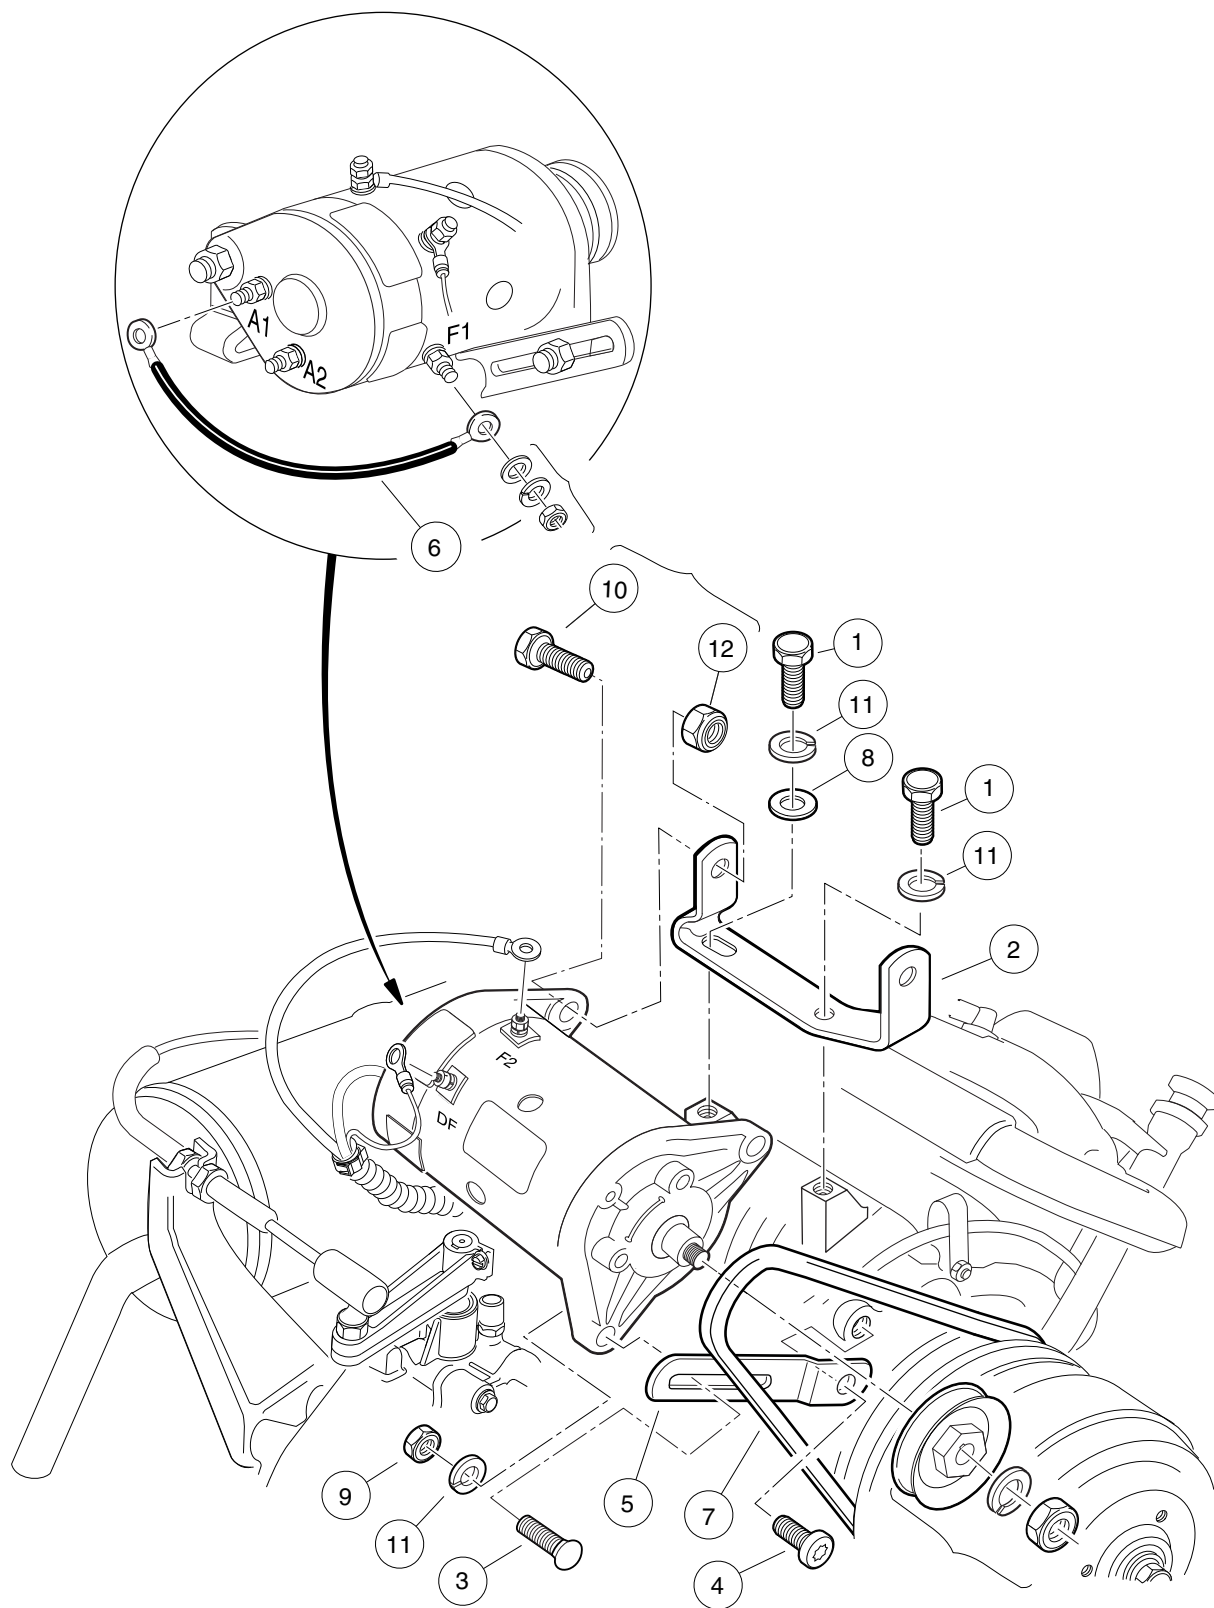

000239-001

FE350 STARTER/GENERATOR MOUNTING – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012830	Screw, M8-125 X 22 Hex-Head	2
2	101524002	Bracket, Starter/Generator Mounting	1
3	1015932	Bolt, Carriage, 5/16-18	1
4	1016074	Screw, M8-1.25 X 18mm Torx	1
5	1016883	Bracket, Starter/Generator Adjustment	1
6	101837301	Wire Assy, #6 Green	1
7	101916701	V-Belt	1
8	1241	Washer, 5/16 Type A Flat	1
9	1242	Nut, 5/16-18 Hex	1
10	705	Screw, Cap-hex Hd 3/8-16x1.25	2
11	7174	Lockwasher, 5/16 Split	3
12	8754	Locknut, 3/8-16 Hex	2

6

G

6


G

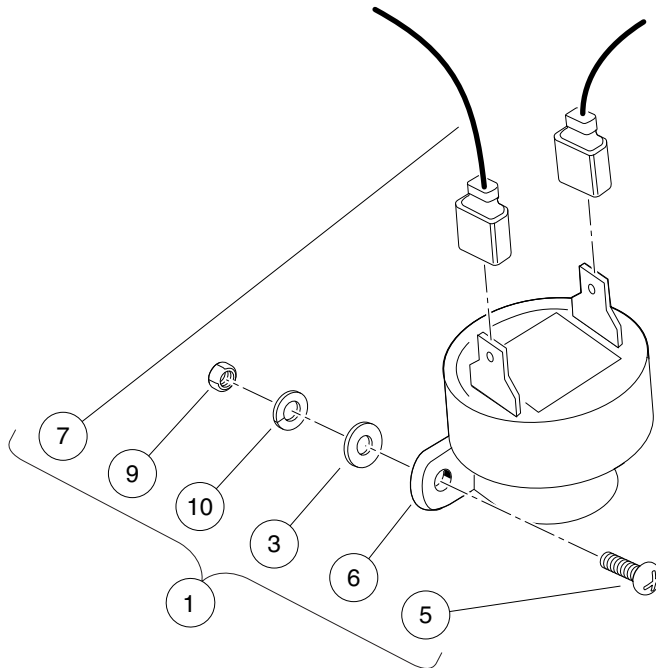

000741-003

REVERSE BUZZER KIT

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	1016859	Kit, Reverse Buzzer (includes items 2 through 10)	1		
2	1011229	Locknut, #6-32 Whiz	1		
3	1012431	Washer, #4 Flat	2		
4	1015720	Screw, #6-32 X 1/2 Hex Washer-Head	1		
5	1016849	Screw, #4-24 X 0.33 Pan-Head Machine	2		
6	1016851	Buzzer, Reverse (9-48 VDC)	1		
7	1016857	Wire Assembly Black #18	1		
8	8056	Screw, #4-40 X 0.75 Round-Head Machine	2		
9	8057	Nut, #4-40 Hex Machine	2		
10	8058	Lockwasher, #4 Split	2		

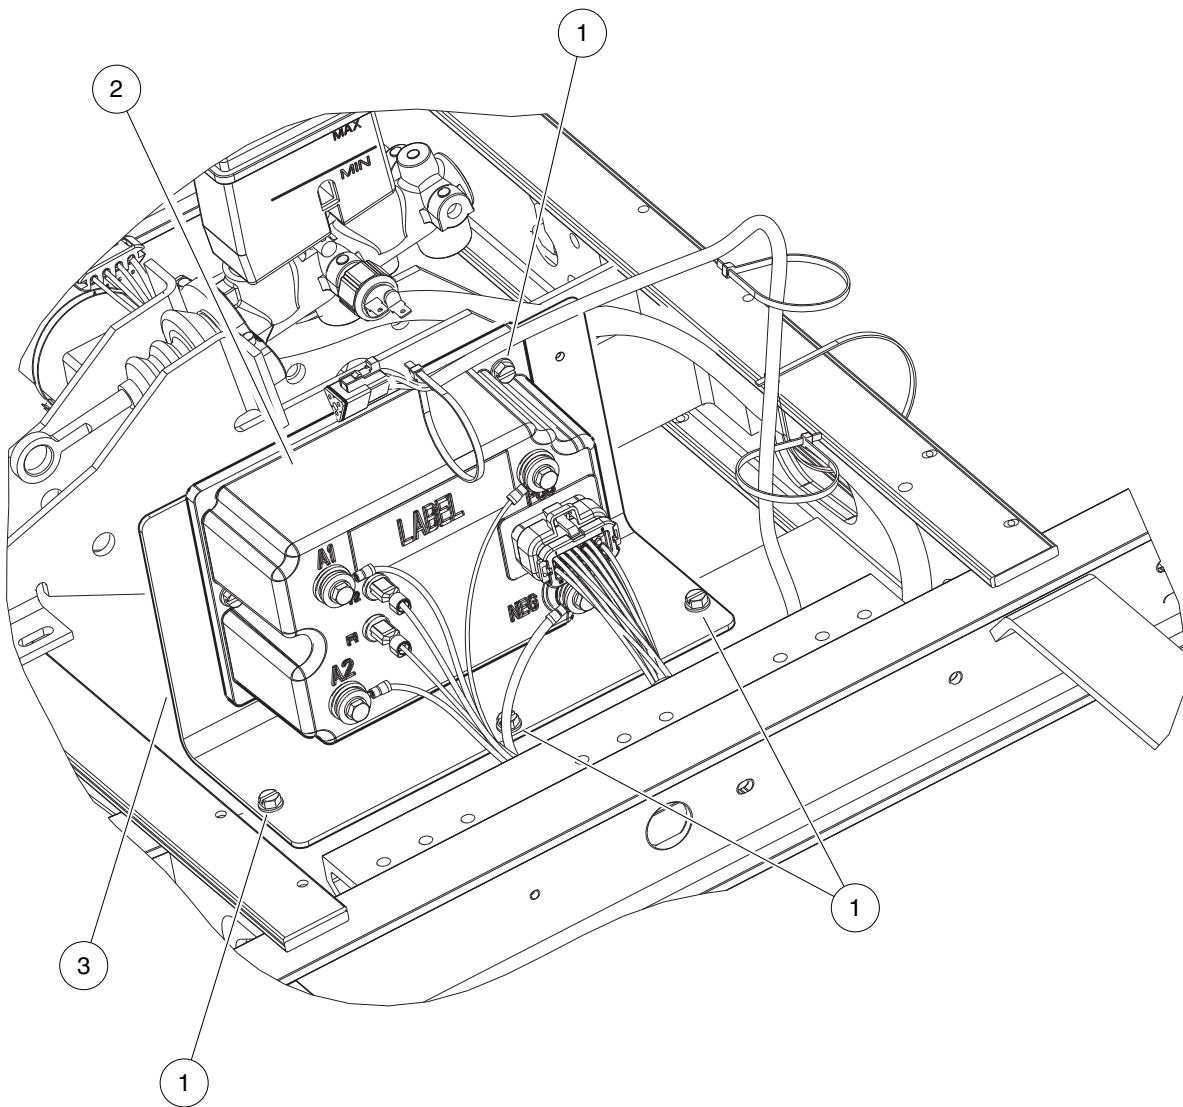


000808-001

BRAKE CONTROLLER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012285	Screw, 1/4 X 0.625 Hex-Head	6
2	103224501	Controller, Brake	1
3	103247901	Bracket, Mounting, Bcu	1

6

G

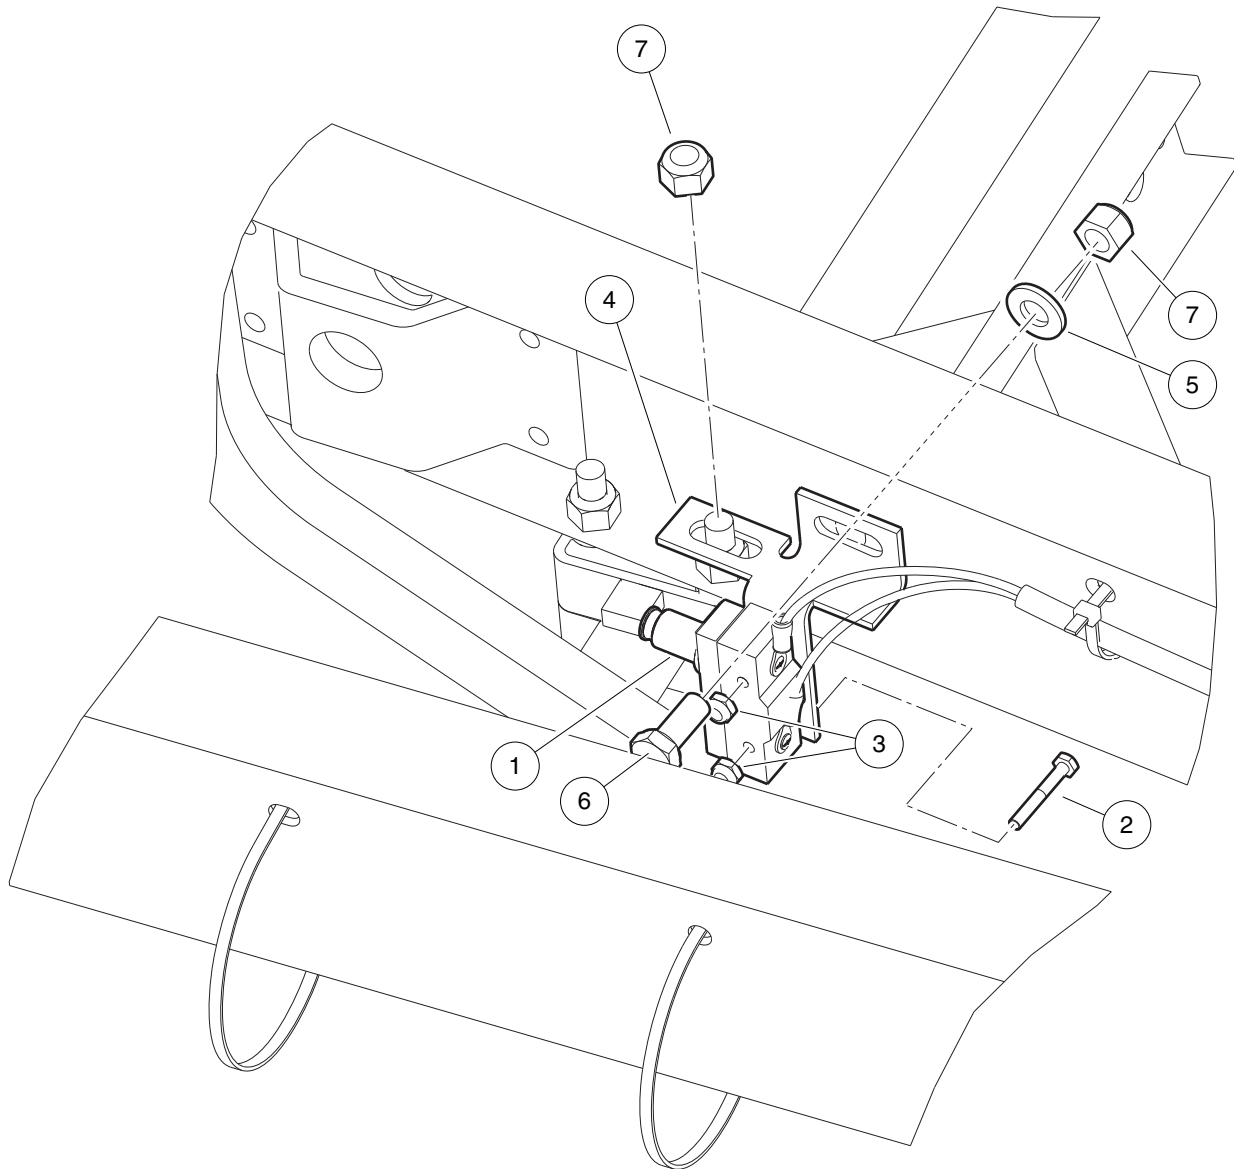


000809-001

BRAKE PEDAL SWITCH

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	1011439	Switch, Limit	1		
2	1011557	Screw, #6-32 X 1.00 Hex-Head Machine	2		
3	101932201	Locknut, #6-32 Nylon	2		
4	101957101	Bracket, Brake Light Switch	1		
5	1241	Washer, 5/16 Type A Flat	1		
6	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	1		
7	7473	Locknut, 5/16-18 Nylon Insert	2		

6

G

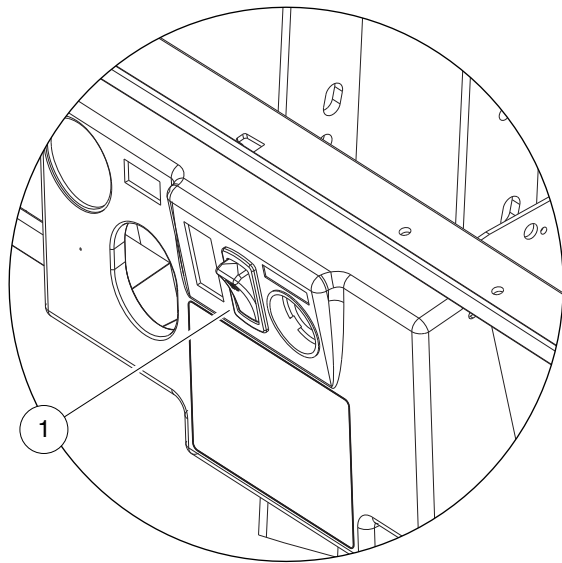


000073-003

HEADLIGHT SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
1	102869401	1 2 3 4 Switch, Rocker, Light	1

6

G

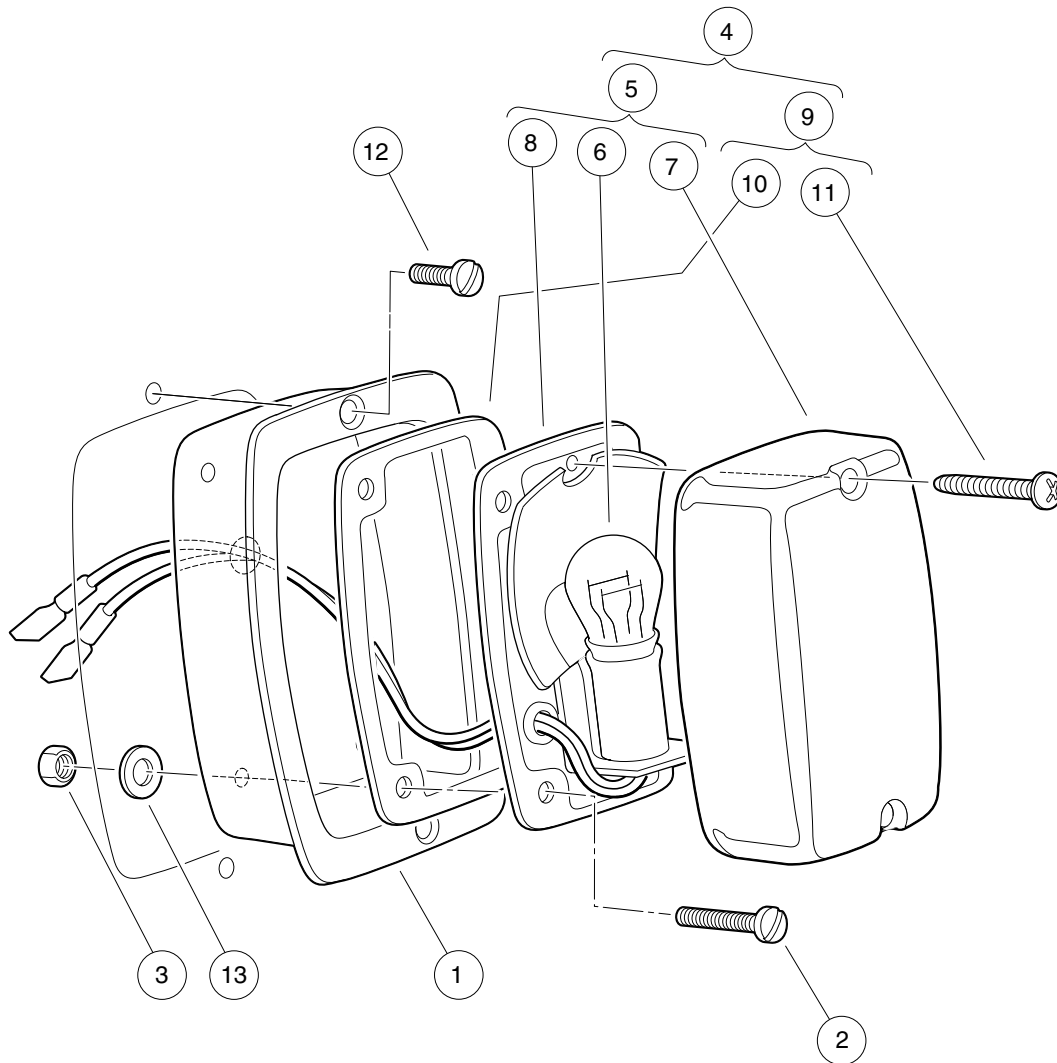


000348-006

TAIL LIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011497	Bezel, Taillight	1
2	1011557	Screw, #6-32 X 1.00 Hex-Head Machine	1
3	1011558	Nut, #6-32 Hex	1
4	1017035	Taillight Assembly (includes items 5 through 9)	1
5	N/A	Light, Tail (includes items 6 through 8)	1
6	1011582	Taillight Bulb	1
7	1011843	Taillight Lens	1
8	N/A	Base, Taillight	1
9	1017699	Hardware Kit, Tail Light (includes items 10 and 11)	1
10	N/A	Gasket	1
11	N/A	Screw, Tapered	2
12	102915601	Plastic Rivet - Tuflock	1
13	7591	Washer, #6 Flat	1

6


G

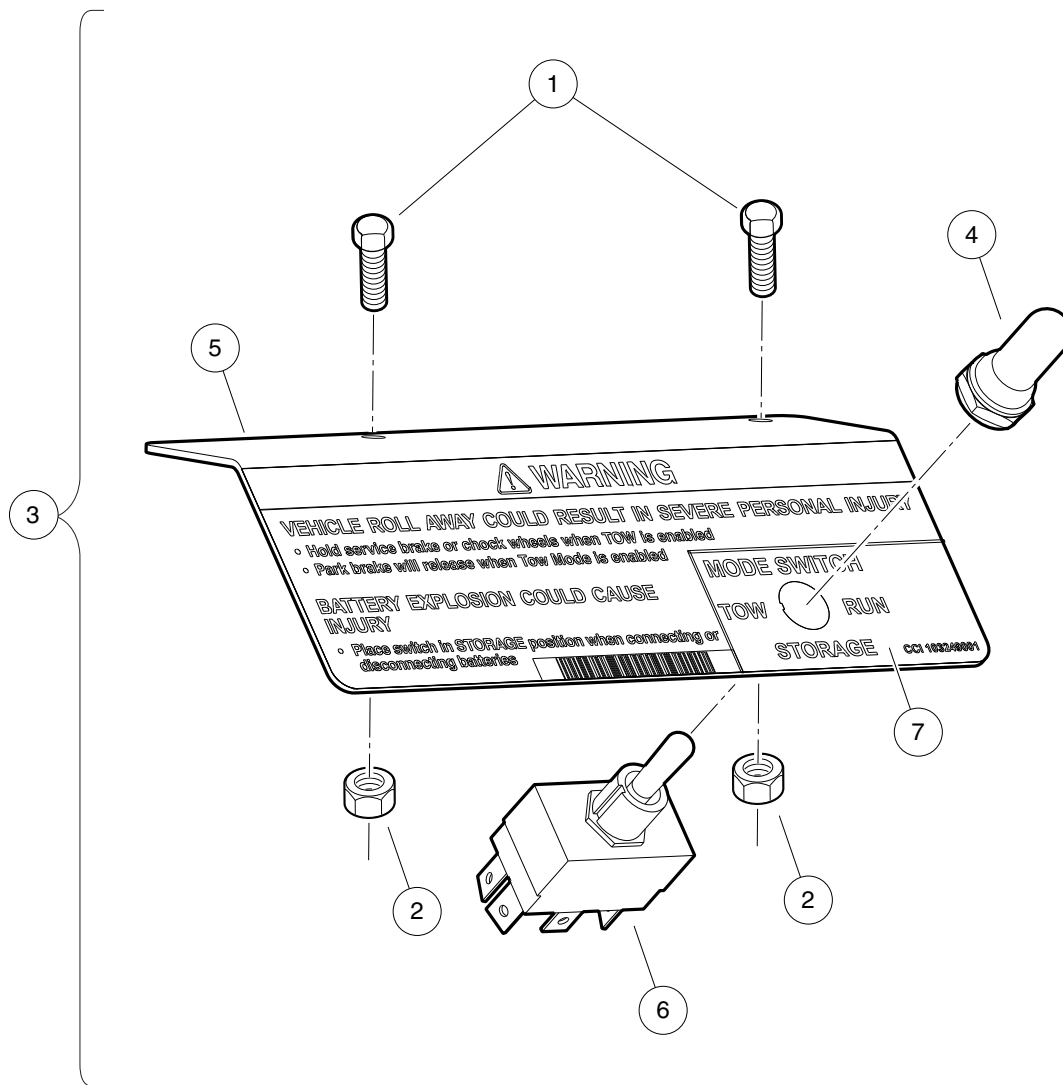


000755-002

OPERATION AND MAINTENANCE SWITCH

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	1012126	Screw, #10-32 X .625 Hx Washer	2	
2	1013061	Locknut, #10-32 Nylon Insert	2	
3	N/A	Asm, Stow, Switch, Gas (includes items 4 through 7)	1	
4	101908401	Boot, Switch	1	
5	102915701	Plate, Switch, Run Tow, Mode	1	
6	103248501	Switch, Toggle, 3 Pos Dpdt	1	
7	103249001	Decal, Stow Switch, Gas	1	

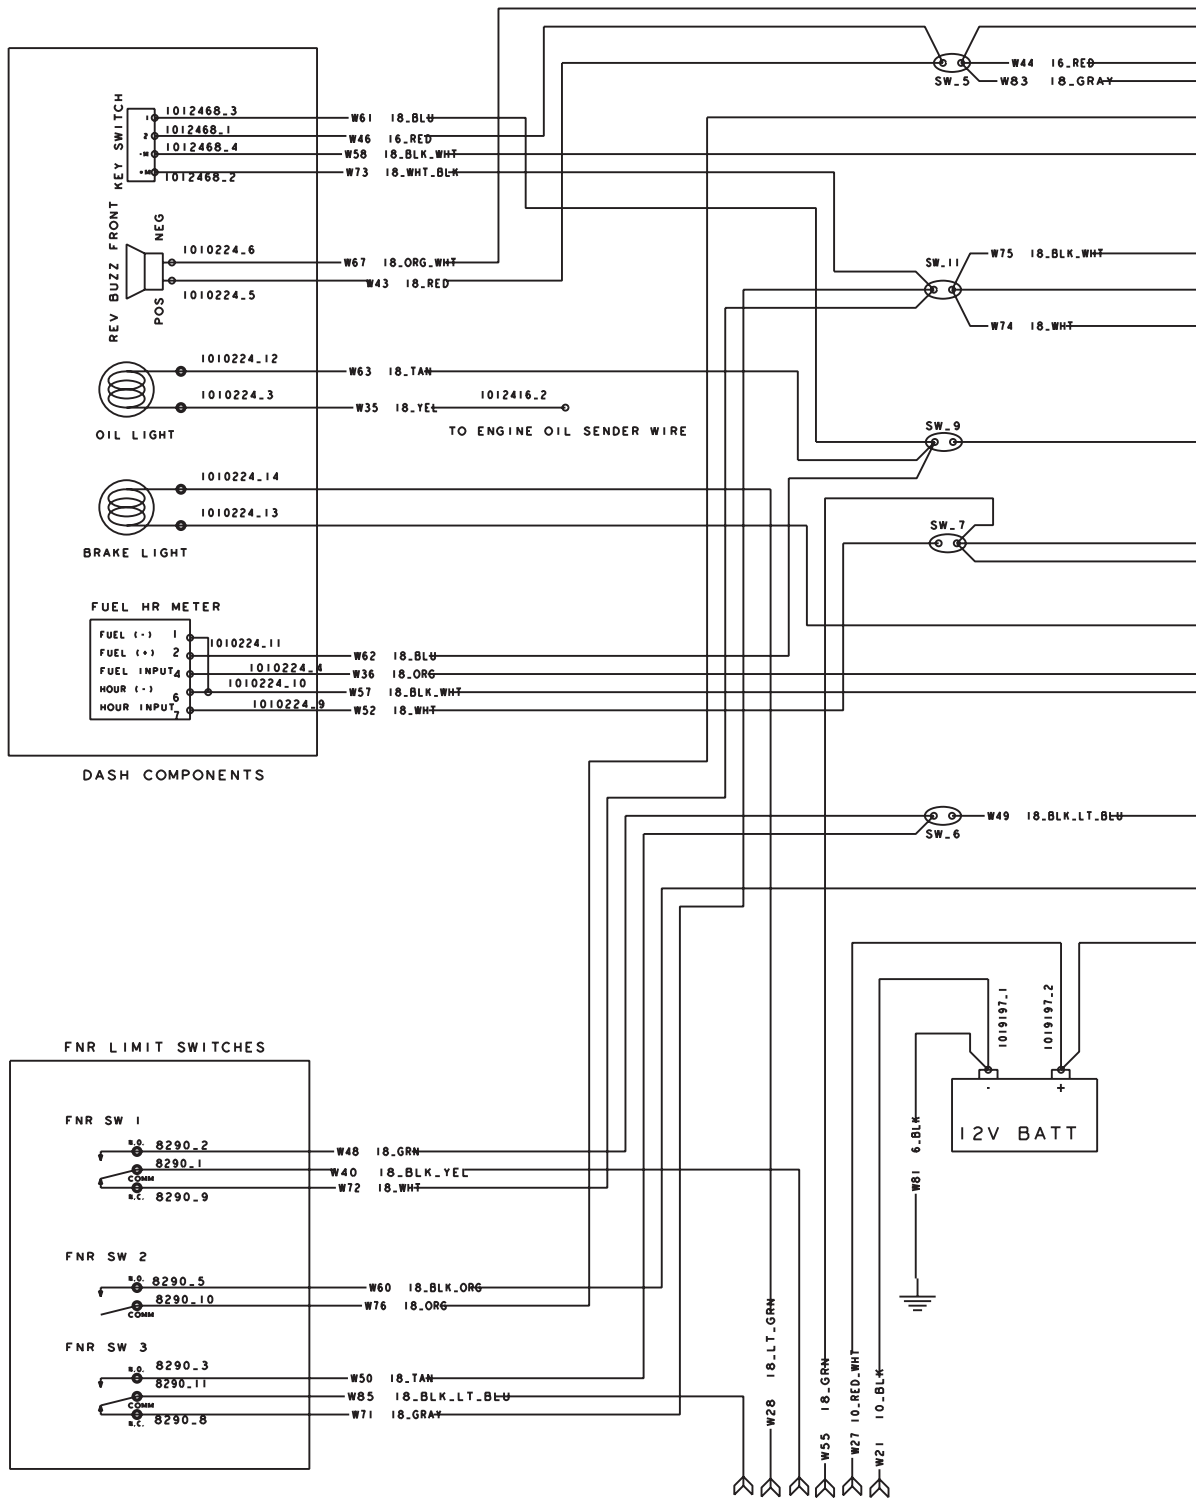


000811-001

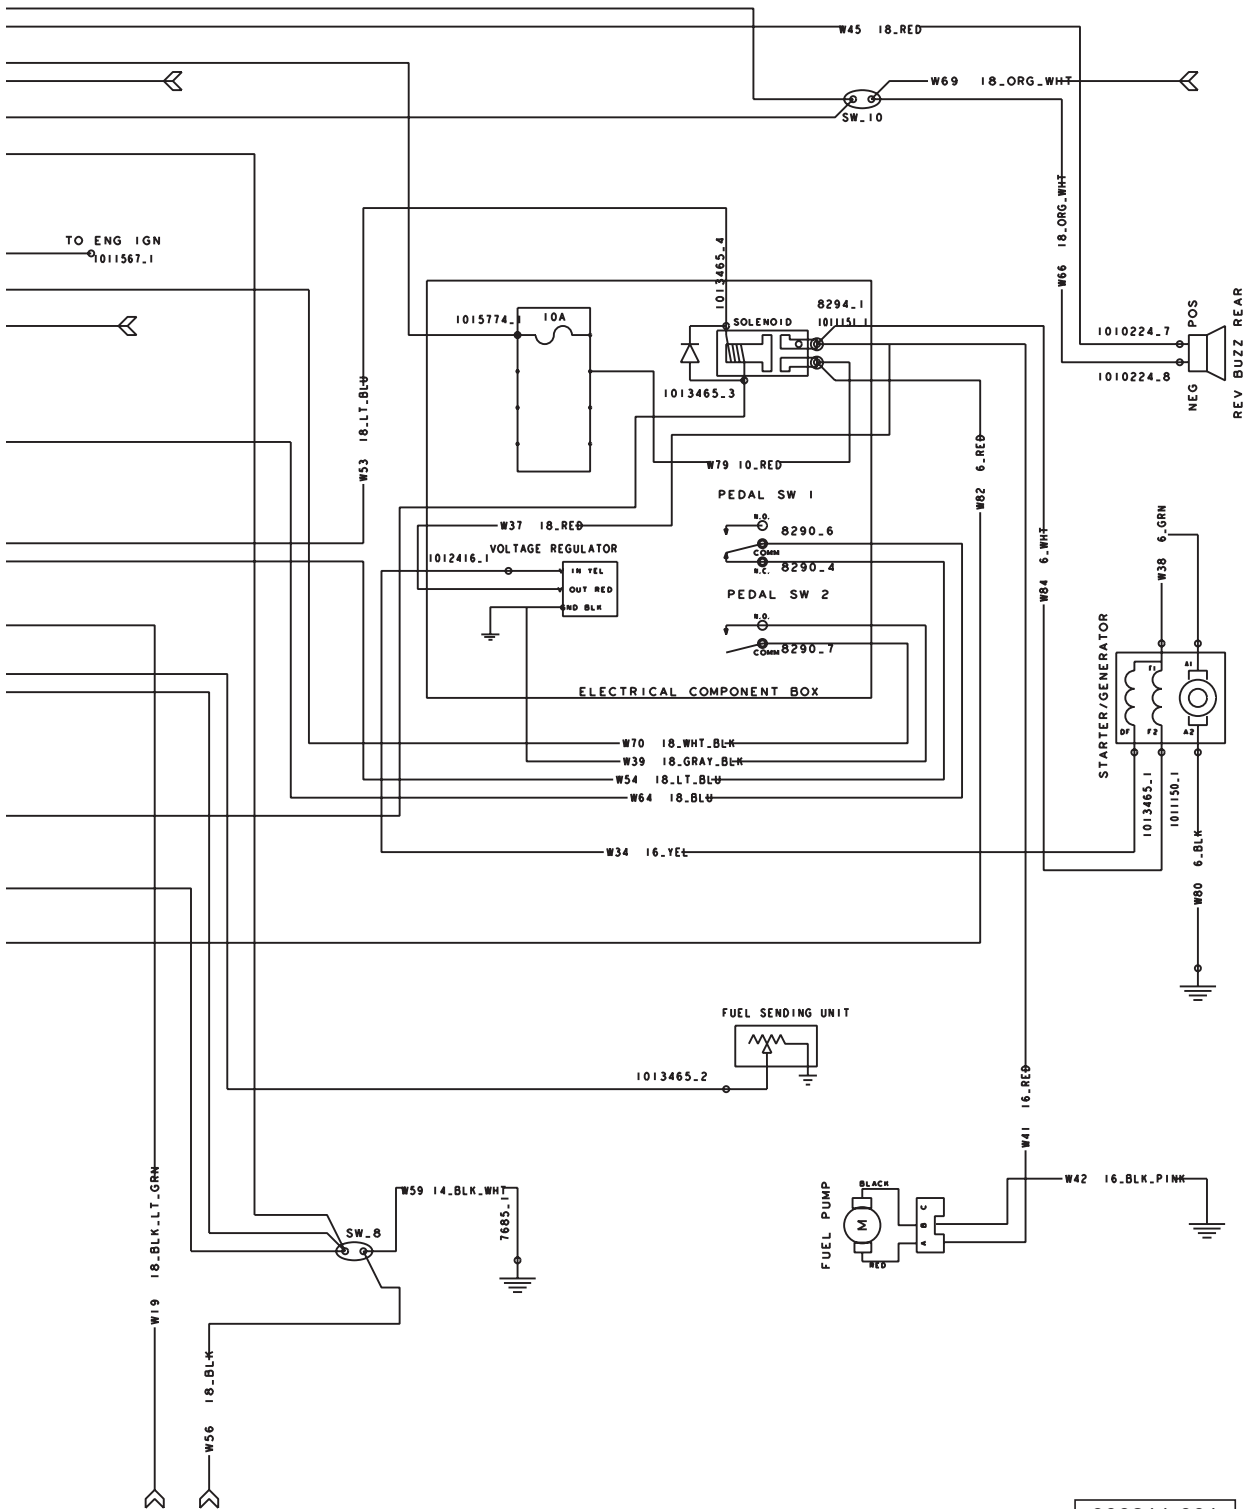

See previous two pages for illustration.

WIRING – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012382	Wire Assy, #6 Black	1
2	1014119	Wire Assembly #6 Red	1
3	1015737	Wire Assy, #10 Red	1
4	1015920	Ground Wire Assembly	1
5	103013601	Wire Harness, Gas, Contrl, Ab	1

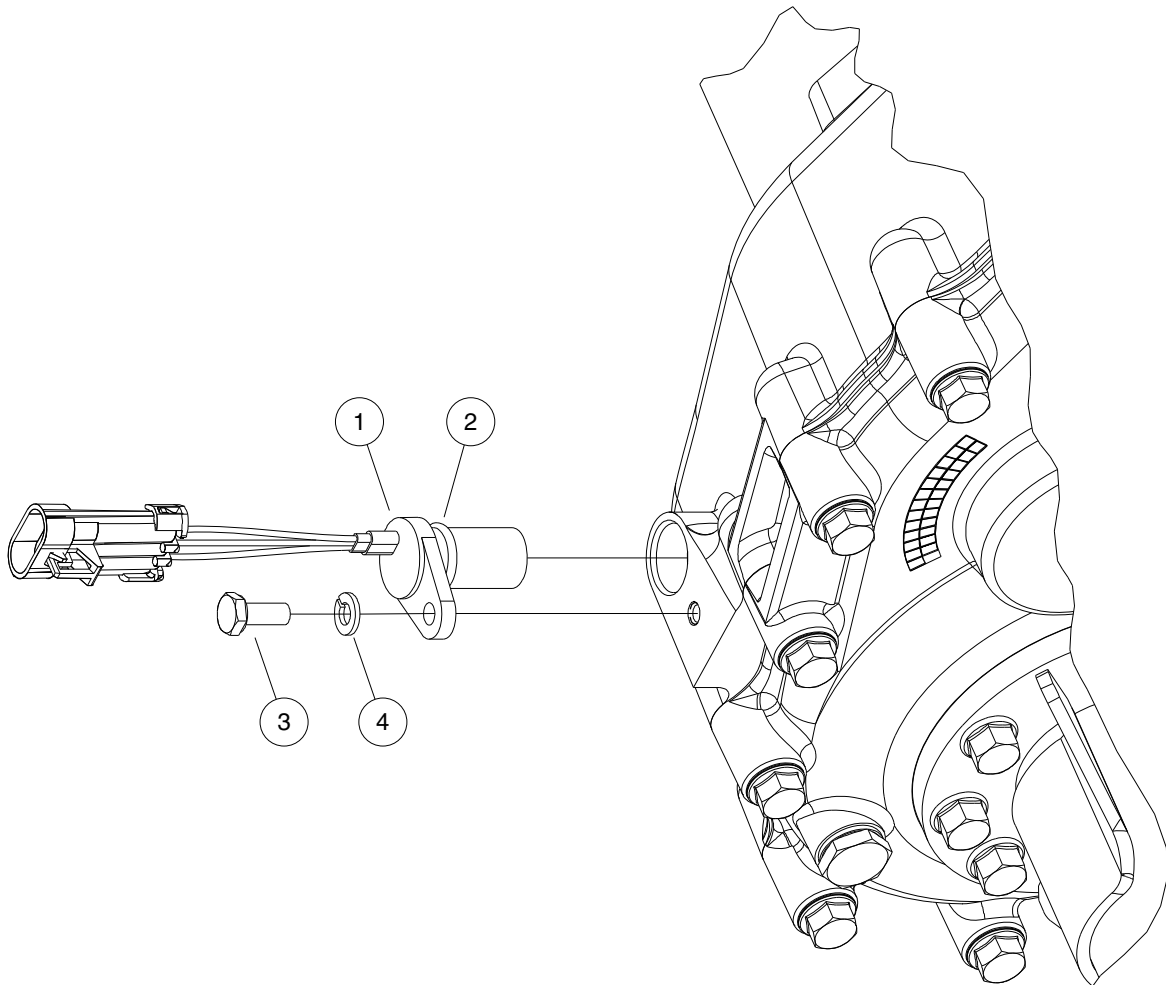

000810-001

SPEED SENSOR – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	103391101	Sensor, Speed, Terminated	1	
2	103391601	O-ring, 5/8" Id	1	
3	403	Screw, 1/4-20 X 0.625 Hex-Head Cap	1	
4	451	Lockwasher, 1/4 Split	1	

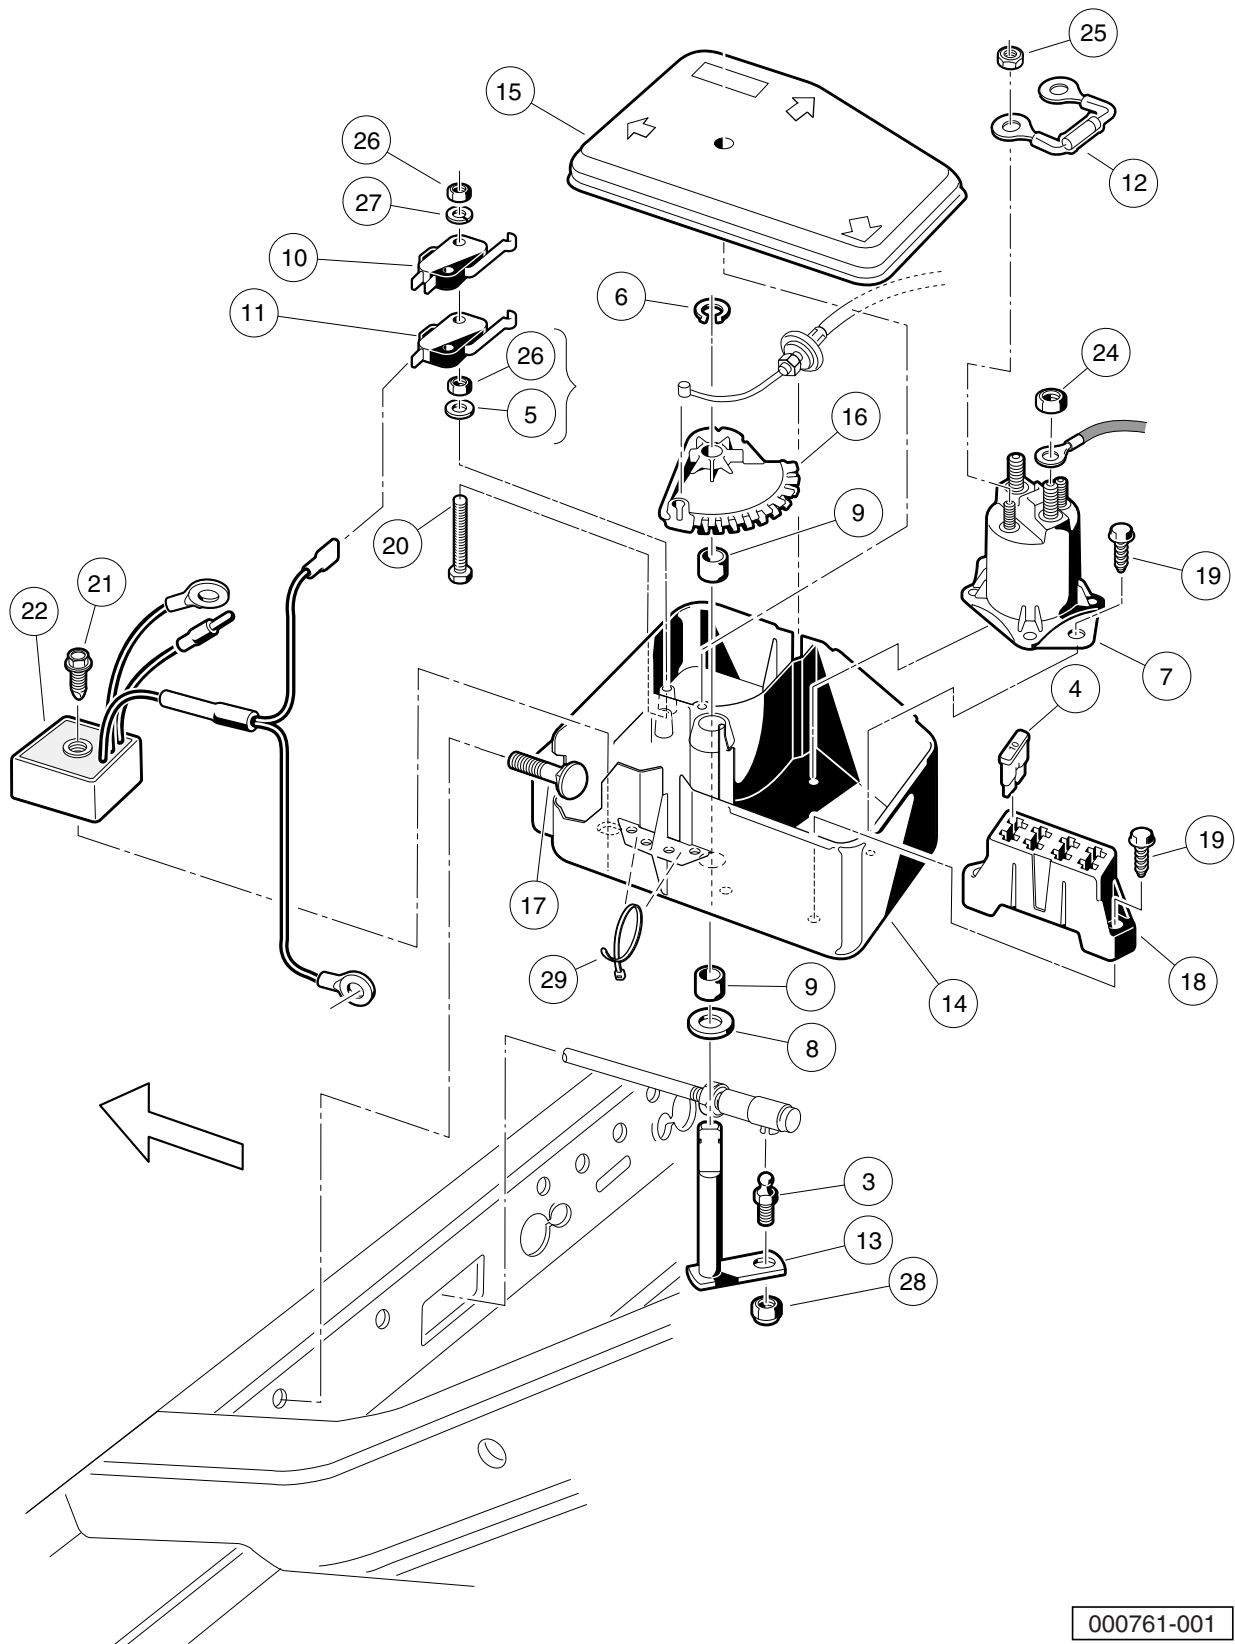


000761-001

ELECTRICAL COMPONENT BOX – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Elec Sys, Gas, Limo, Ab	1
2	N/A	El Component Box, Limo Gas Ab (includes items 3 through 29)	1
3	1010954	Stud, 1/4-28 X 0.560 Ball	1
4	1012295	Fuse, 10-Amp	1
5	1012431	Washer, #4 Flat	2
6	1013589	Ring, 0.338" Internal Retaining	1
7	1013609	Solenoid, 12-Volt	1
8	1014065	Washer, 0.38" ID Delrin Flat	1
9	1014145	Bushing, Secondary Weight, Split	2
10	1014807	Switch, Limit	1
11	1014808	Switch, Limit	1
12	1014948	Diode	1
13	1015345	Bell Crank and Shaft Assembly	1
14	1015371	Box, Electrical Component	1
15	1015372	Cover, Electric Box	1
16	1015373	Cam, Electric Box	1
17	1015405	Bolt, Carriage, 5/16-18 X 2.0	1
18	1015741	Fuse Block	1
19	1015752	Screw, #12-16 X 0.625 Hi-Lo	4
20	1015878	Screw, #4-40 Hex Head Machine	2
21	101856102	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
22	102711201	Voltage Regulator	1
23	N/A	Washer, Nylon Retaining *	1
24	1242	Nut, 5/16-18 Hex	2
25	7893	Nut, #10-32 Hex	2
26	8057	Nut, #4-40 Hex Machine	4
27	8058	Lockwasher, #4 Split	2
28	8717	Locknut, 1/4-28 Nylon Insert	1
29	8990	Tie Wrap, 8" Nylon	2
* Note: Not used. Item is for shipping purposes only.			

6

G

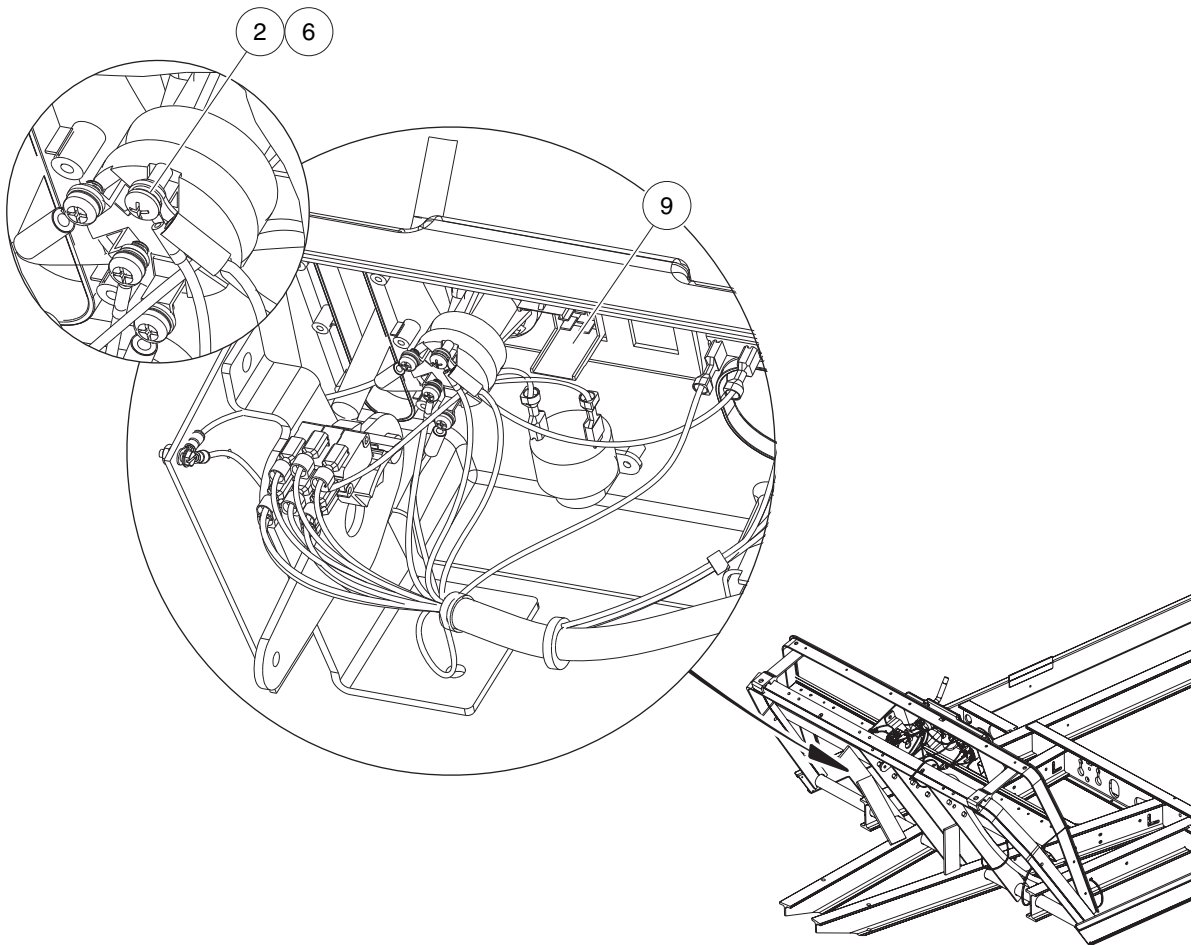

000762-001

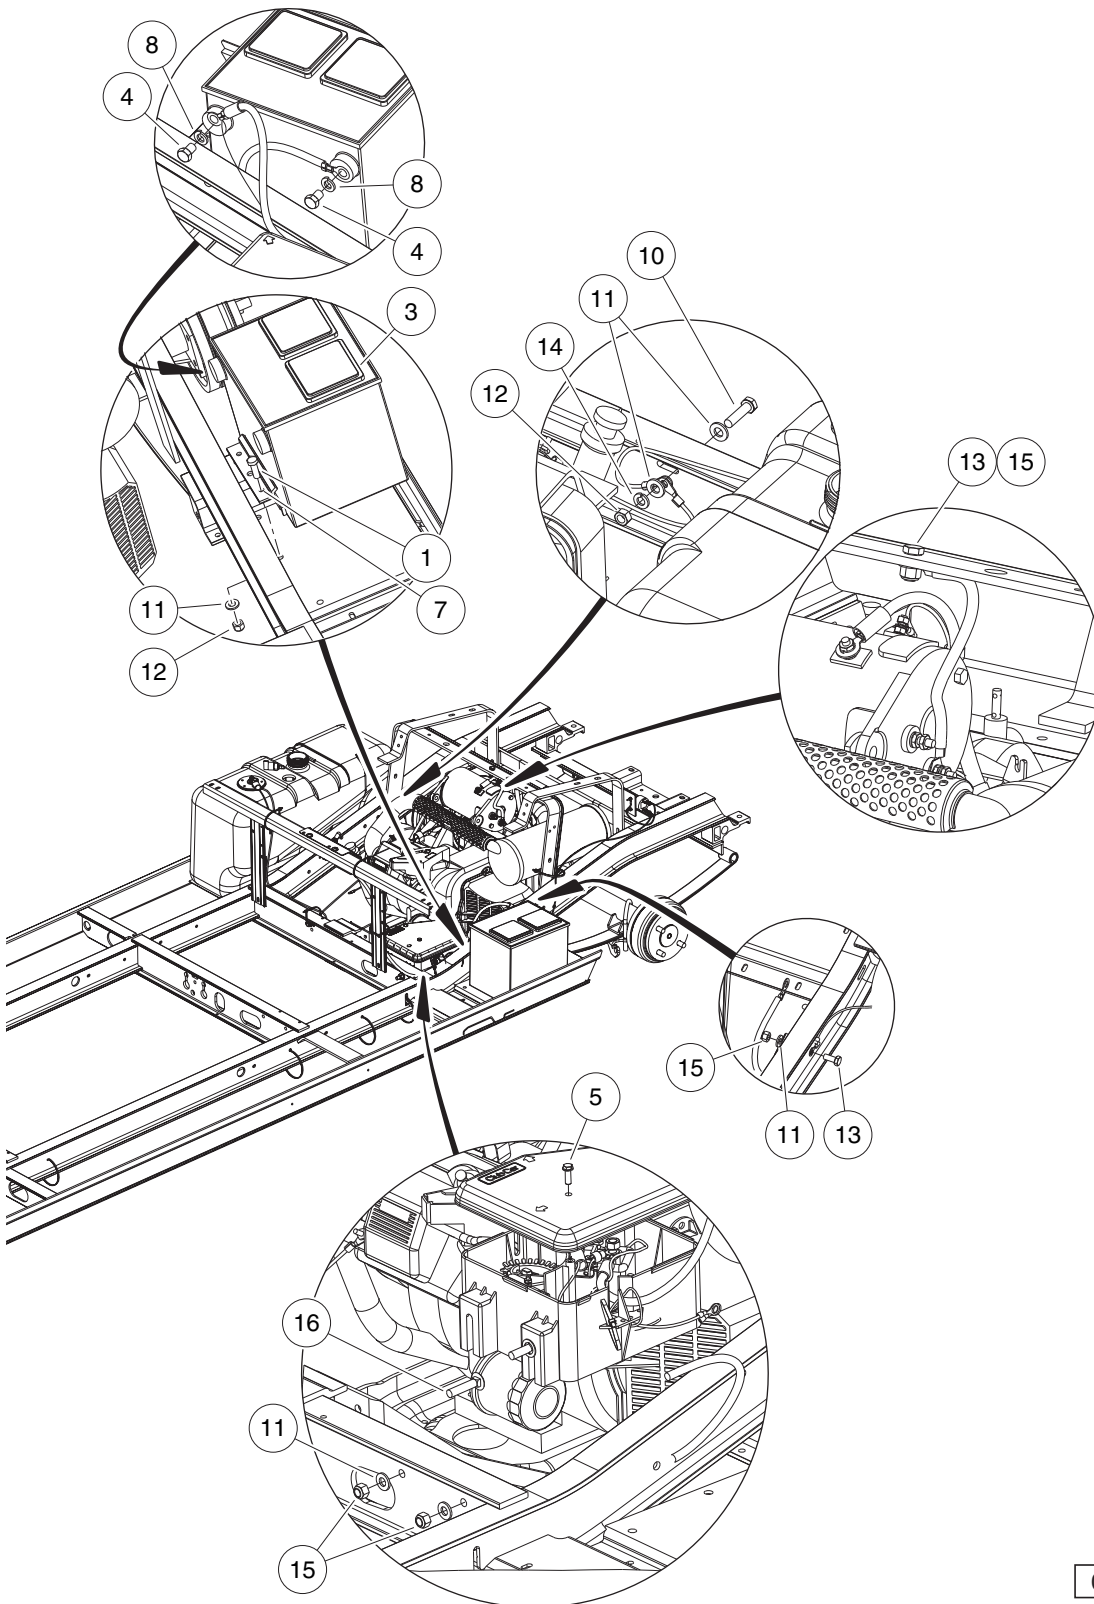

000762-001

6

G


See previous two pages for illustration.

ELECTRICAL SYSTEM MISCELLANEOUS HARDWARE – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010934	Screw, 5/16-18 X 1.00 Hex Cap	1
2	1011610	Lockwasher, #8 Split Ss	1
3	1012328	Battery, 12-Volt	1
4	1014375	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2
5	1015752	Screw, #12-16 X 0.625 Hi-Lo	1
6	1016092	Screw, #8-32 X .44 Pan Head	1
7	101898001	Clamp, Battery	1
8	102355301	Lockwasher, #10 Split Ss	2
9	103180101	Cover, Hole, Switch, Rocker	1
10	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	1
11	1241	Washer, 5/16 Type A Flat	7
12	1242	Nut, 5/16-18 Hex	1
13	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	2
14	7174	Lockwasher, 5/16 Split	1
15	7473	Locknut, 5/16-18 Nylon Insert	5
16	7818	Bolt, Carriage, 5/16-18 X 1.5	1
17	8990	Tie Wrap, 8" Nylon	18

6

G

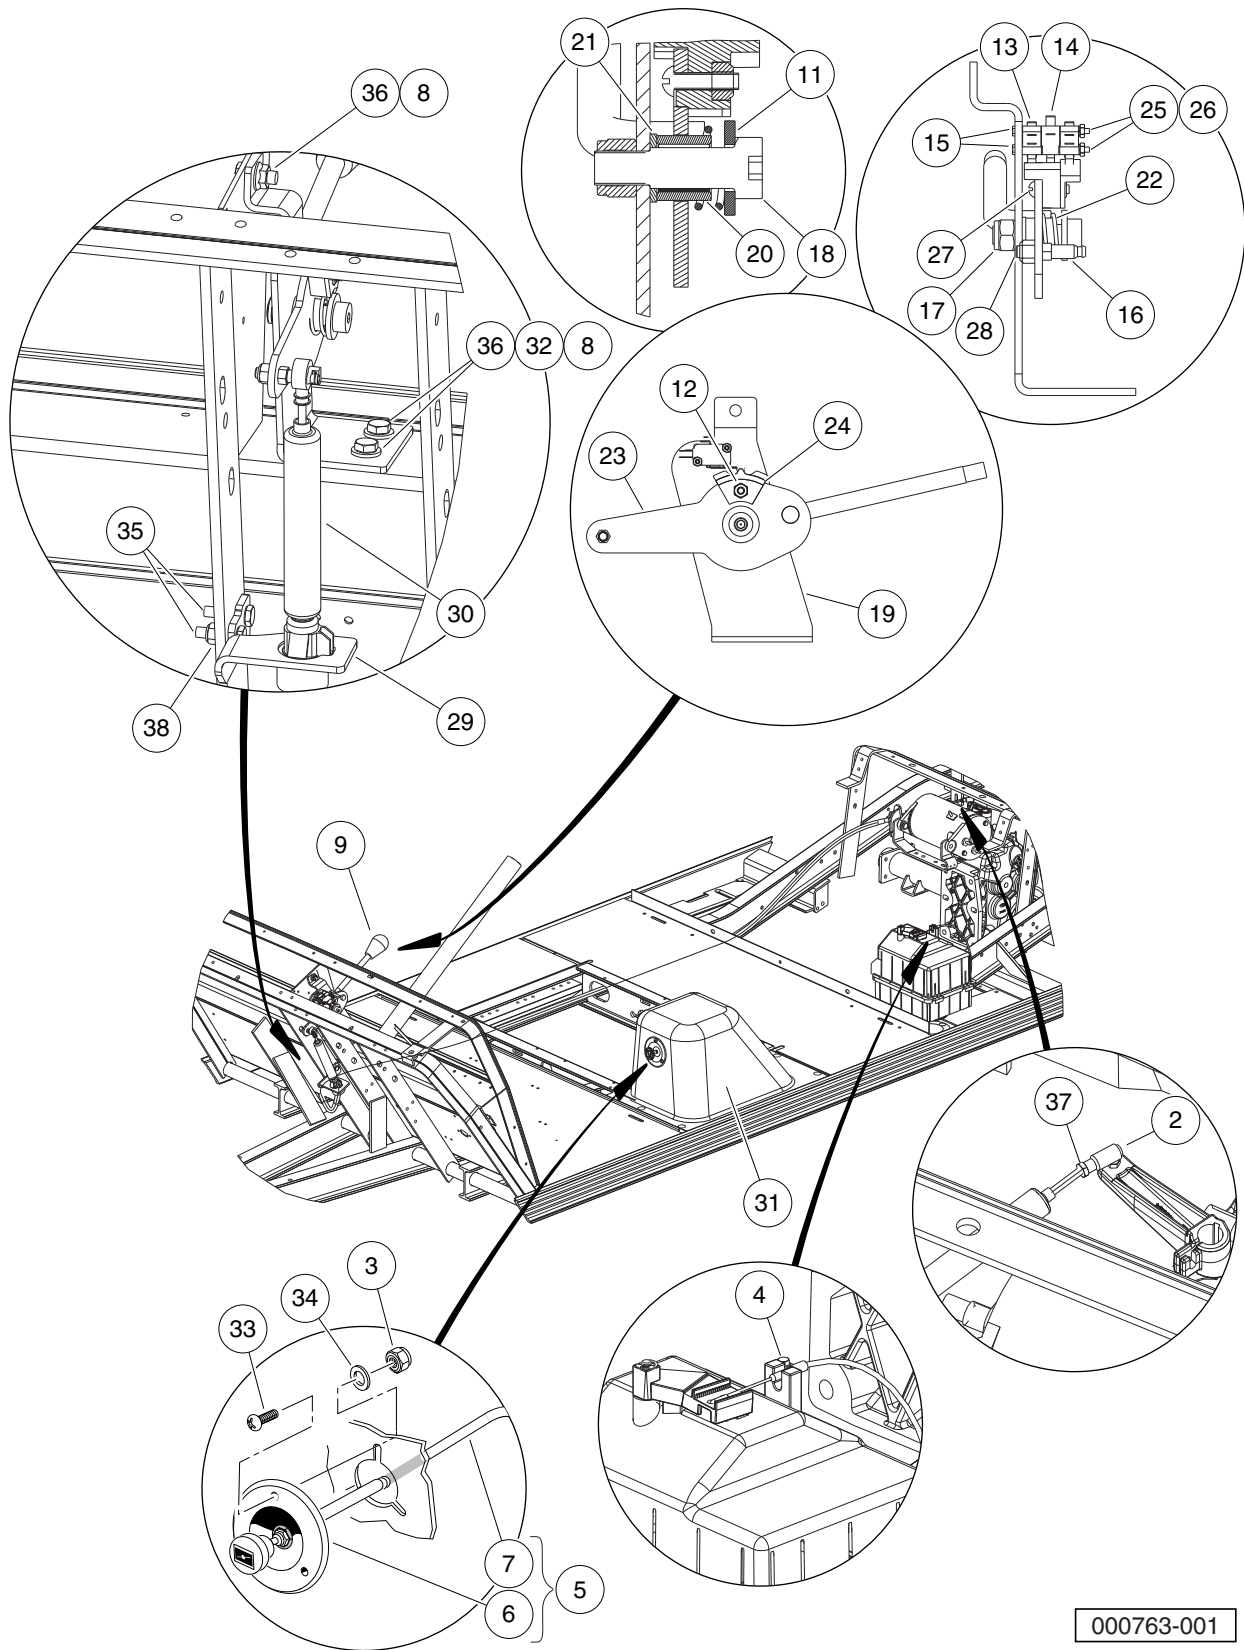

000763-001

CONTROLS AND CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Controls/cable (includes items 2 through 39)	1
2	1012333	Joint, #10-32 Ball	1
3	1012438	Locknut, #10-24 Nylon Insert	3
4	101804301	Screw, #8 X 0.500, Hex-Head Hi-Lo	1
5	101926802	Cable, Choke (includes items 6 and 7)	1
6	101933701	Bezel, Choke Cable	1
7	N/A	Choke Cable without Bezel, Long	1
8	101963401	Locknut, 5/16-18 Hex Flange	3
9	102376001	Knob, Fnr	1
10	102969902	Asm, Shifter, Fnr, Limo (includes items 11 through 28)	1
11	1010028	Washer, 1/2 Type A Flat	1
12	1013061	Locknut, #10-32 Nylon Insert	1
13	1014807	Switch, Limit	2
14	1014808	Switch, Limit	1
15	1015878	Screw, #4-40 Hex Head Machine	2
16	102526201	Stud, Thread, 1/4-28	1
17	102616701	Locknut, M10x1.5 Nylon Insert	1
18	102684602	Shoulder Bolt, M12 X 25.0	1
19	102969401	Bracket, Shifter, FNR	1
20	103173301	Bushing, Greaseless, 12mm Id	1
21	103177401	Washer, Thrust, Shifter, FNR	1
22	103192701	Spring, Comp, .97 Od X.75 L	1
23	103192901	Weldment, Shift Lever, Fnr, Li	1
24	103369501	Cam, Limit Switch, Fnr Shifter	1
25	8057	Nut, #4-40 Hex Machine	2
26	8058	Lockwasher, #4 Split	2
27	8104	Screw, #10-32 X .75 Rd Hd Mach	1
28	8717	Locknut, 1/4-28 Nylon Insert	1
29	103295101	Brkt, Spt, Cable End, Fnr	1
30	103295203	Cable, Transmission, 2385mm	1
31	103350301	Cover, Air Intake, Gas	1
32	1241	Washer, 5/16 Type A Flat	2
33	1631	Screw, #10-24 X 0.75 Phillips Pan-Head	3
34	183	Washer, #10 Type A Flat	3
35	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
36	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	3
37	7893	Nut, #10-32 Hex	1
38	8233	Locknut, 1/4-20 Nylon Insert	2
39	8990	Tie Wrap, 8" Nylon	2

6

G


6

G

FE350 ENGINE – S27

7



G

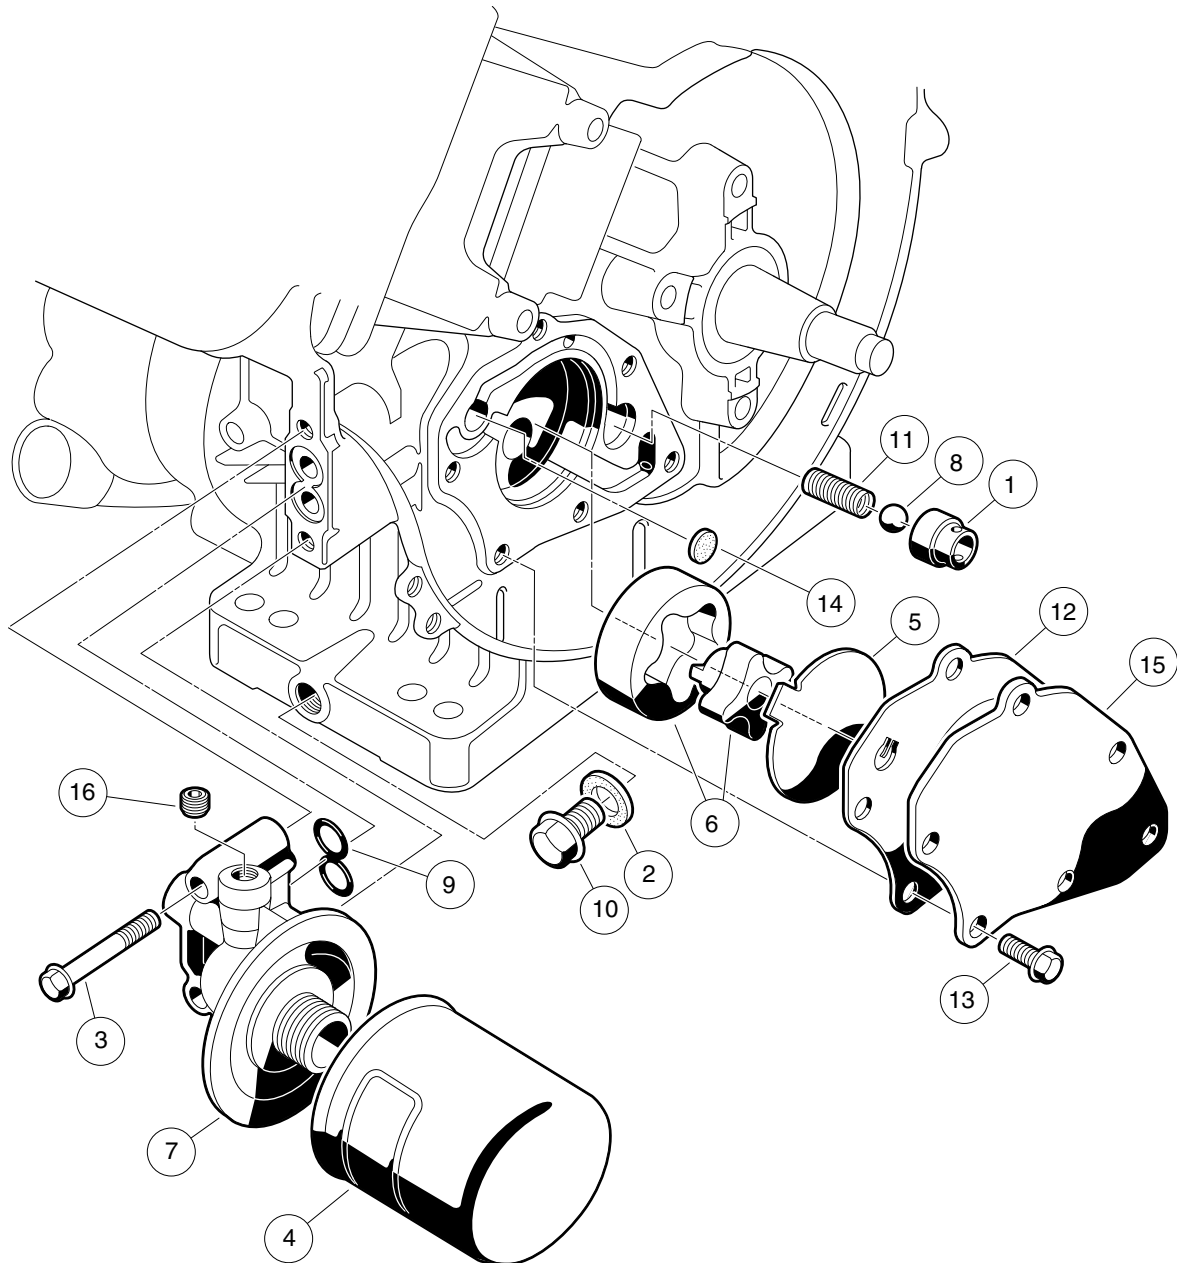

000203-001

FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	1016429	Seat, Value Oil Press Relief	1		
2	1016432	Gasket, Drain Plug	1		
3	1016457	Bolt, Flange Head	2		
4	1016467	Filter, Oil	1		
5	1016473	Plate, Oil Pump	1		
6	101648203	Oil Pump And Rotor	1		
7	1016502	Bracket, Oil Filter Mount	1		
8	1016537	Ball, Steel, Press, Relief	1		
9	1016570	O-Ring	1		
10	1016576	Plug, Drain	1		
11	1016581	Spring	1		
12	1017442	Gasket	1		
13	1017456	Bolt, Flanged	6		
14	1017458	Filter	1		
15	1017460	Cover, Pump	1		
16	1017507	Plug	2		

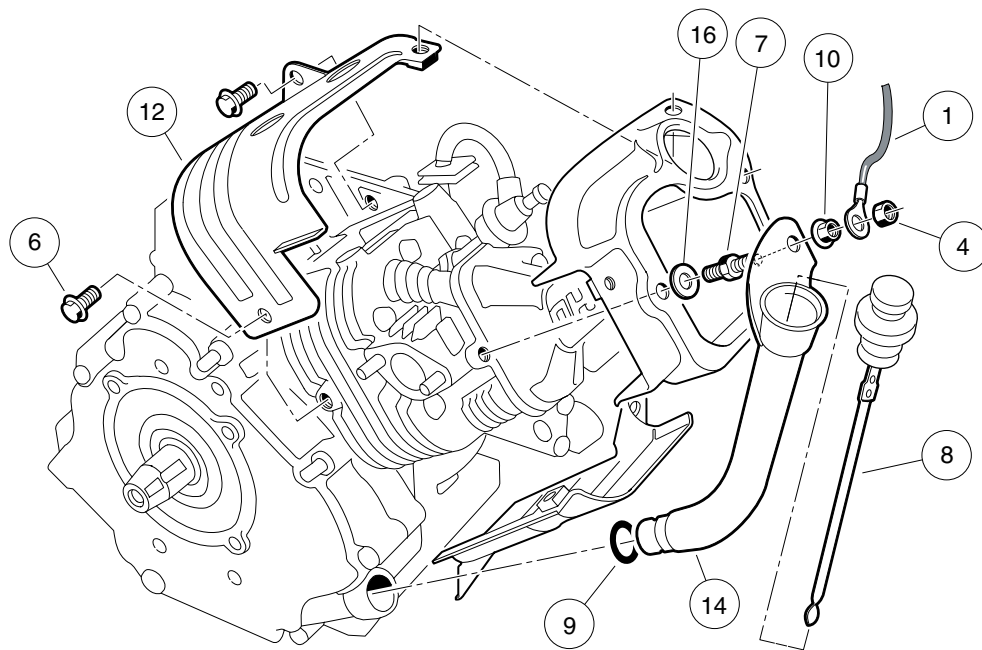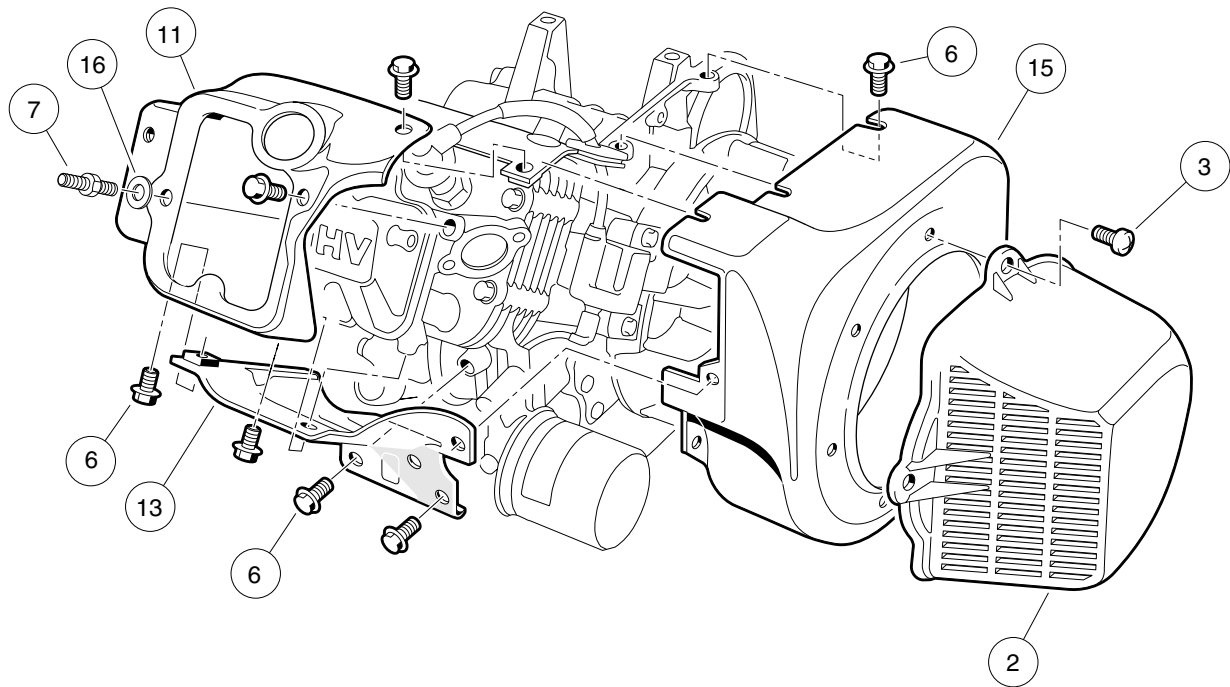


000201-002

FE350 ENGINE WITHOUT ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015332	Wire Assembly, #10, Uninsulated	1
2	1015649	Shroud, Fan	1
3	1015969	Screw, M6-1.00 X 10mm Pan Hd	4
4	101887601	Locknut, M6-1.00 Nylon Insert	1
5	103386202	Engine, FE350 S27 (includes items 6 through 16)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	16
7	1016507	Bolt, Two-Ended	1
8	1016531	Dipstick	1
9	1016539	O-Ring	1
10	1016547	Nut, M6 Flange	1
11	1017474	Shroud, Engine	1
12	1017475	Shroud, Engine	1
13	1017476	Shroud, Engine	1
14	1017486	Tube, Oil Filler	1
15	101916101	Housing, FE350 Fan	1
16	N/A	Washer, 6mm Flat	1

7

G

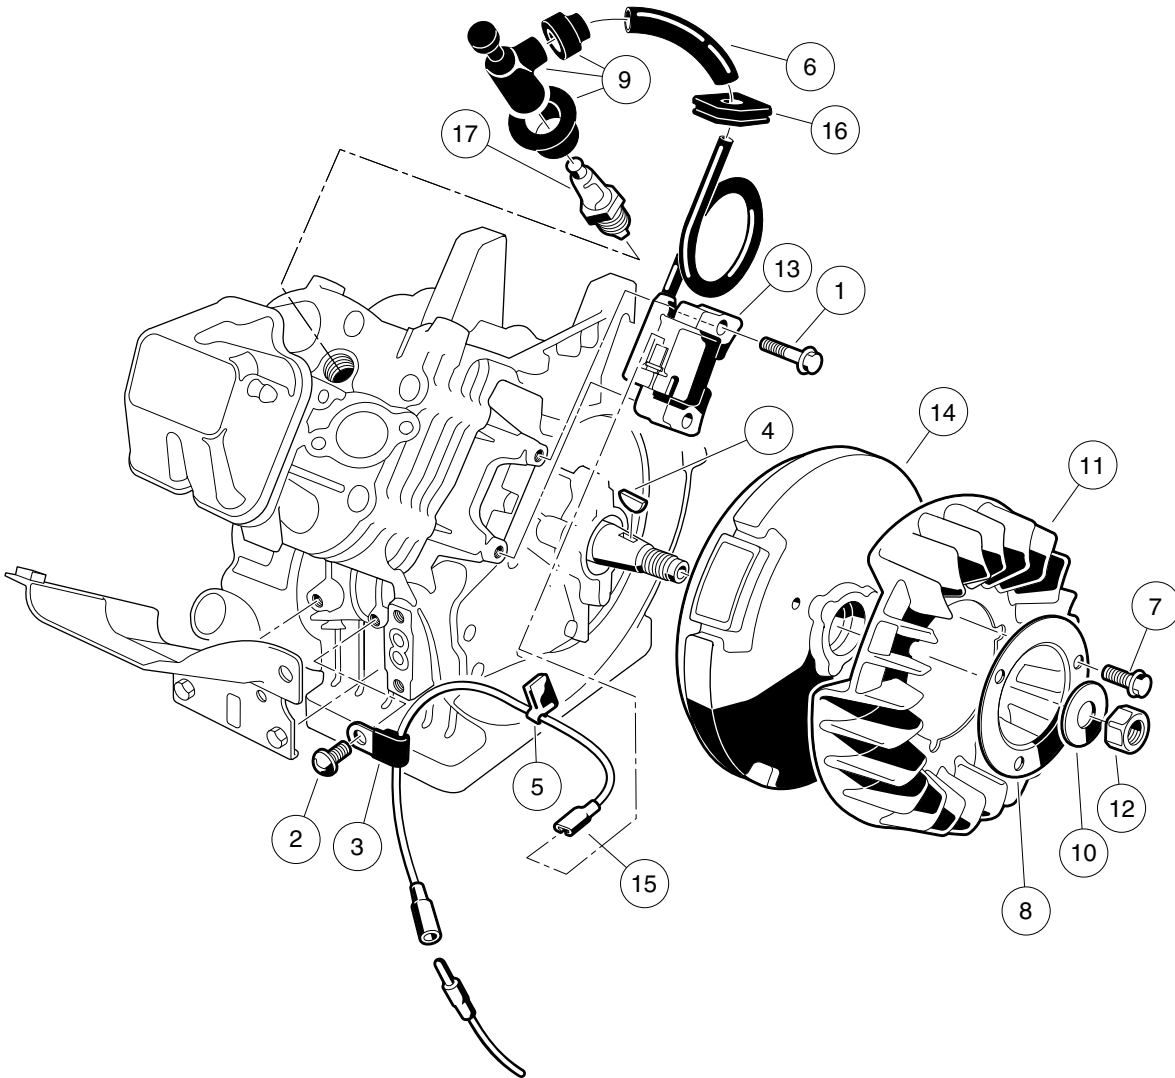


000202-002

AS26 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016455	Bolt, Flange Head	2
2	1016544	Screw	1
3	1016561	Clamp	1
4	1016562	Key	1
5	1016587	Clamp	1
6	1016588	Tube, 7mm X 10mm X 70mm	1
7	1017448	Bolt, Flanged	3
8	1017455	Plate, Flywheel Fan	1
9	1017463	Cap Asm Plug	1
10	1017490	Washer, Flat	1
11	101916301	Fan (cw)	1
12	N/A	Nut, Hex, 18 mm Fine	1
13	103616501	Ignition, Coil Asm	1
14	103616601	Flywheel Comp	1
15	103616701	Ignition, Wire Lead	1
16	103616801	Ignition, Grommet	1
17	AM1232301	Spark Plug, BPR2ES	1

7

G

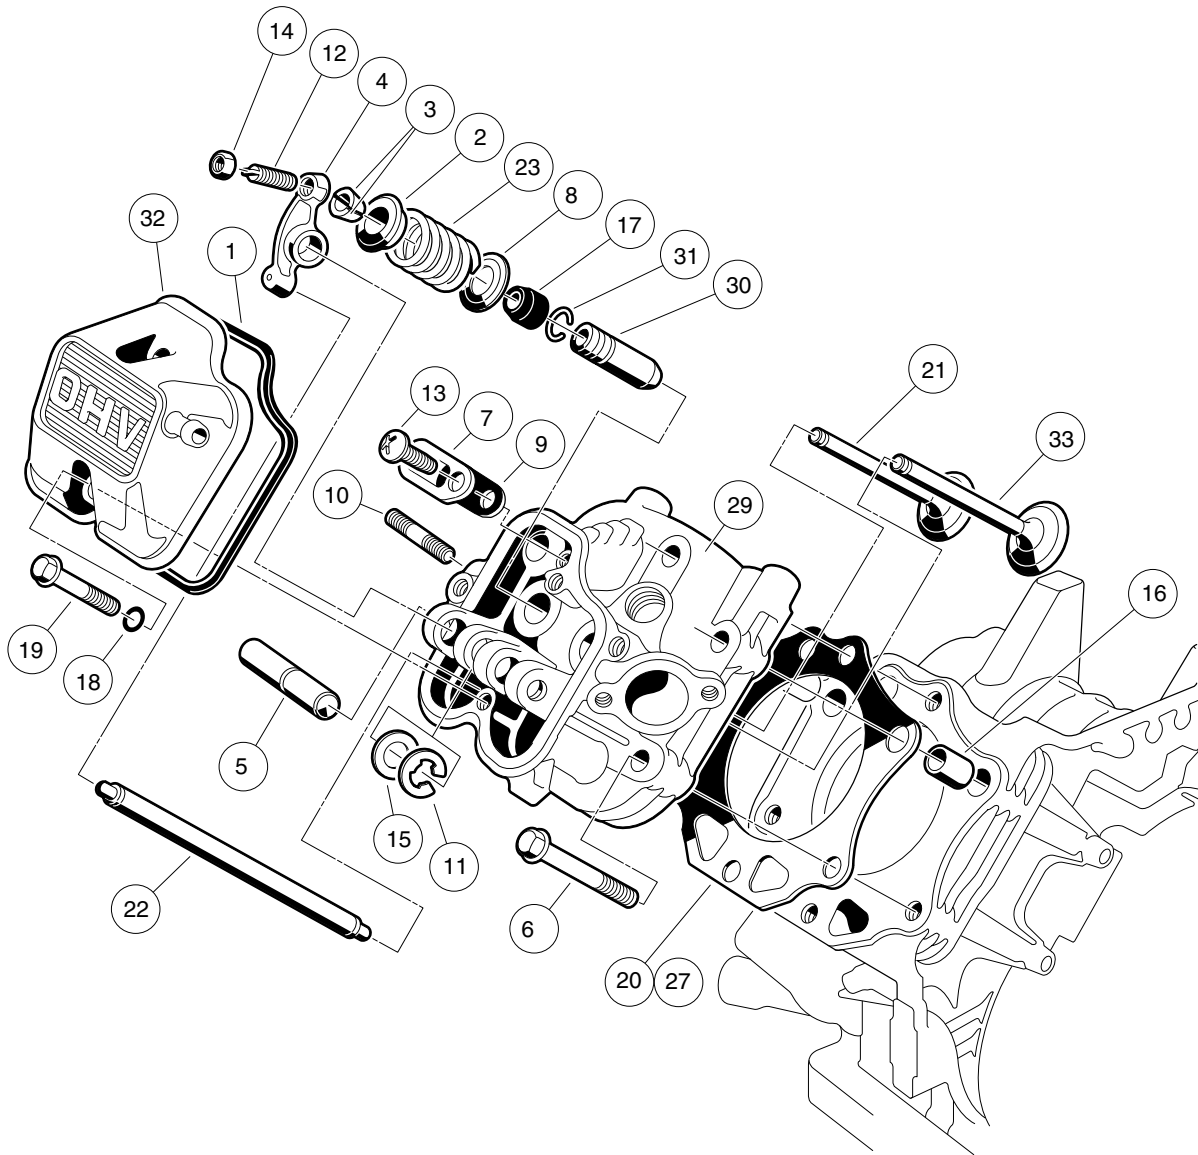


000204-002

AS26 FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016436	Gasket, Rocker Case	1
2	1016449	Retainer, Valve Spring	2
3	1016450	Collet	4
4	1016451	Arm, Rocker	2
5	1016452	Shaft, Rocker	1
6	1016458	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
7	1016474	Plate	1
8	1016479	Seat, Spring	2
9	1016483	Valve	1
10	1016489	Stud, Two-Ended, M8-1.25	2
11	1016517	Circlip, Type-E	1
12	1016542	Screw	2
13	1016544	Screw	1
14	1016545	Nut	2
15	1016549	Washer, 12.1x19x1.8	1
16	1016563	Pin	2
17	1016566	Seal, Oil	2
18	1016569	O-Ring	2
19	1016583	Bolt, 6x35	2
20	1017434	Gasket, Head	1
21	1017445	Valve, Exhaust	1
22	1017454	Rod, Push	2
23	1017473	Spring, Engine Valve	2
24	102304801	Kit, Gasket, FE350 (includes items 25 through 28)	1
25	1016440	Gasket, Engine to Insulator	1
26	1016904	Gasket, Exhaust	1
27	1017434	Gasket, Head	1
28	1017443	Gasket, Crankcase Cover	1
29	103615601	Cylinder Head, Fe350 S26, S27	1
30	103615701	Case, Rocker, Fe350 S26 S27	1
31	103616301	Valve, Intake, Hard Tip	1
Note: Item 24 is not a component of the FE350 engine.			

7

G

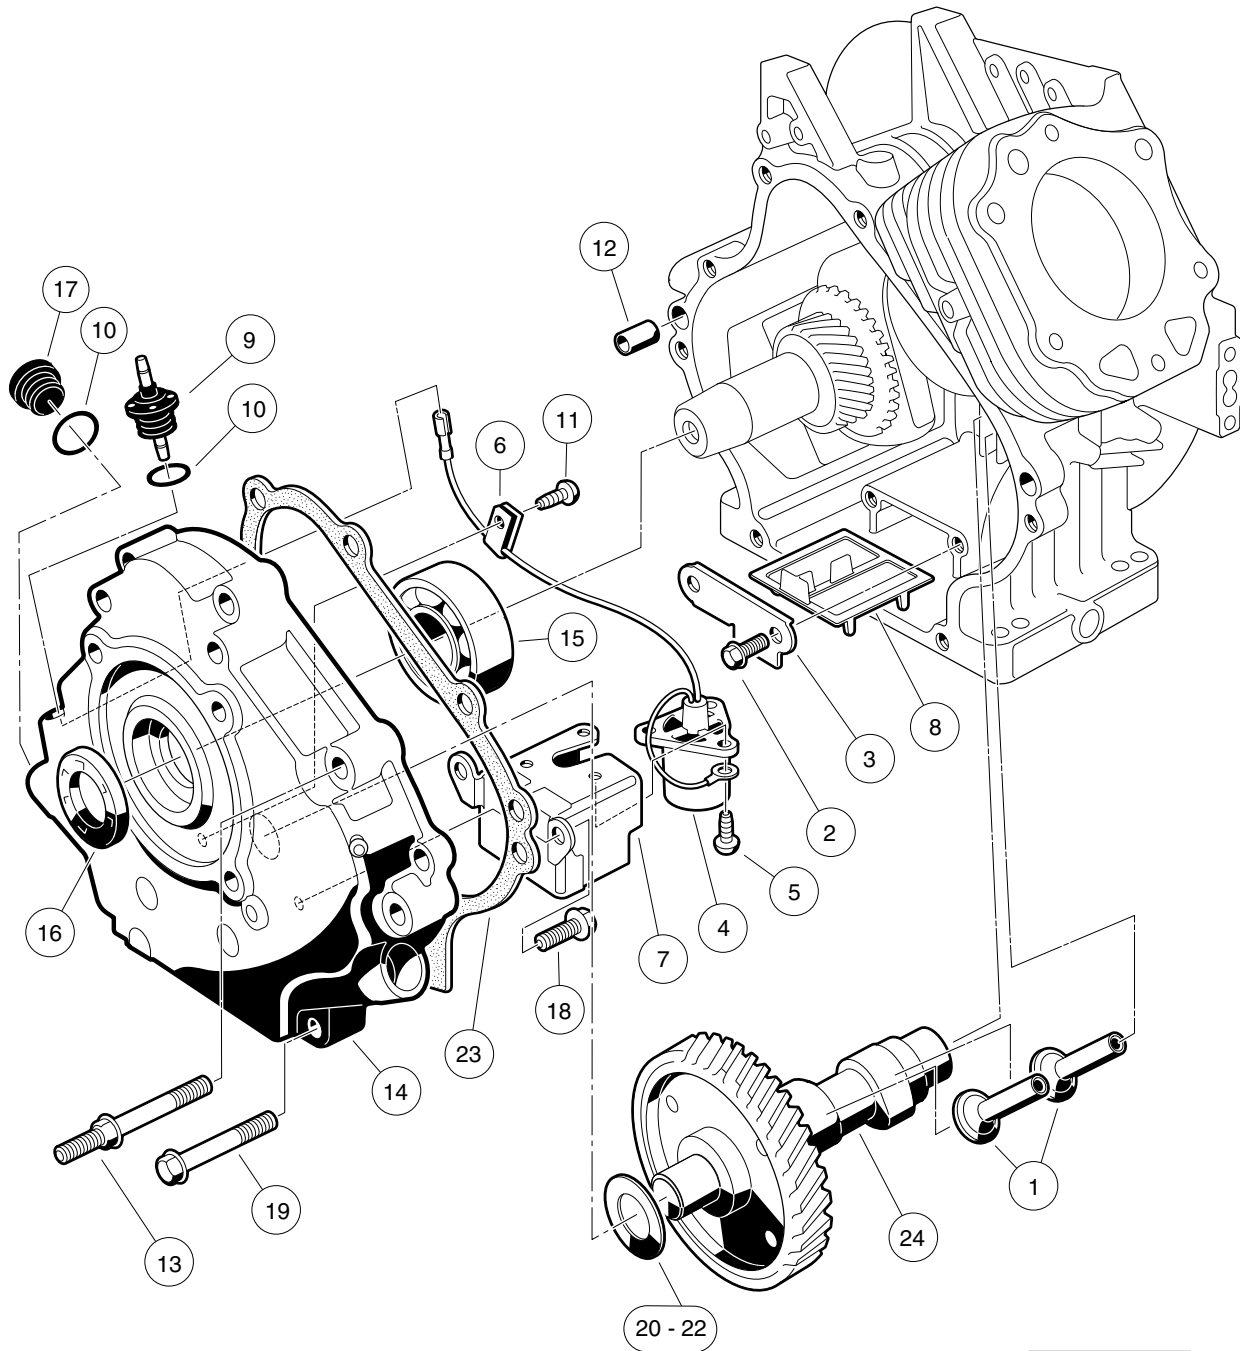


AS26 FE350 ENGINE – CRANKCASE AND CRANKSHAFT OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016453	Tappet	2
2	1016454	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
3	1016472	Plate, Oil Filter Screen	1
4	1016494	Sensor, Oil Level	1
5	1016496	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
6	1016506	Clamp	1
7	1016510	Bracket, Switch, Oil Level	1
8	1016521	Screen, Oil Filter	1
9	1016535	Connector, Cord	1
10	1016538	O-Ring	2
11	1016544	Screw	1
12	1016564	Pin	2
13	1016584	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
14	1017472	Cover Crankcase	1
15	1017487	Bearing, Ball	1
16	1017504	Seal, Oil	1
17	1017508	Plug	1
18	1017513	Bolt Switch Bracket	2
19	1017514	Screw, M8-1.25 X 45mm Hex	6
20	101751801	Shim, 0.3	1
21	101751802	Shim, 0.4	1
22	101751803	Shim, 0.5	1
23	103615901	Gasket, Crankcase Cover	1
24	103616401	Camshaft Comp	1

7

G

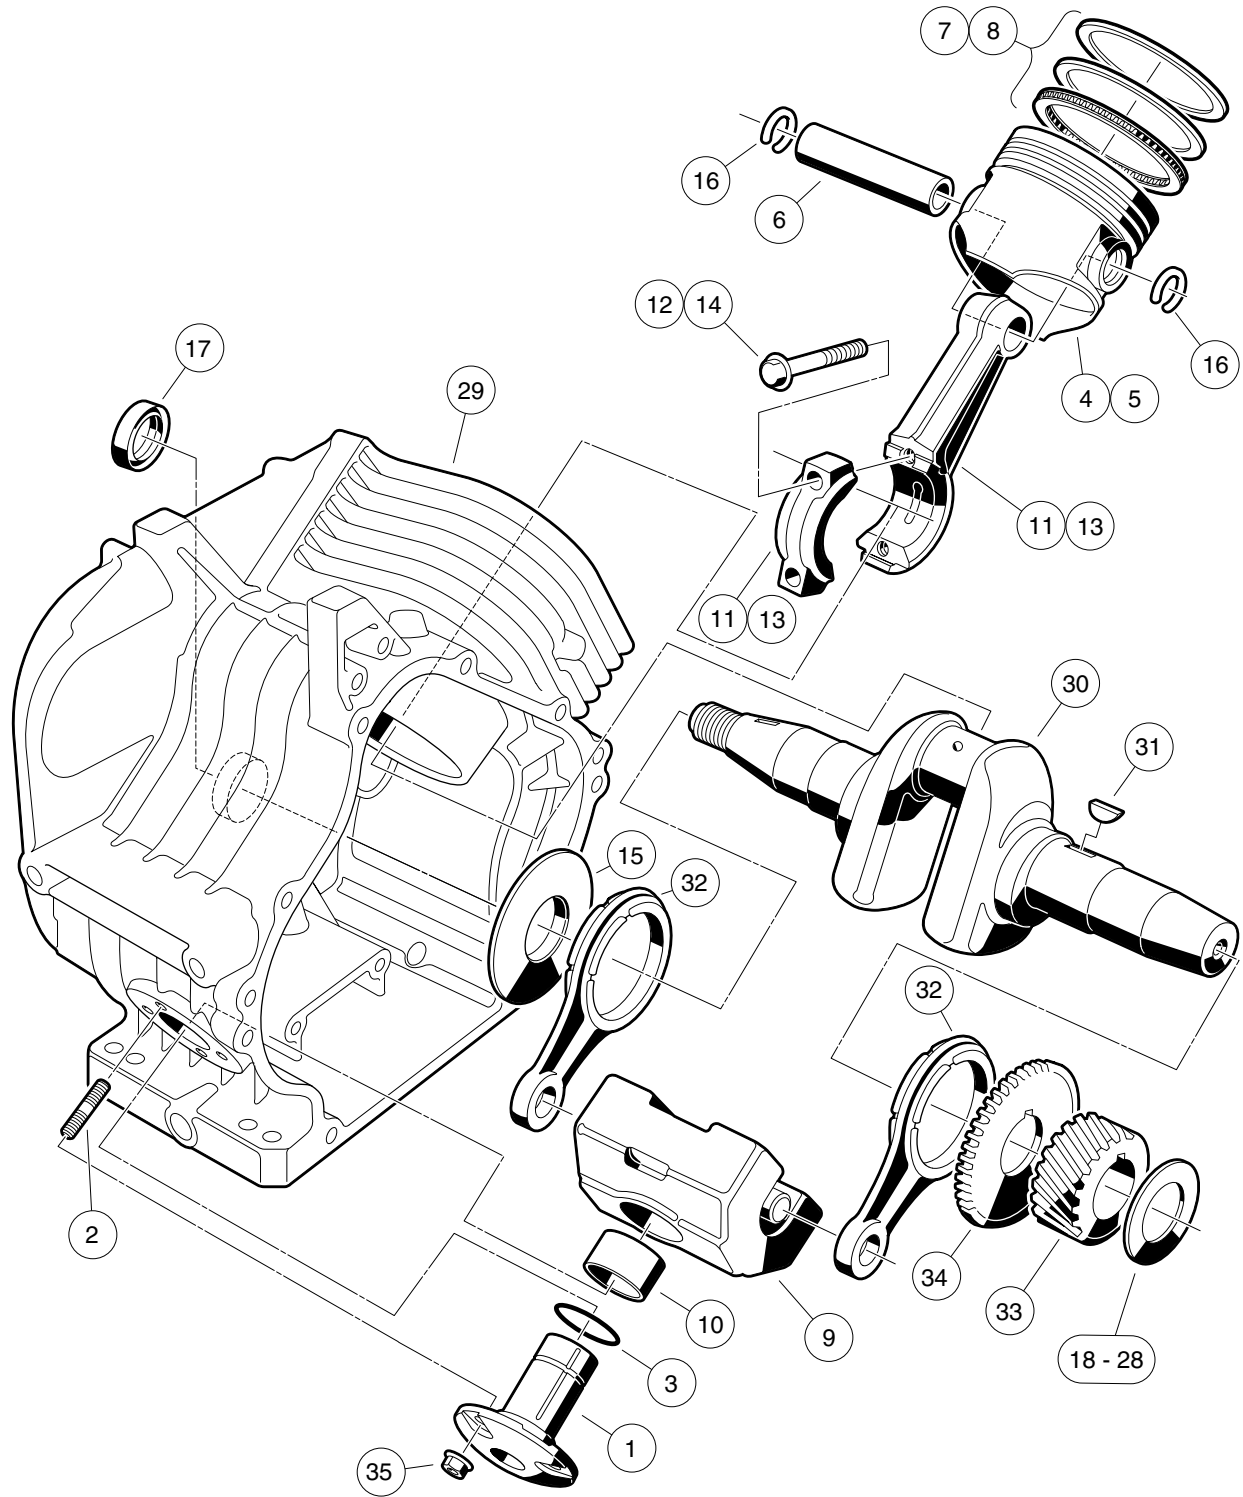

000206-001


AS26 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016470	Shaft, Guide, Counterbalance	1
2	1016541	Stud, 6x14	4
3	1016571	O-Ring	1
4	101744901	Piston, Standard	1
5	101744902	Piston, 0.50 mm Oversize	1
6	1017450	Pin, Piston	1
7	101745101	Ring Set, Standard Piston	1
8	101745102	Ring Set, Piston, 0.50 mm Oversize	1
9	1017453	Fe400 Counterbalance Weight (includes item 10)	1
10	1017510	Bearing, Plain	1
11	101745701	Asm, Con. Rod Std (includes item 12)	1
12	1017512	Bolt	2
13	101745702	Rod Assembly Connecting Rod 0.5mm (includes item 14)	1
14	1017512	Bolt	2
15	1017501	Spacer	1
16	1017502	Snap Ring	2
17	1017503	Seal, Oil	1
18	101773301	Shim, Crankshaft, 1.18mm	1
19	101773302	Shim, Crankshaft, 1.25mm	1
20	101773303	Shim, Crankshaft, 1.32mm	1
21	101773304	Shim, Crankshaft, 1.39mm	1
22	101773305	Shim, Crankshaft, 1.46mm	1
23	101773306	Shim, Crankshaft, 1.53mm	1
24	101773307	Shim, Crankshaft, 1.60mm	1
25	101773308	Shim, Crankshaft, 1.67mm	1
26	101773309	Shim, Crankshaft, 1.74mm	1
27	101773310	Shim, Crankshaft, 1.11mm	1
28	101773311	Shim, Crankshaft, 1.81mm	1
29	103615801	Crankcase, Fe350 S26 S27	1
30	N/A	Crankshaft, Complete (includes items 31 through 34)	1
31	1016562	Key	1
32	1017471	Rod	2
33	N/A	Gear, Helical	1
34	N/A	Gear, Spur	1
35	103616201	Nut, M6 Flange	4

7
G

7

G

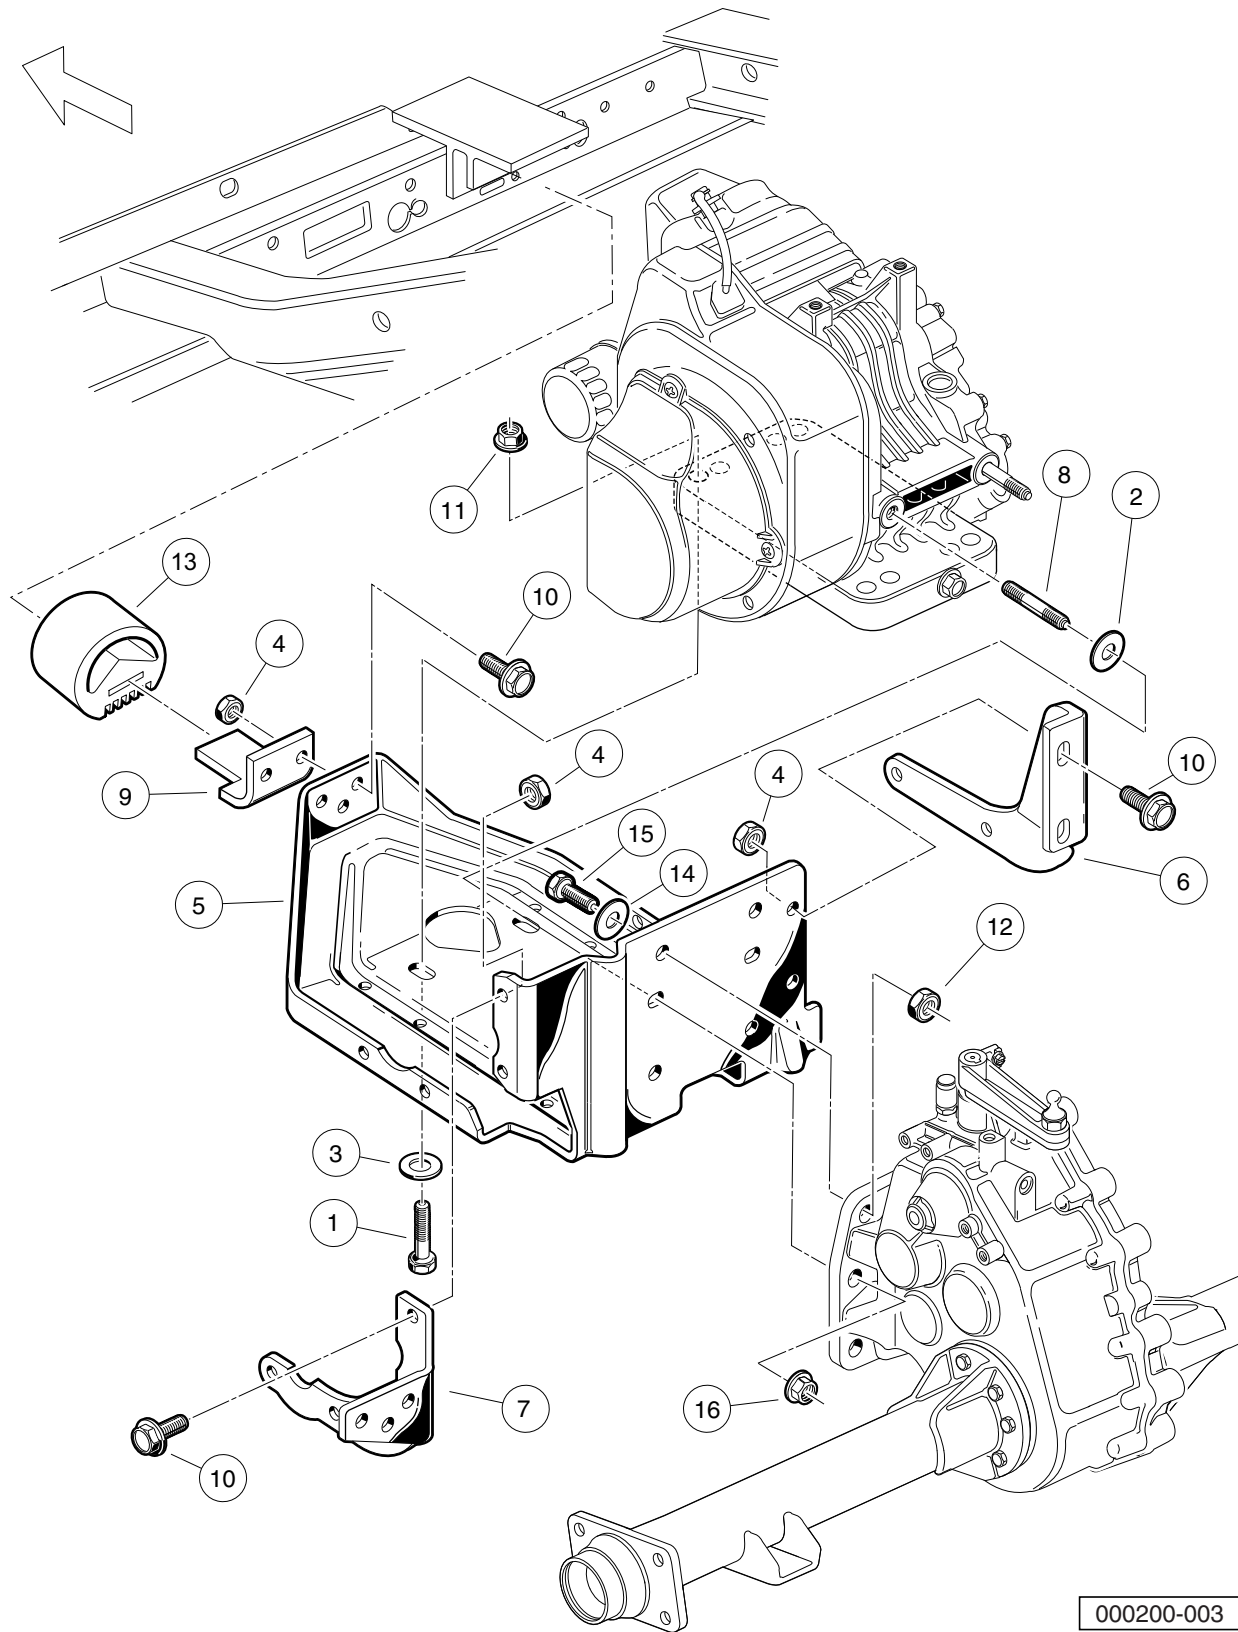

000200-003

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010577	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	1011697	Washer, 5/16 Flat	2
3	1012571	Washer, 5/16 Extra Thick Flat	4
4	1013924	Nut, 5/16-24 Hex Head Cone	10
5	101827101	Plate, Engine Mounting	1
6	101832601	Stiffener (PTO Side)	1
7	101832701	Stiffener (Flywheel Side)	1
8	101833101	Stud, M8-1.25 X 50 mm Two-Ended	2
9	101834601	Snubber Bracket	1
10	101884801	Screw, 5/16-24 X 0.875 Grade-8	10
11	101963401	Locknut, 5/16-18 Hex Flange	4
12	102065901	Locknut, 3/8-16 Flanged Dimple	4
13	102540301	Inner Frame Snubber	1
14	334	Washer, 3/8 Type A Flat	4
15	705	Screw, Cap-hex Hd 3/8-16x1.25	4
16	96704416	Nut Flg, M8 X 1.25 Serrated	2

7

G


7

G

FE350 ENGINE WITHOUT ACR

8

G

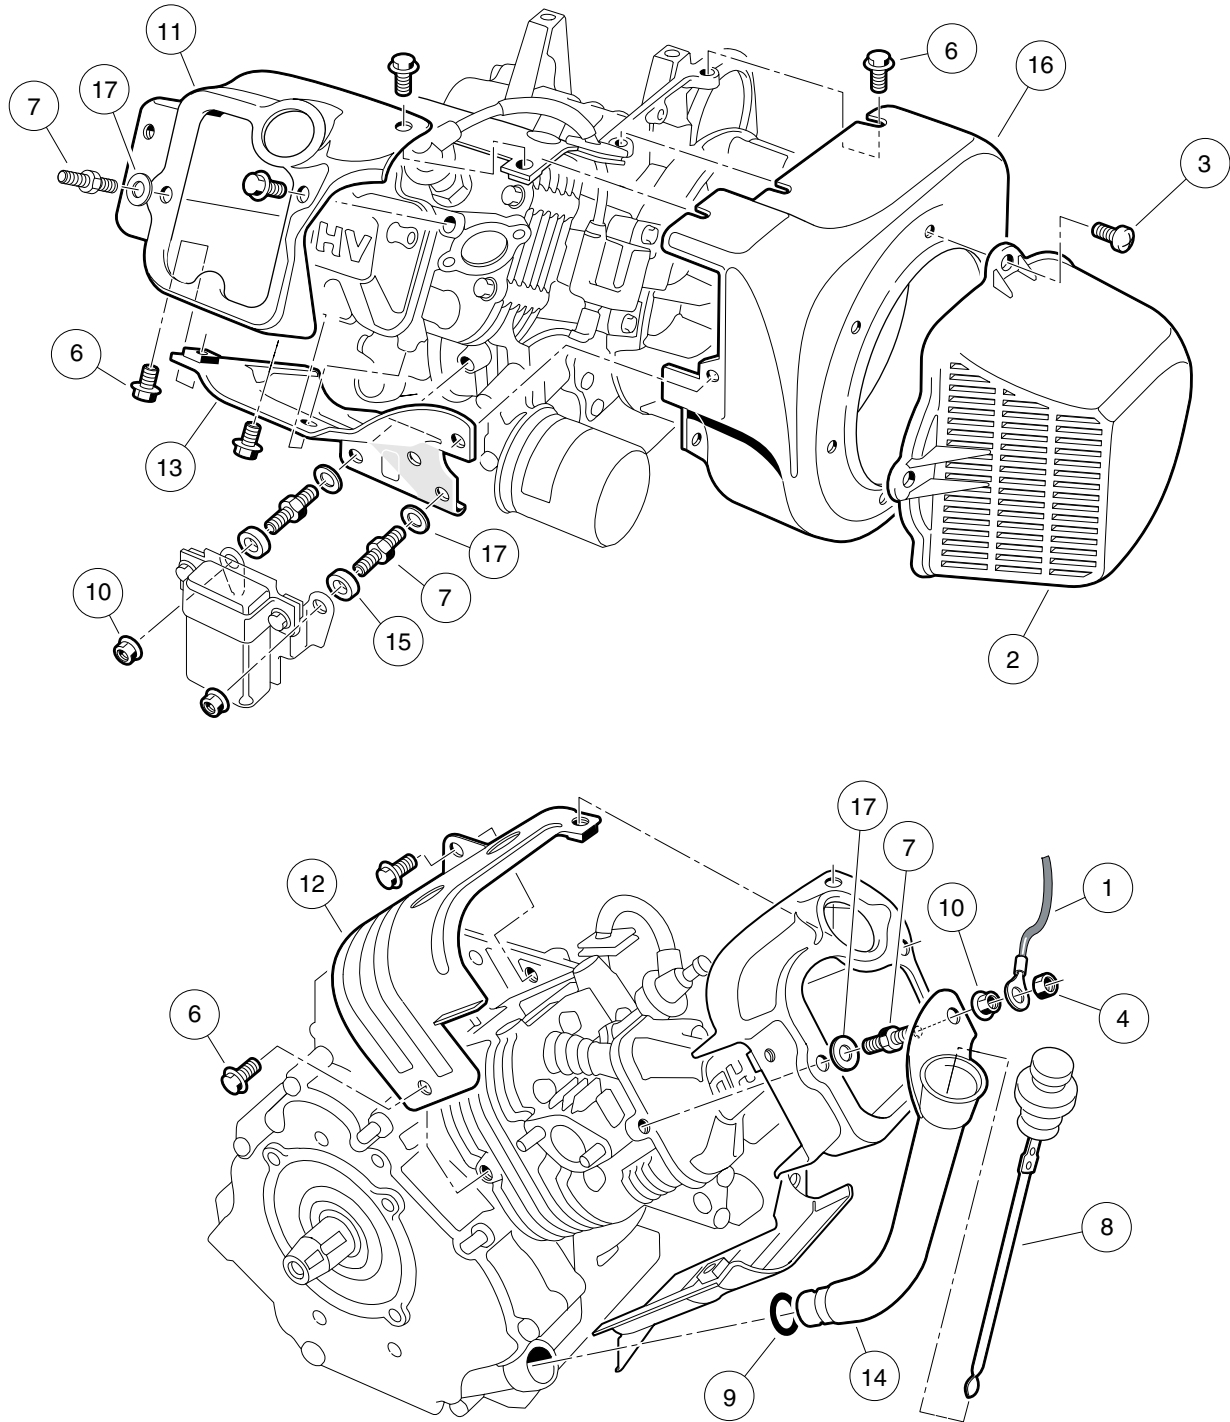


000201-001

AS11 FE350 ENGINE WITHOUT ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015332	Wire Assembly, #10, Uninsulated	1
2	1015649	Shroud, Fan	1
3	1015969	Screw, M6-1.00 X 10mm Pan Hd	4
4	101887601	Locknut, M6-1.00 Nylon Insert	1
5	101953802	Engine, FE350 (cw) without ACR * (includes items 6 through 17)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	14
7	1016507	Bolt, Two-Ended	3
8	1016531	Dipstick	1
9	1016539	O-Ring	1
10	1016547	Nut, M6 Flange	3
11	1017474	Shroud, Engine	1
12	1017475	Shroud, Engine	1
13	1017476	Shroud, Engine	1
14	1017486	Tube, Oil Filler	1
15	1017500	Spacer 6.50 X 12 X 5.5	2
16	101916101	Housing, FE350 Fan	1
17	N/A	Washer, 6mm Flat	3
* Note: FE350 engine component listings span several pages.			


8
G

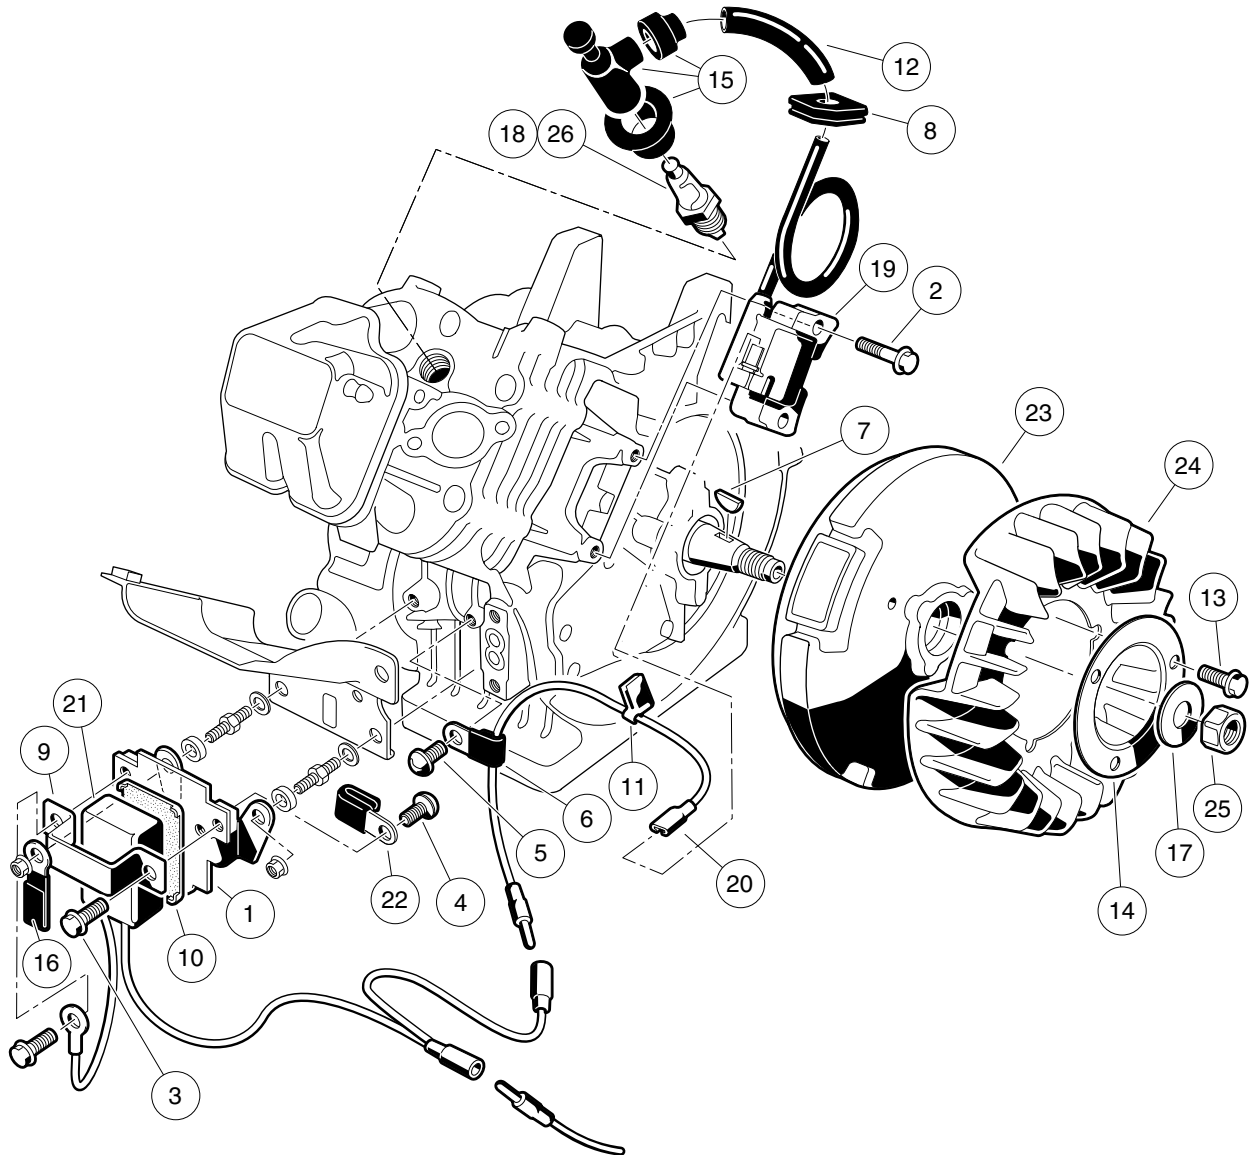

000202-001

AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016445	Bracket, RPM Limiter	1	
2	1016455	Bolt, Flange Head	2	
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2	
4	1016497	Screw, Pan WP Cross	1	
5	1016544	Screw	1	
6	1016561	Clamp	1	
7	1016562	Key	1	
8	1016578	Ignition, Grommet	1	
9	1016579	Band, RPM Limiter Mount	1	
10	1016586	Damper, RPM Limiter	1	
11	1016587	Clamp	1	
12	1016588	Tube, 7mm X 10mm X 70mm	1	
13	1017448	Bolt, Flanged	3	
14	1017455	Plate, Flywheel Fan	1	
15	1017463	Cap Asm Plug	1	
16	1017468	Clamp	1	
17	1017490	Washer, Flat	1	
18	101881101	Spark Plug, OHV (Autolite)	1	
19	101909201	Coil, Ignition	1	
20	101909301	Lead Wire Assy	1	
21	101909401	Limiter, RPM	1	
22	101909501	Clamp, Steel	1	
23	101916201	Flywheel	1	
24	101916301	Fan (cw)	1	
25	N/A	Nut, Hex, 18 mm Fine	1	
26	AM10724	Spark Plug, OHV (NGK)	1	

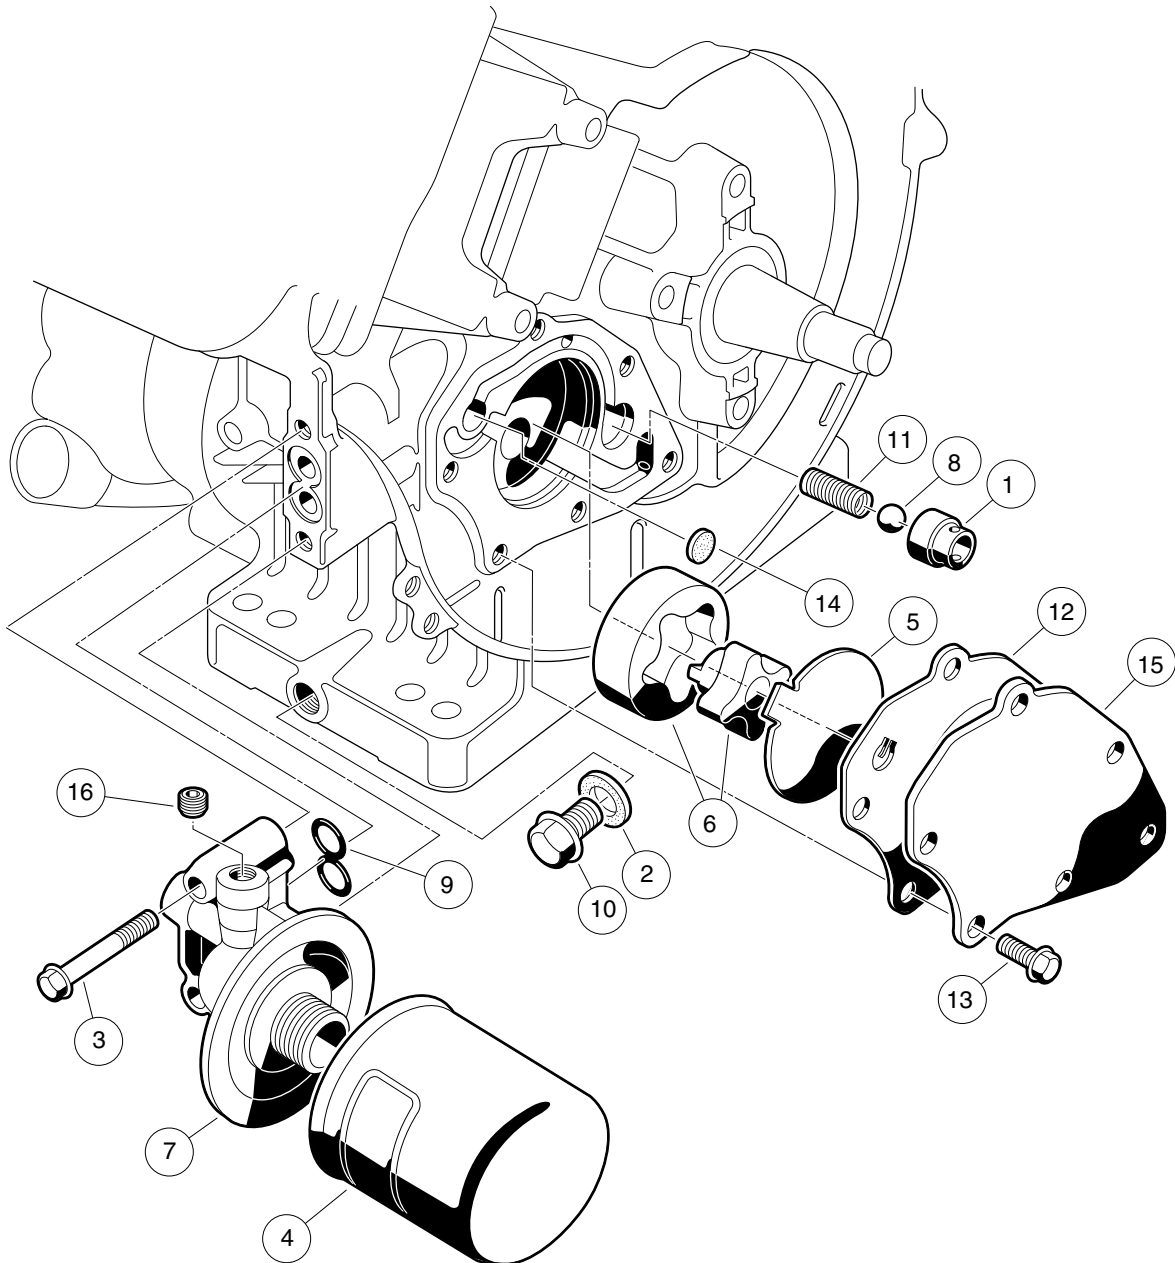

000203-001

FE350 ENGINE – OIL CIRCULATION


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016429	Seat, Value Oil Press Relief	1	
2	1016432	Gasket, Drain Plug	1	
3	1016457	Bolt, Flange Head	2	
4	1016467	Filter, Oil	1	
5	1016473	Plate, Oil Pump	1	
6	101648203	Oil Pump And Rotor	1	
7	1016502	Bracket, Oil Filter Mount	1	
8	1016537	Ball, Steel, Press, Relief	1	
9	1016570	O-Ring	1	
10	1016576	Plug, Drain	1	
11	1016581	Spring	1	
12	1017442	Gasket	1	
13	1017456	Bolt, Flanged	6	
14	1017458	Filter	1	
15	1017460	Cover, Pump	1	
16	1017507	Plug	2	

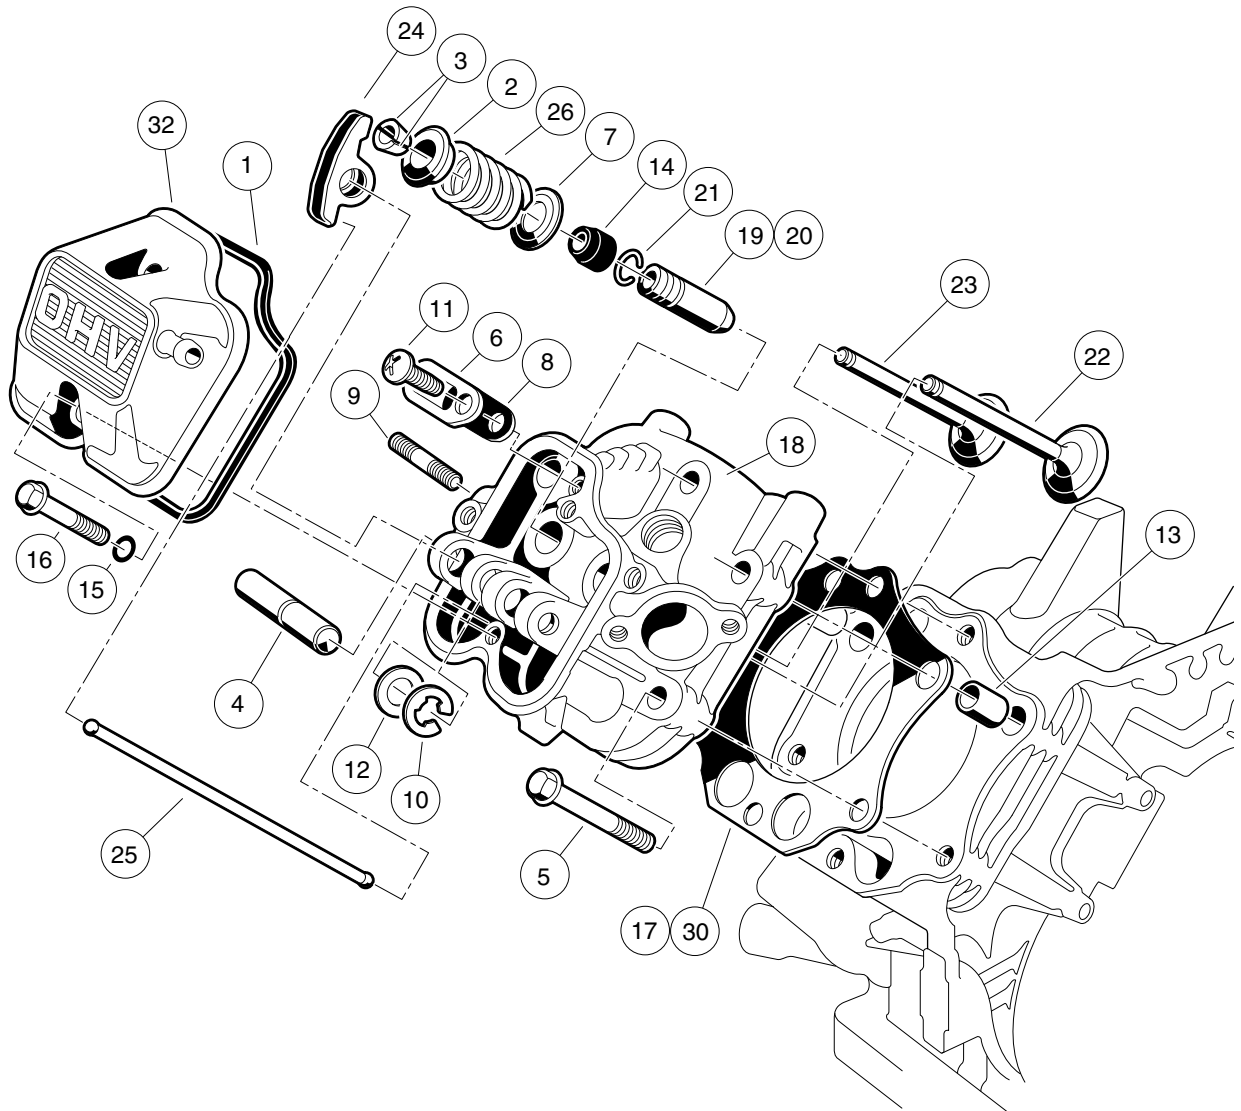

000204-001

AS11 FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	1016436	Gasket, Rocker Case	1		
2	1016449	Retainer, Valve Spring	2		
3	1016450	Collet	4		
4	1016452	Shaft, Rocker	1		
5	1016458	Bolt, Flange Head, M8 x 1.25 x 45 mm	6		
6	1016474	Plate	1		
7	1016479	Seat, Spring	2		
8	1016483	Valve	1		
9	1016489	Stud, Two-Ended, M8-1.25	2		
10	1016517	Circlip, Type-E	1		
11	1016544	Screw	1		
12	1016549	Washer, 12.1x19x1.8	1		
13	1016563	Pin	2		
14	1016566	Seal, Oil	2		
15	1016569	O-Ring	2		
16	1016583	Bolt, 6x35	2		
17	1017434	Gasket, Head	1		
18	1017435	Assembly, Cylinder Head, FE350 (includes items 19 through 21)	1		
19	1016518	Guide, Valve, Exhaust	1		
20	1016519	Guide, Valve	1		
21	1016560	Snap Ring	2		
22	1017444	Valve, Intake	1		
23	1017445	Valve, Exhaust	1		
24	1017446	Arm, Rocker	2		
25	1017454	Rod, Push	2		
26	1017473	Spring, Engine Valve	2		
27	102304801	Kit, Gasket, FE350 (includes items 28 through 31)	1		
28	1016440	Gasket, Engine to Insulator	1		
29	1016904	Gasket, Exhaust	1		
30	1017434	Gasket, Head	1		
31	1017443	Gasket, Crankcase Cover	1		
32	102753401	Case, Rocker	1		
		Note: Item 28 is not a component of the FE350 engine.			

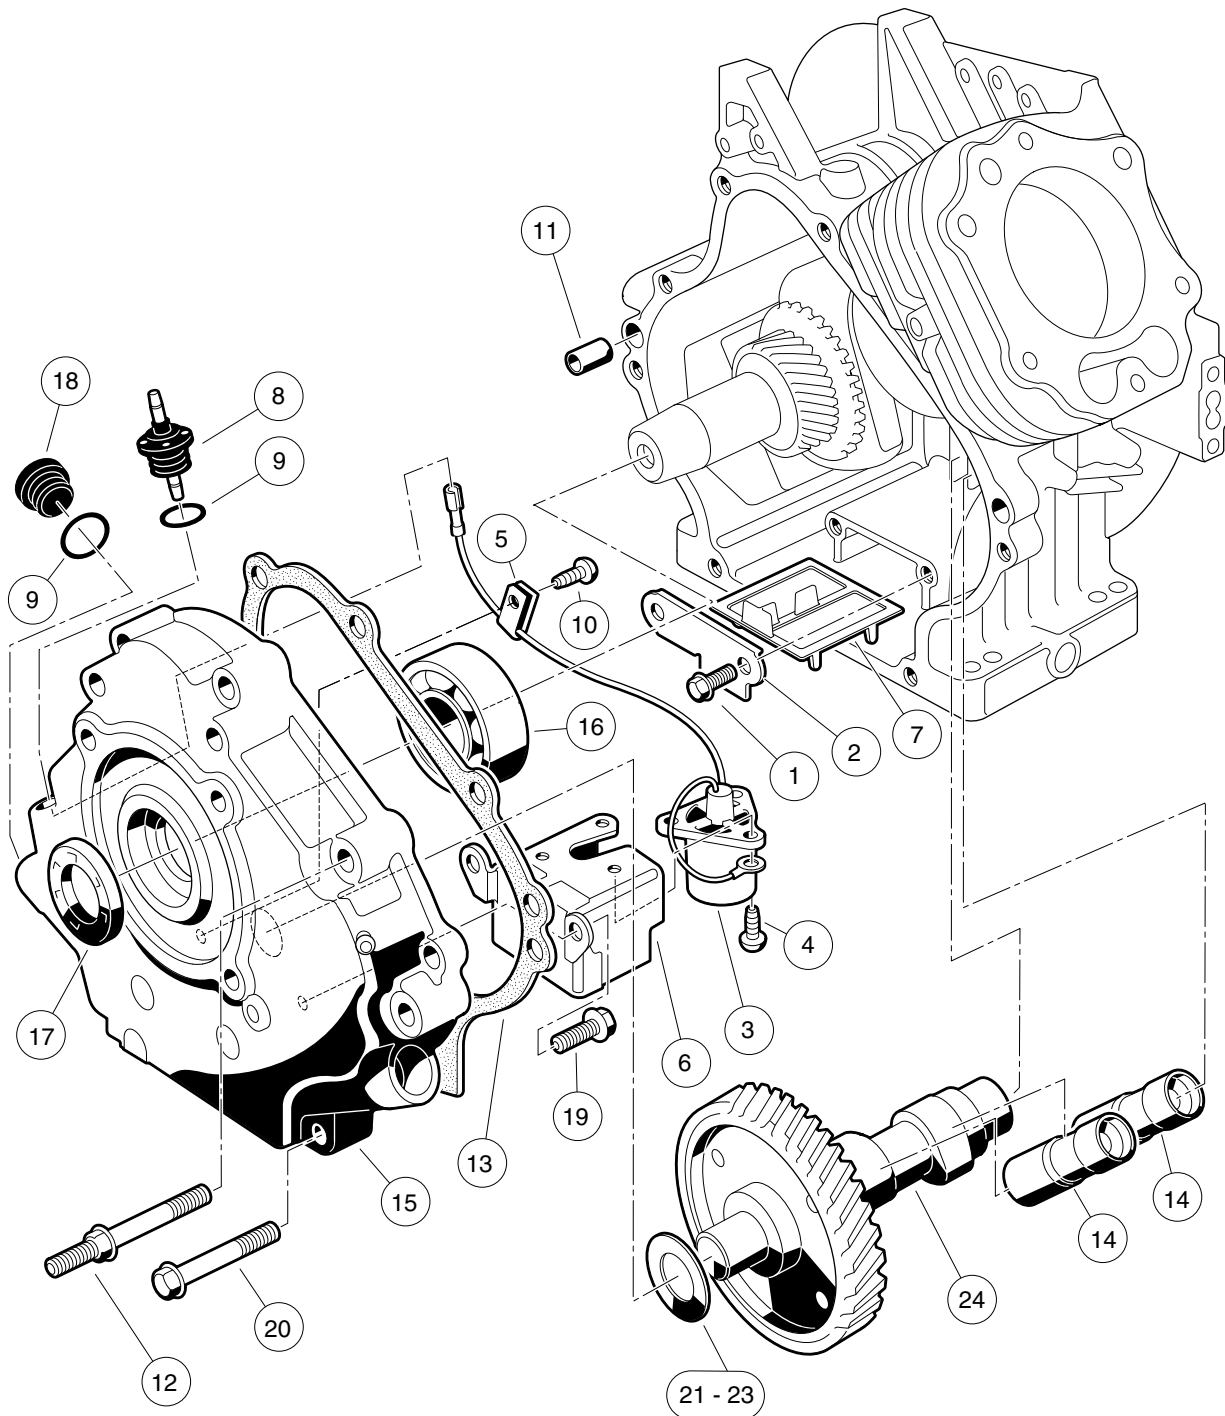


000205-002

AS11 FE350 ENGINE WITHOUT ACR – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016454	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
2	1016472	Plate, Oil Filter Screen	1
3	1016494	Sensor, Oil Level	1
4	1016496	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
5	1016506	Clamp	1
6	1016510	Bracket, Switch, Oil Level	1
7	1016521	Screen, Oil Filter	1
8	1016535	Connector, Cord	1
9	1016538	O-Ring	2
10	1016544	Screw	1
11	1016564	Pin	2
12	1016584	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
13	1017443	Gasket, Crankcase Cover	1
14	1017447	Adjuster, Lash	2
15	1017472	Cover Crankcase	1
16	1017487	Bearing, Ball	1
17	1017504	Seal, Oil	1
18	1017508	Plug	1
19	1017513	Bolt Switch Bracket	2
20	1017514	Screw, M8-1.25 X 45mm Hex	6
21	101751801	Shim, 0.3	1
22	101751802	Shim, 0.4	1
23	101751803	Shim, 0.5	1
24	102431001	Camshaft, FE350 without ACR, 44-Tooth	1

8
G

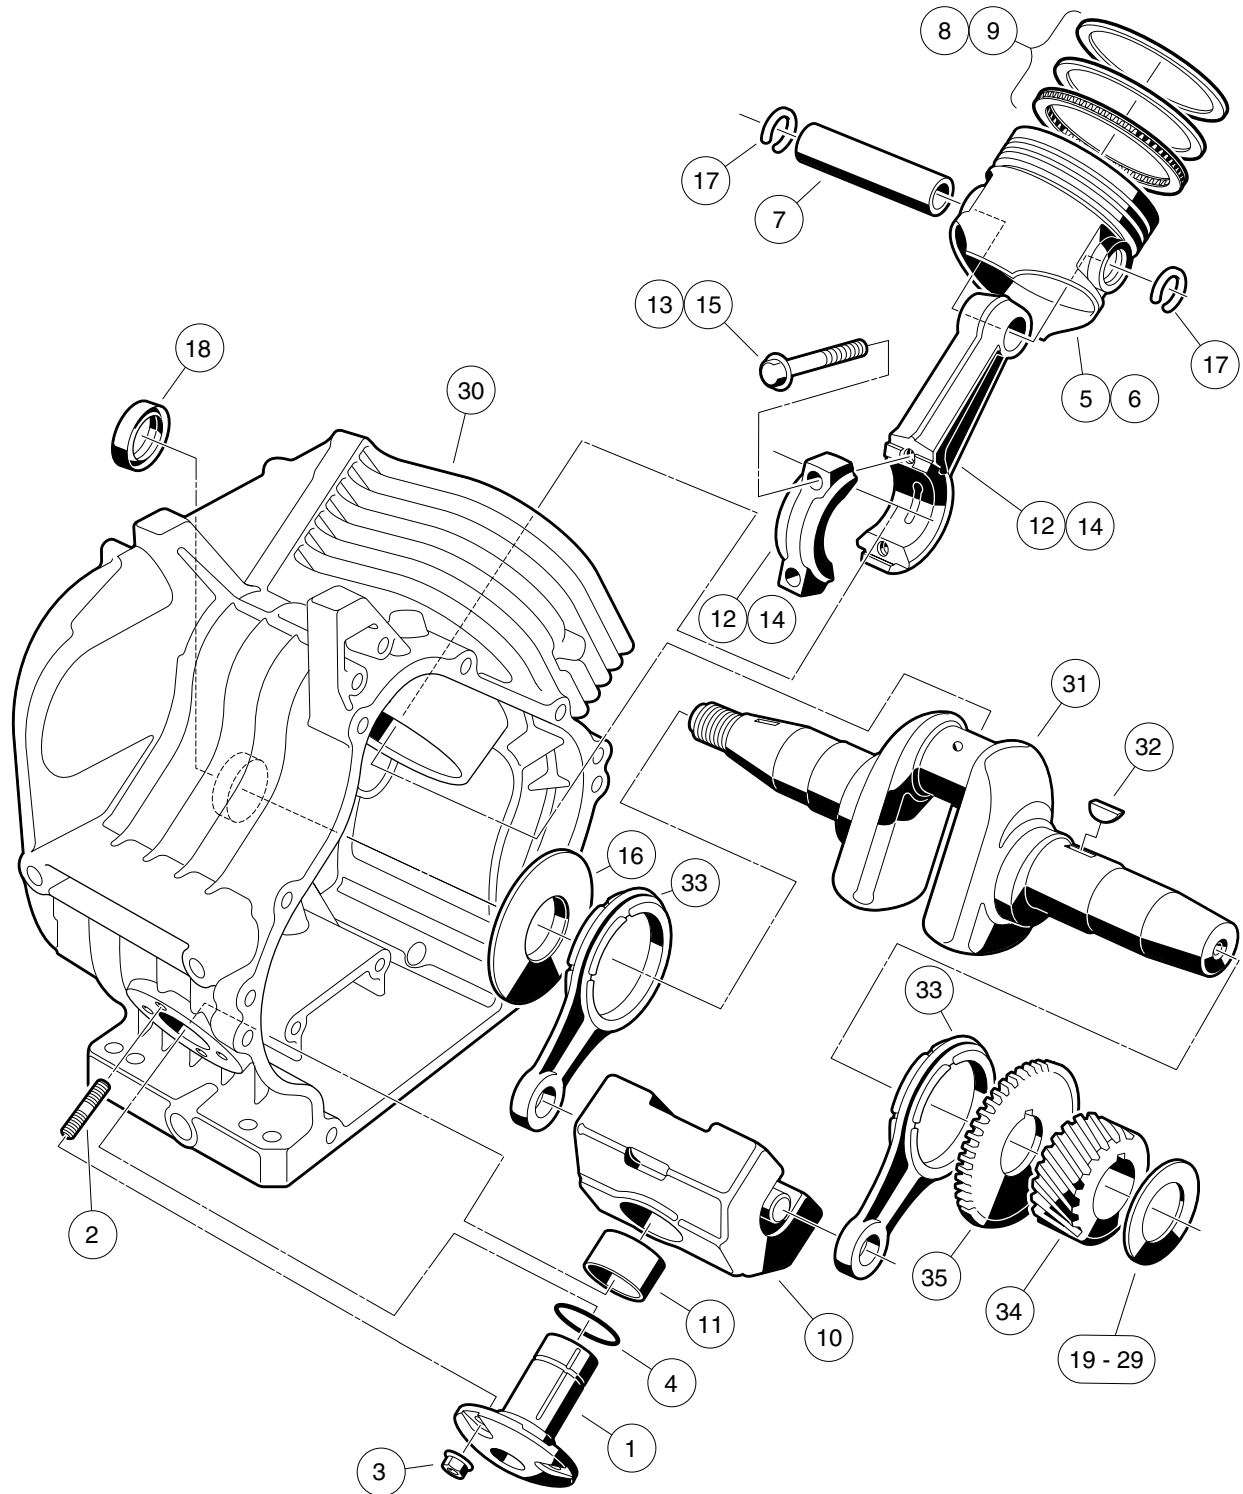

000206-001

AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016470	Shaft, Guide, Counterbalance	1
2	1016541	Stud, 6x14	4
3	1016547	Nut, M6 Flange	4
4	1016571	O-Ring	1
5	101744901	Piston, Standard	1
6	101744902	Piston, 0.50 mm Oversize	1
7	1017450	Pin, Piston	1
8	101745101	Ring Set, Standard Piston	1
9	101745102	Ring Set, Piston, 0.50 mm Oversize	1
10	1017453	Fe400 Counterbalance Weight (includes item 11)	1
11	1017510	Bearing, Plain	1
12	101745701	Asm, Con. Rod Std (includes item 13)	1
13	1017512	Bolt	2
14	101745702	Rod Assembly Connecting Rod 0.5mm (includes item 15)	1
15	1017512	Bolt	2
16	1017501	Spacer	1
17	1017502	Snap Ring	2
18	1017503	Seal, Oil	1
19	101773301	Shim, Crankshaft, 1.18mm	1
20	101773302	Shim, Crankshaft, 1.25mm	1
21	101773303	Shim, Crankshaft, 1.32mm	1
22	101773304	Shim, Crankshaft, 1.39mm	1
23	101773305	Shim, Crankshaft, 1.46mm	1
24	101773306	Shim, Crankshaft, 1.53mm	1
25	101773307	Shim, Crankshaft, 1.60mm	1
26	101773308	Shim, Crankshaft, 1.67mm	1
27	101773309	Shim, Crankshaft, 1.74mm	1
28	101773310	Shim, Crankshaft, 1.11mm	1
29	101773311	Shim, Crankshaft, 1.81mm	1
30	101916001	Crankcase Complete, FE350 (cw)	1
31	102430901	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)	1
32	1016562	Key	1
33	1017471	Rod	2
34	N/A	Gear, Helical	1
35	N/A	Gear, Spur	1

8

G

8

G

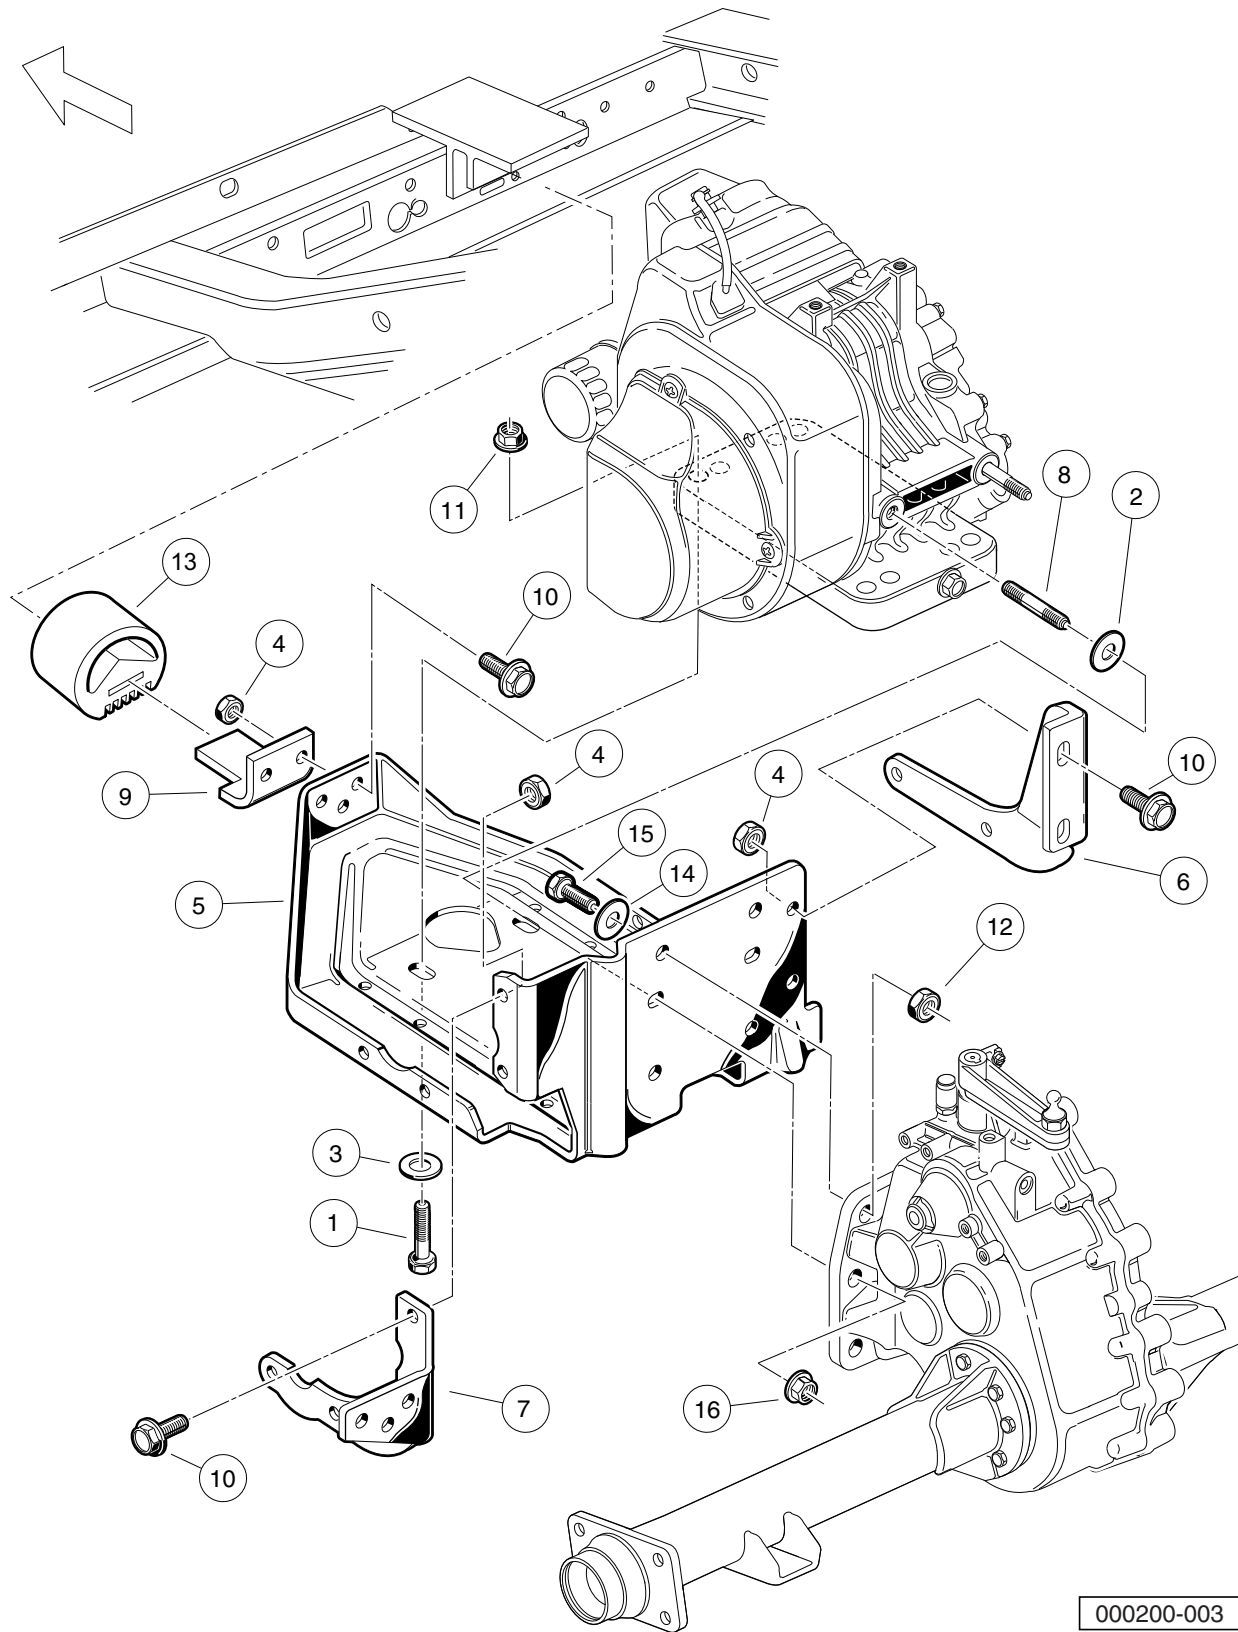

000200-003

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1010577	Bolt, Hex-Head, 5/16-18 X 1.50	4	
2	1011697	Washer, 5/16 Flat	2	
3	1012571	Washer, 5/16 Extra Thick Flat	4	
4	1013924	Nut, 5/16-24 Hex Head Cone	10	
5	101827101	Plate, Engine Mounting	1	
6	101832601	Stiffener (PTO Side)	1	
7	101832701	Stiffener (Flywheel Side)	1	
8	101833101	Stud, M8-1.25 X 50 mm Two-Ended	2	
9	101834601	Snubber Bracket	1	
10	101884801	Screw, 5/16-24 X 0.875 Grade-8	10	
11	101963401	Locknut, 5/16-18 Hex Flange	4	
12	102065901	Locknut, 3/8-16 Flanged Dimple	4	
13	102540301	Inner Frame Snubber	1	
14	334	Washer, 3/8 Type A Flat	4	
15	705	Screw, Cap-hex Hd 3/8-16x1.25	4	
16	96704416	Nut Flg, M8 X 1.25 Serrated	2	


8

G

FUEL, INTAKE, AND GOVERNOR SYSTEM

9

G

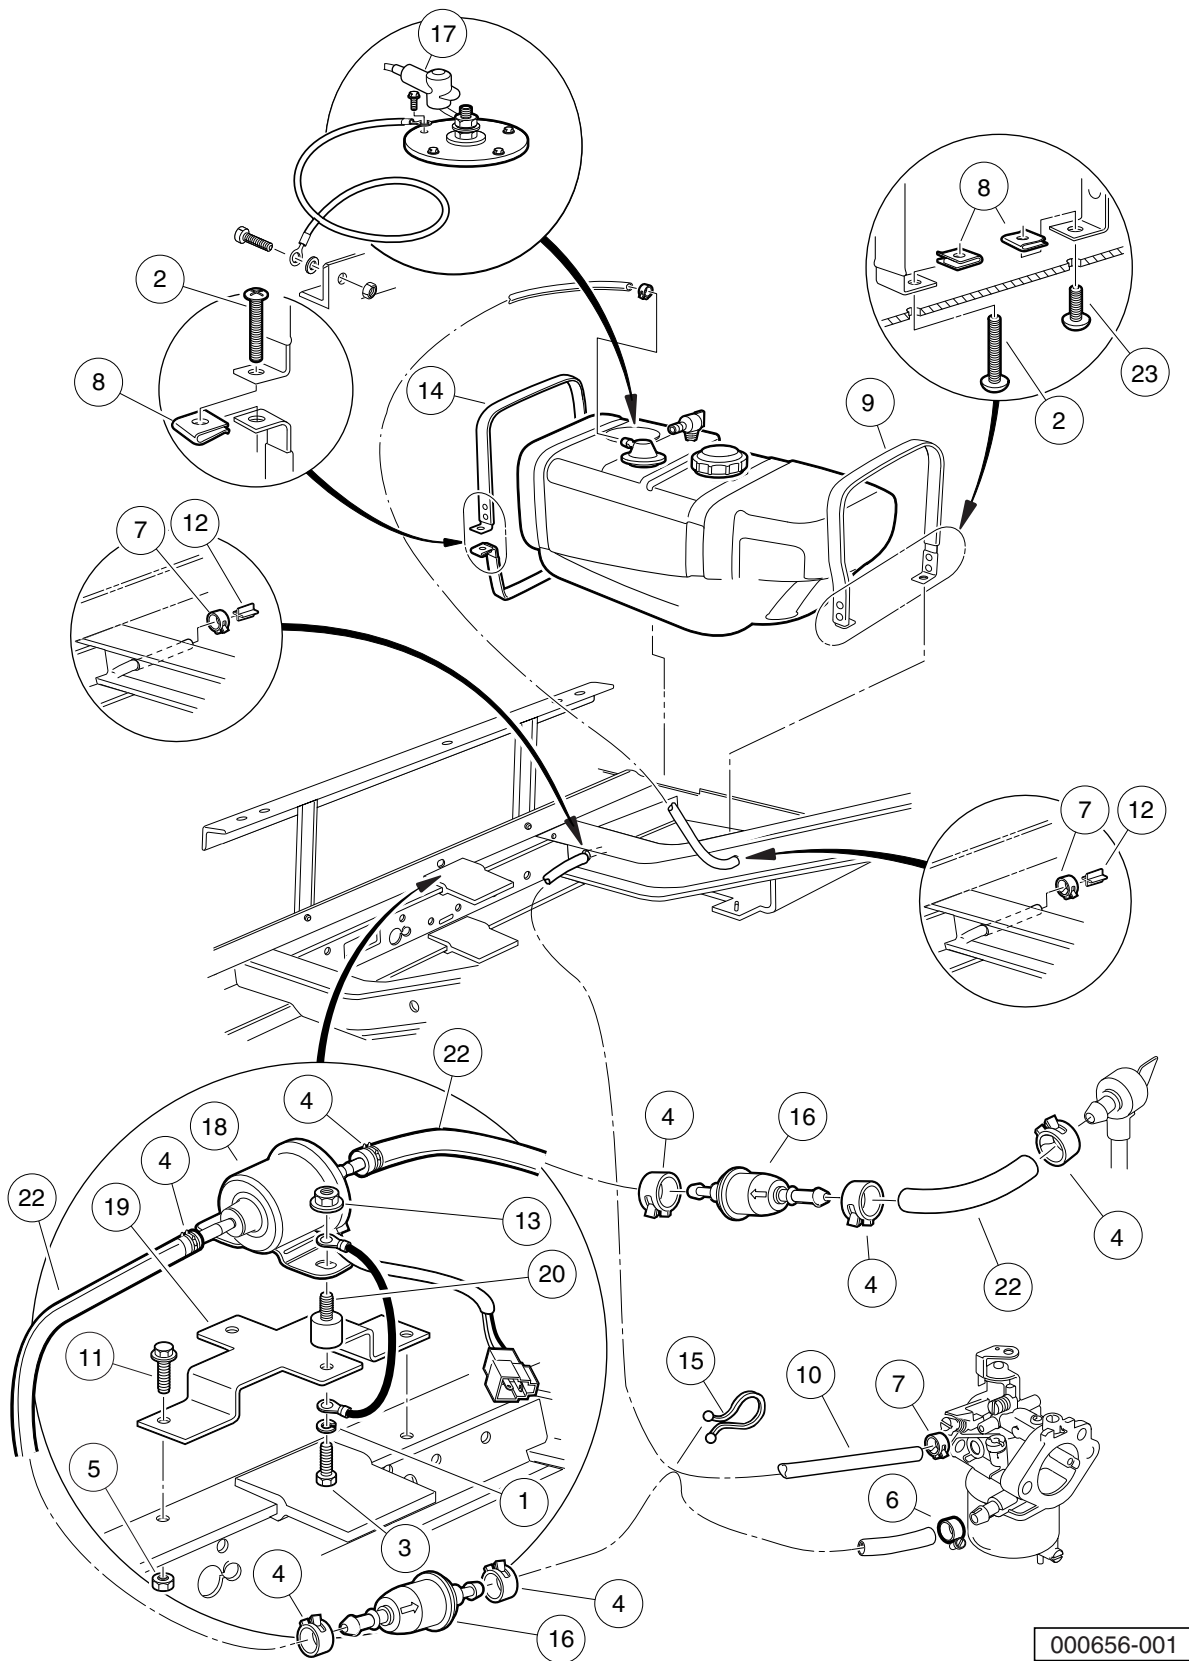


000656-001

FUEL SYSTEM WITH ELECTRIC FUEL PUMP

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011965	Lockwasher, 1/4 Split Ss	2
2	1011988	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2
3	1012124	Screw, 1/4-20 X .50 Hex Hd Cap	2
4	1012649	Clamp, 0.460 Red Hose	7
5	1013061	Locknut, #10-32 Nylon Insert	2
6	1013687	Clamp, 3/8" Hose (screw type)	1
7	1013746	Clamp, 0.301 ID Hose	2
8	1014116	Nut, 1/4-20 Speed	3
9	1014928	Fuel Strap Assembly Rear	1
10	1015137	Fuel Line (available by the foot)	1
11	1017082	Screw, #10-32 X 0.75, Hex-Head Machine	2
12	101824401	Vent Barb	1
13	101835601	Locknut, 1/4-20 Hex Whiz	2
14	101955301	Fuel Strap Assy, Front	1
15	101987701	Clamp, Plastic Tie	1
16	102003201	Filter, Fuel, 30 Micron	2
17	N/A	Boot Terminal, Insul	1
18	102225101	Electric Fuel Pump	1
19	102227101	Fuel Pump Bracket	1
20	102227501	Sandwich Mount	2
21	N/A	Fuel System Harness	1
22	102865101	Fuel Line	1
23	8248	Screw, 1/4-20 X 0.75 Truss-Head Machine	1
Note: Item 21 not shown.			

9


G

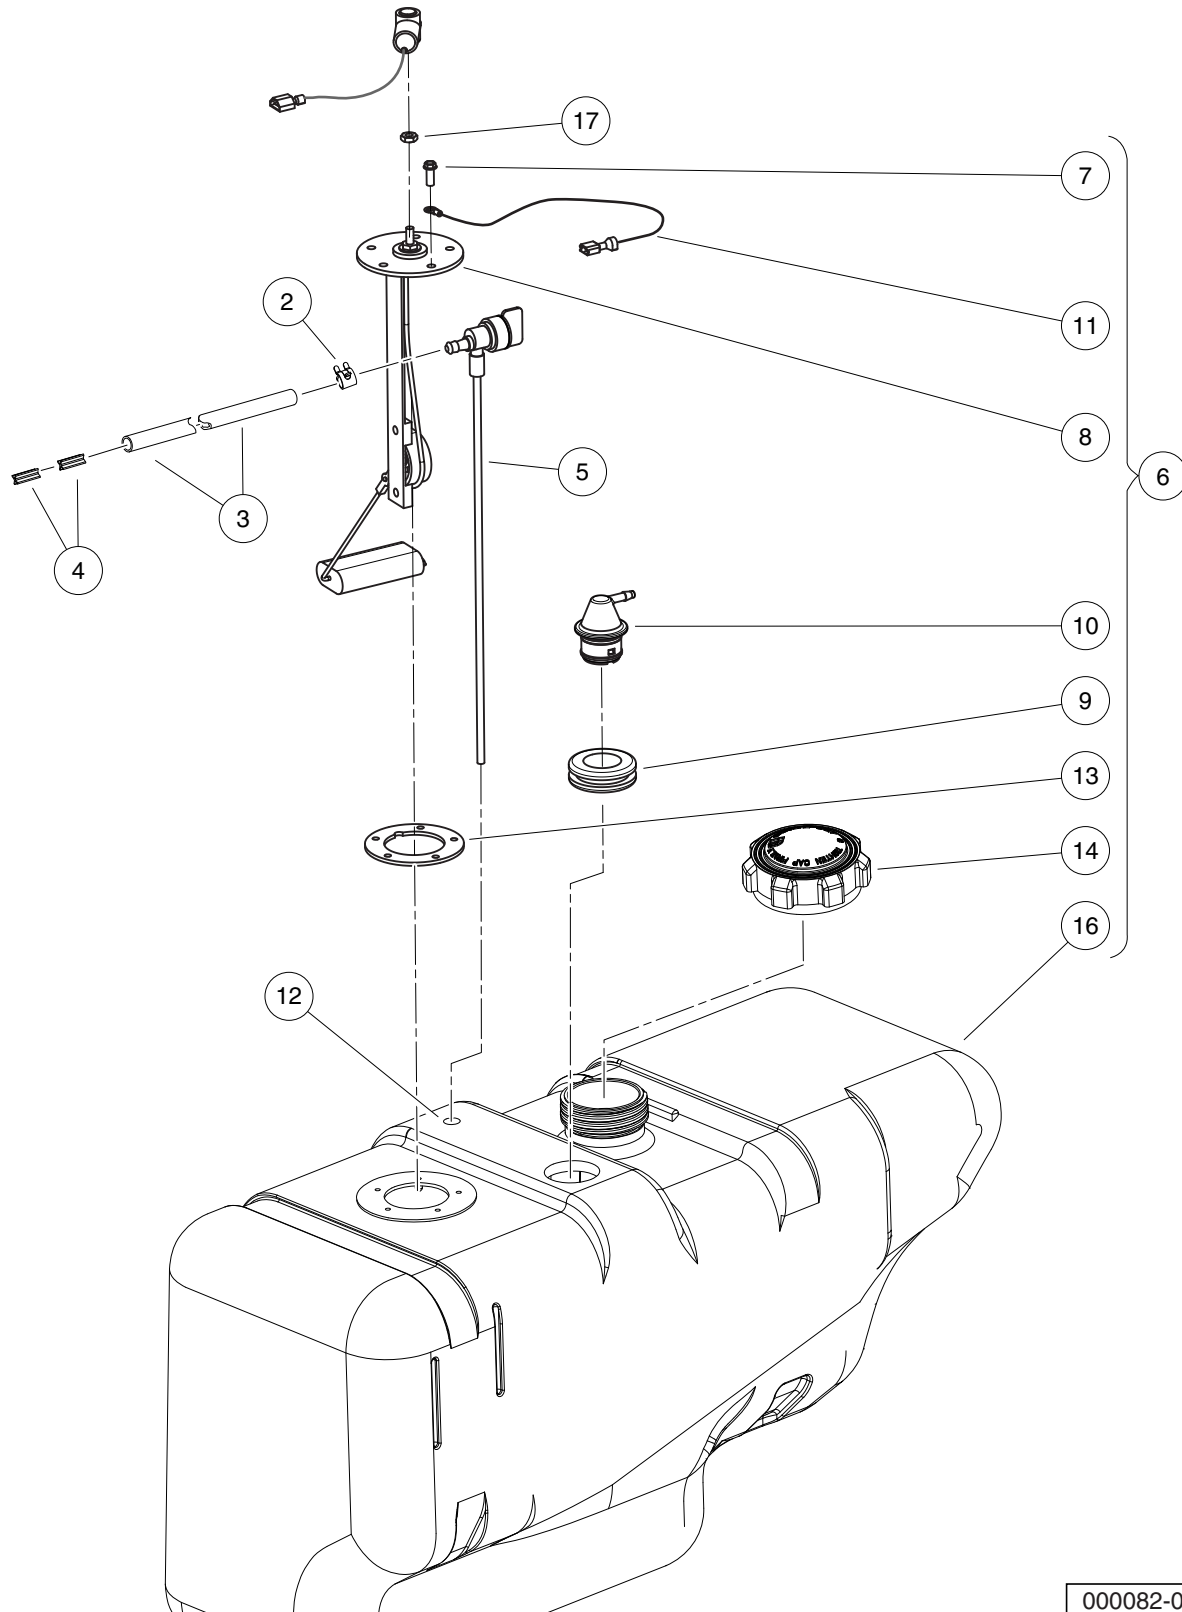

000082-003

FUEL TANK WITH FUEL LEVEL SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1016004	Tank Kit w/Sending Unit (includes items 2 through 6)	1	
2	1013746	Clamp, 0.301 ID Hose	2	
3	1015137	Fuel Line (available by the foot)	1	
4	101824401	Vent Barb	2	
5	101896901	Fuel Pickup w/Shut-Off Valve	1	
6	103651901	Asm, Tank, Ds Utl W/su† Nano (includes items 7 through 16)	1	
7	1013461	Screw, #10-16 Hex-Head Hi-Lo	5	
8	1013462	Sending Unit, Fuel Level *	1	
9	1015139	Insulation Grommet	1	
10	1015143	Vent, Fuel Tank	1	
11	1015921	Wire Assembly #16 Black	1	
12	102406701	Bushing, Line, Return	1	
13	102522001	Gasket, Rubber	1	
14	103372101	Cap, Fuel Tank, Gas, Ratchet	1	
15	103372302	Fuel Pickup w/Shut-Off Valve, 288mm	1	
16	103776901	Tank, Fuel, Top, W/su Nano	1	
17	8797	Nut, #10-32 Brass Hex	1	
* Note: Must replace fuel sending unit gasket when servicing this component.				

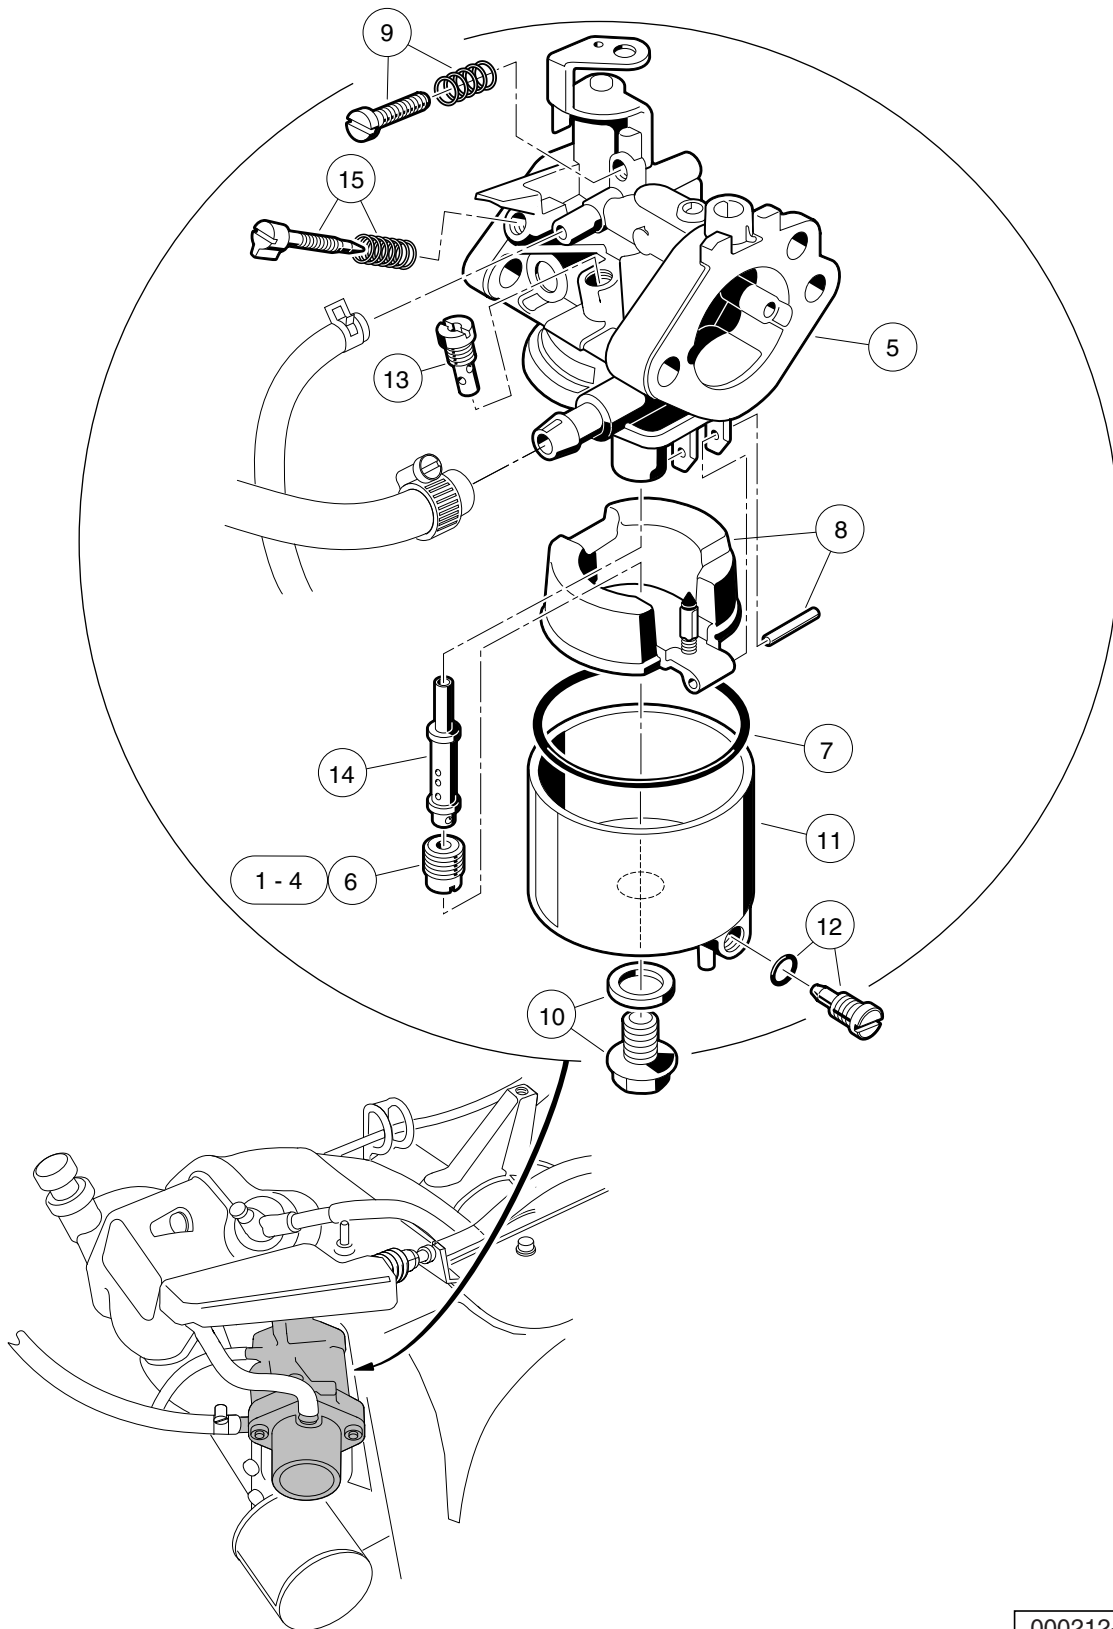


000212-001

CARBURETOR ASSEMBLY – FE350

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101642575	Jet, Altitude, # 75	1
2	101642578	Jet, Altitude, # 78	1
3	101642580	Jet, Altitude, # 80	1
4	101642582	Jet, Altitude, # 82	1
5	101905901	Carburetor, FE350D (includes items 6 through 15)	1
6	101642585	Jet, Altitude, # 85	1
7	1016437	Gasket, Carburetor Bowl OHV	1
8	1016486	Float Assembly	1
9	1016501	Screw Assembly	1
10	1016585	Bolt	1
11	1017461	Chamber Assembly, Float (includes item 12)	1
12	1016499	Screw Assembly	1
13	101973101	Jet, #40 Pilot	1
14	101973301	Nozzle, Main	1
15	N/A	Assembly, Pilot Air Screw	1
Note: 101642585 for 0 - 3,000 feet; 101642582 for 3,000 - 5,000 feet; 101642580 for 5,000 - 8,000 feet; 101642578 for 8,000 - 10,000 feet; 101642575 for 10,000 feet and higher.			

9


G

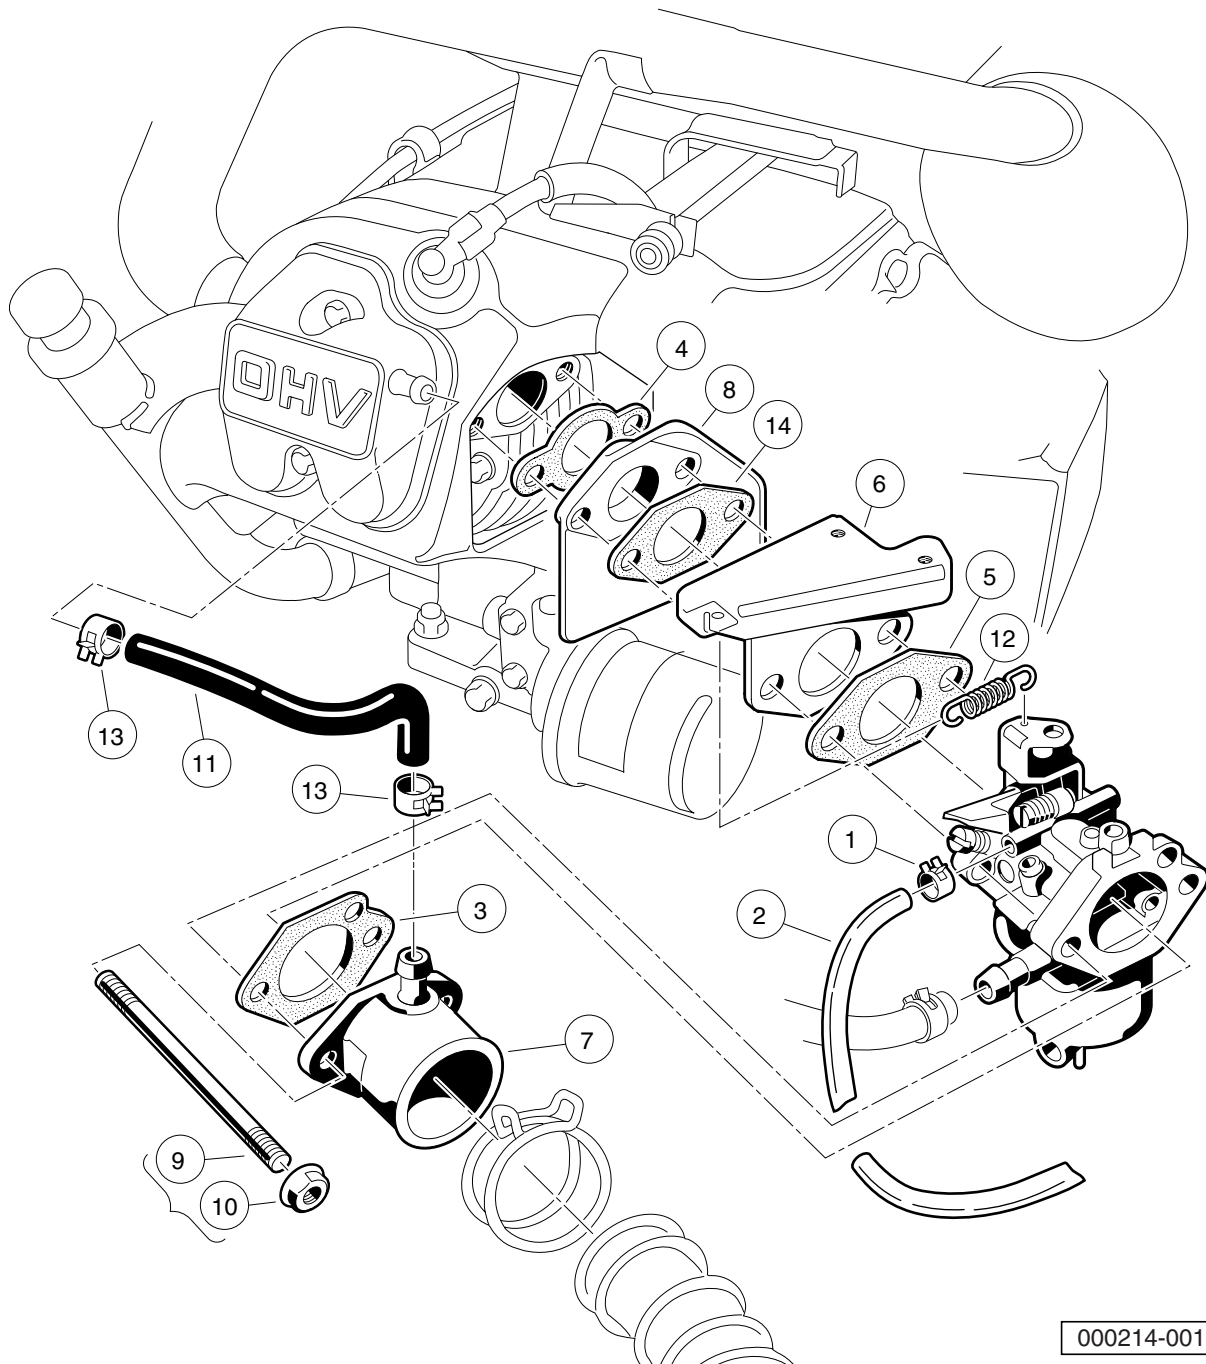

000214-001

CARBURETOR INSTALLATION – FE350

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1013746	Clamp, 0.301 ID Hose	1	
2	1015137	Fuel Line (available by the foot)	1	
3	1016438	Gasket, Carb To Intake Manifold	1	
4	1016440	Gasket, Engine to Insulator	1	
5	1016441	Gasket, Sprg Brkt To Carb OHV	1	
6	1016444	Bracket, Throttle Spring Return	1	
7	1016480	Pipe, Intake Manifold	1	
8	101648102	Insulator, Carburetor	1	
9	101649002	Stud, M6-1.00 Two-Ended	2	
10	1016547	Nut, M6 Flange	2	
11	1016572	Tube, Crankcase Vent	1	
12	1016582	Spring, Throttle Return	1	
13	1017466	Clamp	2	
14	101973401	Gasket, Insulator To Bracket	1	

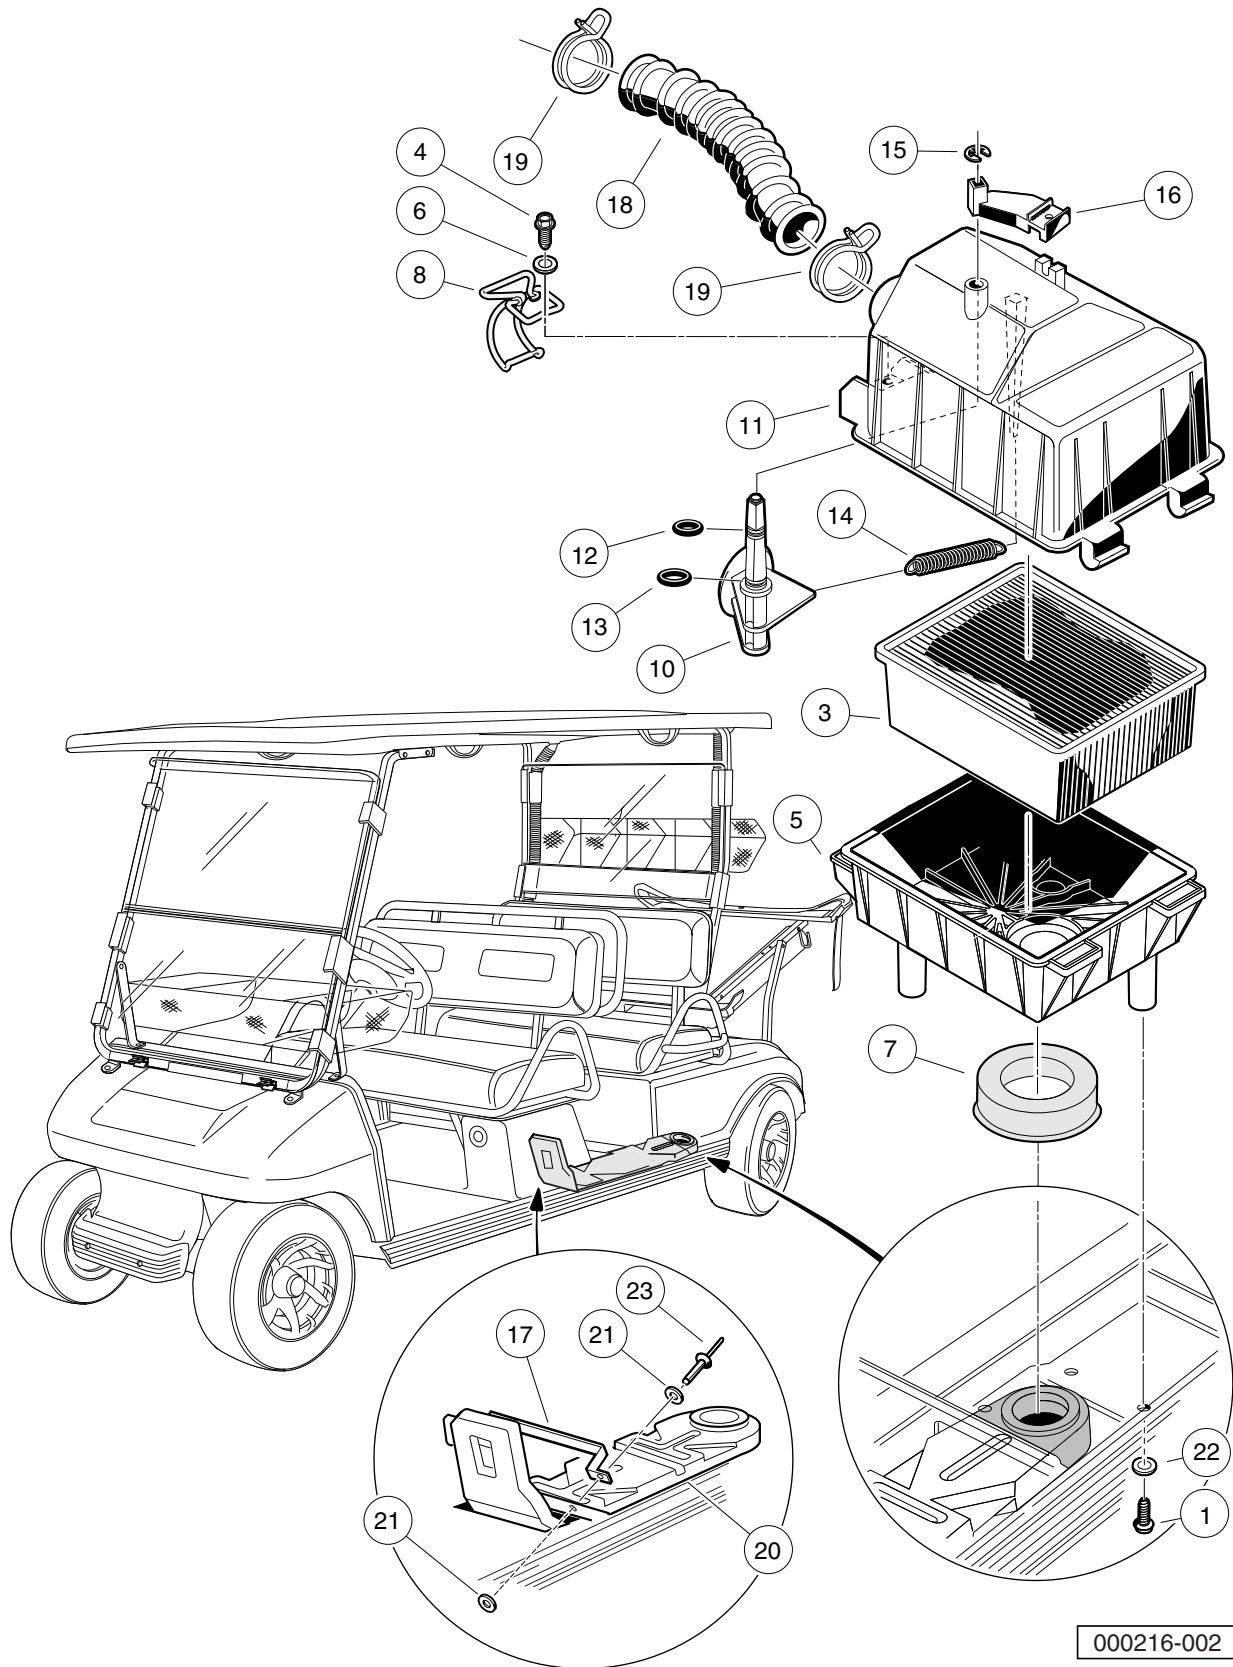


INTAKE DUCT AND AIR BOX ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	3
2	101821501	Assembly, Air Box (includes items 3 through 9)	1
3	1015426	Filter, Air	1
4	101804301	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
5	101811901	Bottom, Air Box	1
6	101881701	Washer, #8 Stainless-Steel Flat	2
7	101921501	Seal, Intake	1
8	101925701	Latch, Wireform	2
9	101972801	Top Assy, Air Box (includes items 10 through 16)	1
10	N/A	Valve, Choke	1
11	101811801	Top, Air Box	1
12	N/A	O-Ring, 5/16	1
13	N/A	O-Ring, 3/8	1
14	101812301	Spring, Extension Return	1
15	101813001	Retaining Ring 0.25, Shaft	1
16	101917601	Lever, Choke	1
17	101825701	Retaining Bracket	1
18	101837101	Hose, Air Intake	1
19	101971301	Clamp, 1.58" ID Hose	2
20	103520301	Duct, Air Intake, Ds	1
21	183	Washer, #10 Type A Flat	4
22	332	Washer, 1/4 Type A Narrow Flat	3
23	7973	Rivet, 3/16 X .400 Blind	2
Note: Item 19 is not illustrated.			

9


G

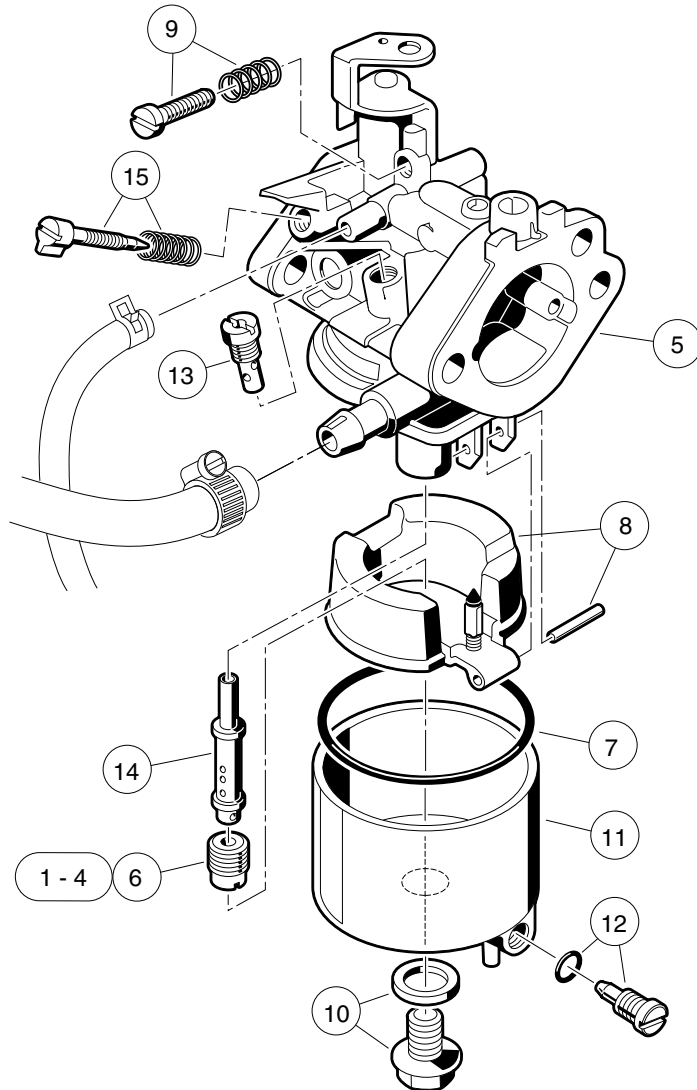

000212-002

CARBURETOR ASSEMBLY – FE350 S26

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	101642575	Jet, Altitude, # 75	1	
2	101642578	Jet, Altitude, # 78	1	
3	101642580	Jet, Altitude, # 80	1	
4	101642582	Jet, Altitude, # 82	1	
5	103616901	Carburetor Fe350 Precedent	1	
Note: 101642582 for 0 - 3,200 feet; 101642580 for 3,200 - 6,500 feet; 101642578 for 6,500 - 9,800 feet; 101642576 for 9,800 feet and higher.				

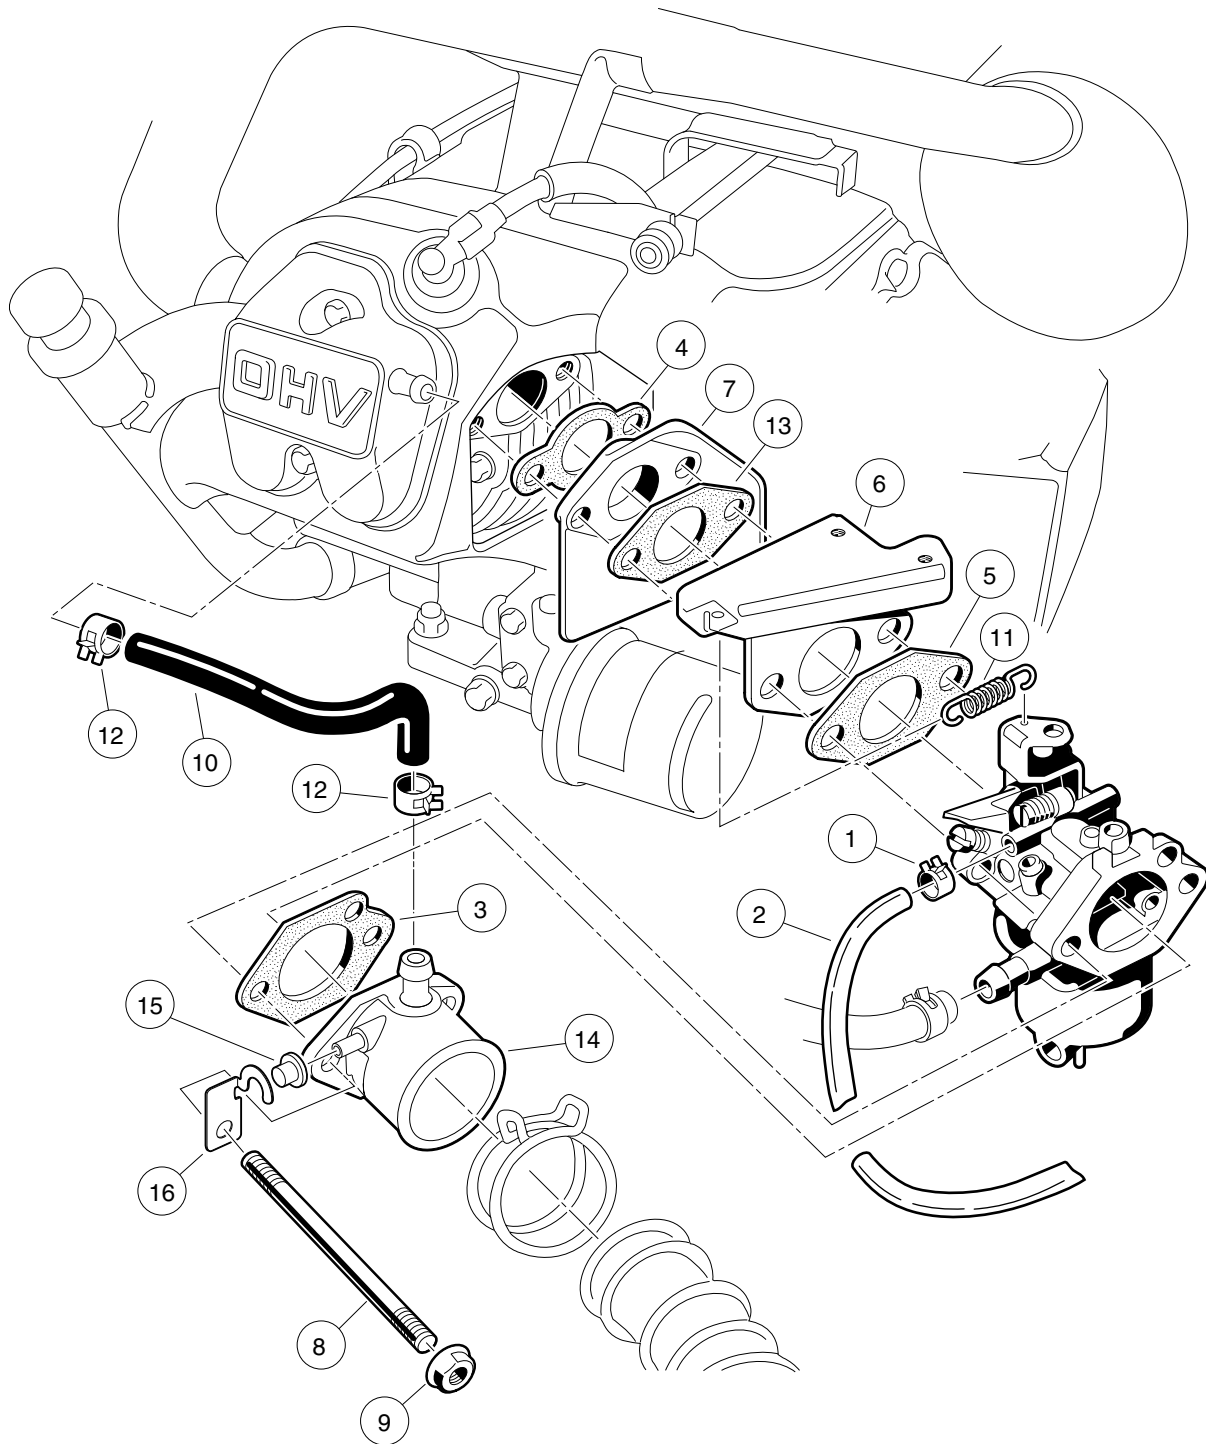

000214-002

CARBURETOR INSTALLATION – FE350 S27

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1013746	Clamp, 0.301 ID Hose	1	
2	1015137	Fuel Line (available by the foot)	1	
3	1016438	Gasket, Carb To Intake Manifold	1	
4	1016440	Gasket, Engine to Insulator	1	
5	1016441	Gasket, Sprg Brkt To Carb OHV	1	
6	1016444	Bracket, Throttle Spring Return	1	
7	101648102	Insulator, Carburetor	1	
8	101649002	Stud, M6-1.00 Two-Ended	2	
9	1016547	Nut, M6 Flange	2	
10	1016572	Tube, Crankcase Vent	1	
11	1016582	Spring, Throttle Return	1	
12	1017466	Clamp	2	
13	101973401	Gasket, Insulator To Bracket	1	
14	103507101	Carburetor Adapter w/ Tap	1	
15	103507201	Plug, Intake Manifold, Carb	1	
16	103507301	Bracket, Intake Manifold, Carb	1	


9

G

EXHAUST SYSTEM

10


G

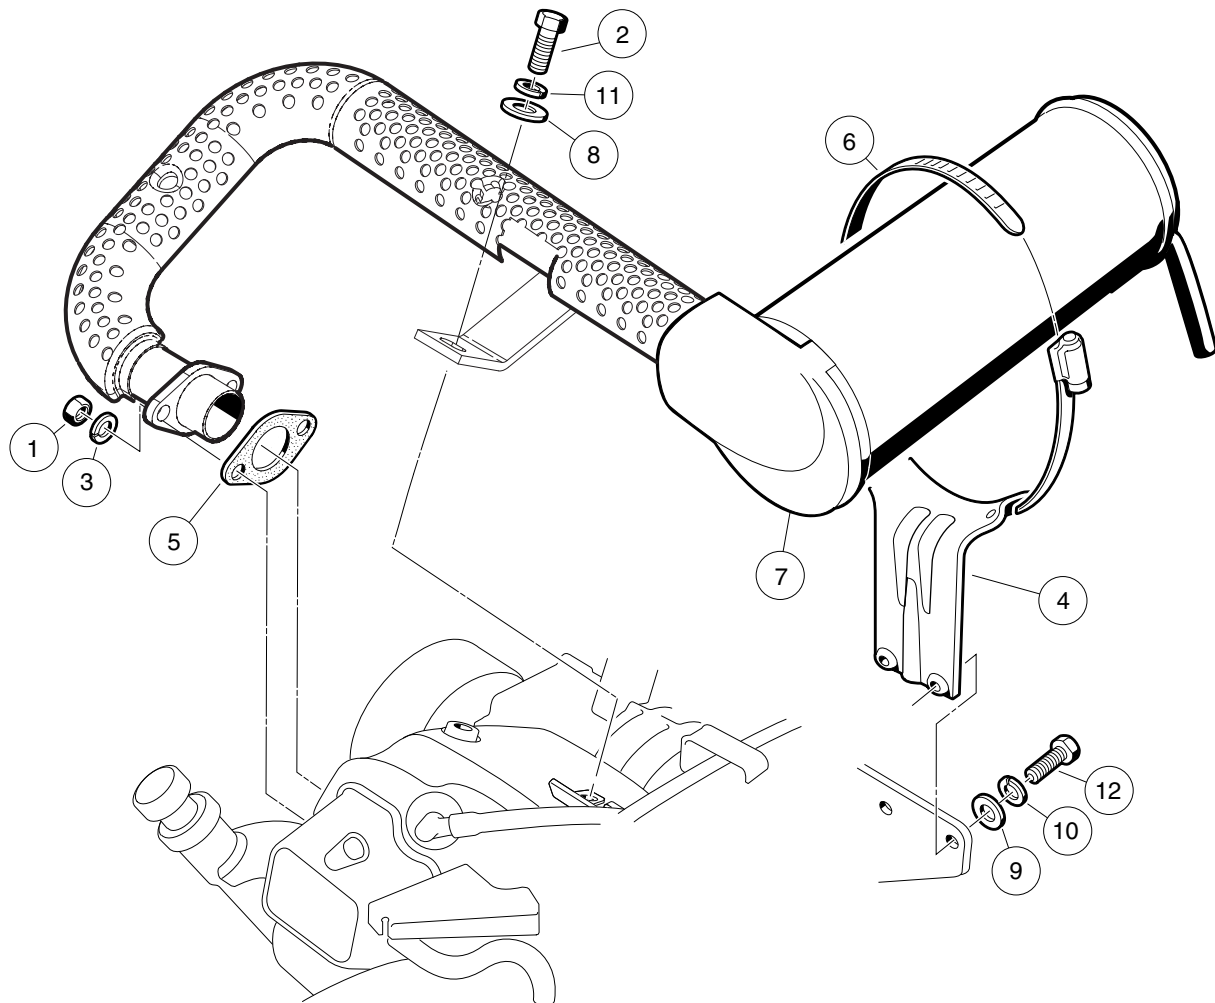

000491-001

EXHAUST SYSTEM – FE350

ITEM	PART NO.	DESCRIPTION	QTY	10
		1 2 3 4		G
1	1012528	Nut, M8-1.25 Hex	2	
2	1012830	Screw, M8-125 X 22 Hex-Head	1	
3	1013734	Lockwasher, 8mm Split	2	
4	1015814	Bracket, Muffler Mounting	1	
5	1016904	Gasket, Exhaust	1	
6	1017689	Clamp, 5" Muffler Hose	1	
7	102585901	Exhaust System, FE350, Precedent	1	
8	1241	Washer, 5/16 Type A Flat	1	
9	332	Washer, 1/4 Type A Narrow Flat	2	
10	451	Lockwasher, 1/4 Split	2	
11	7174	Lockwasher, 5/16 Split	1	
12	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	

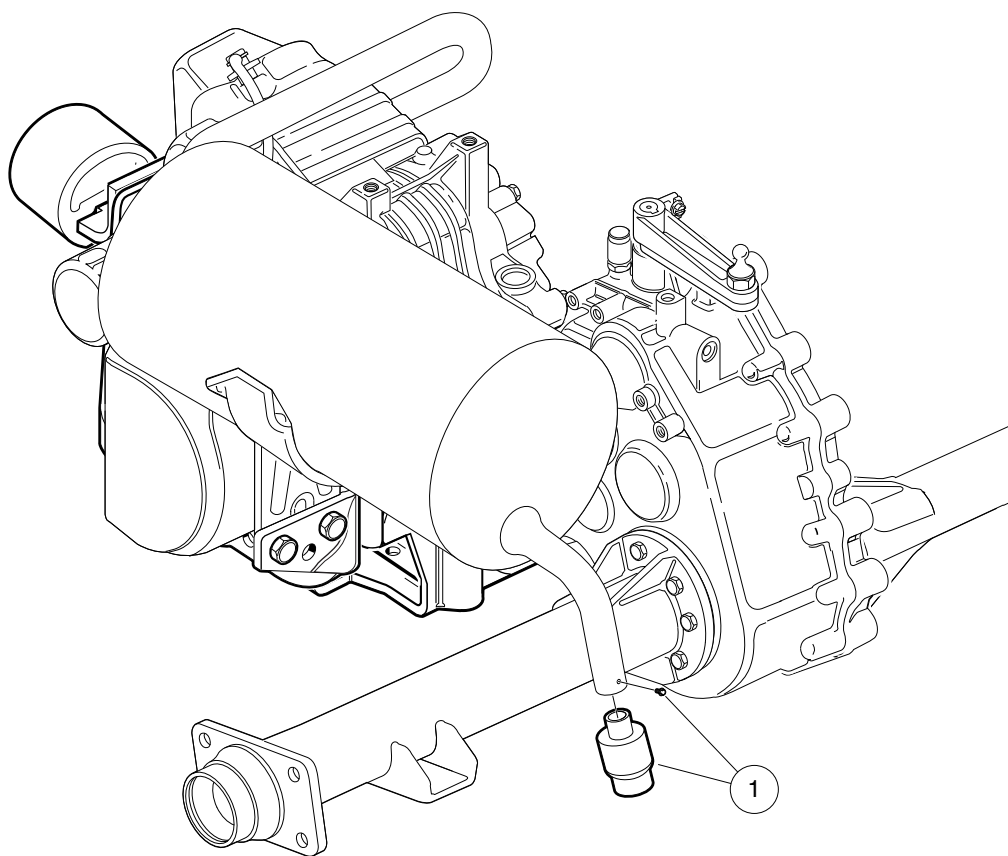

APM-000119-001

SPARK ARRESTOR KIT

ITEM	PART NO.	DESCRIPTION	QTY	10
1	101629008	1 2 3 4 Spark Arrestor, 290/350	1	G


10

G

TORQUE CONVERTER

11

G

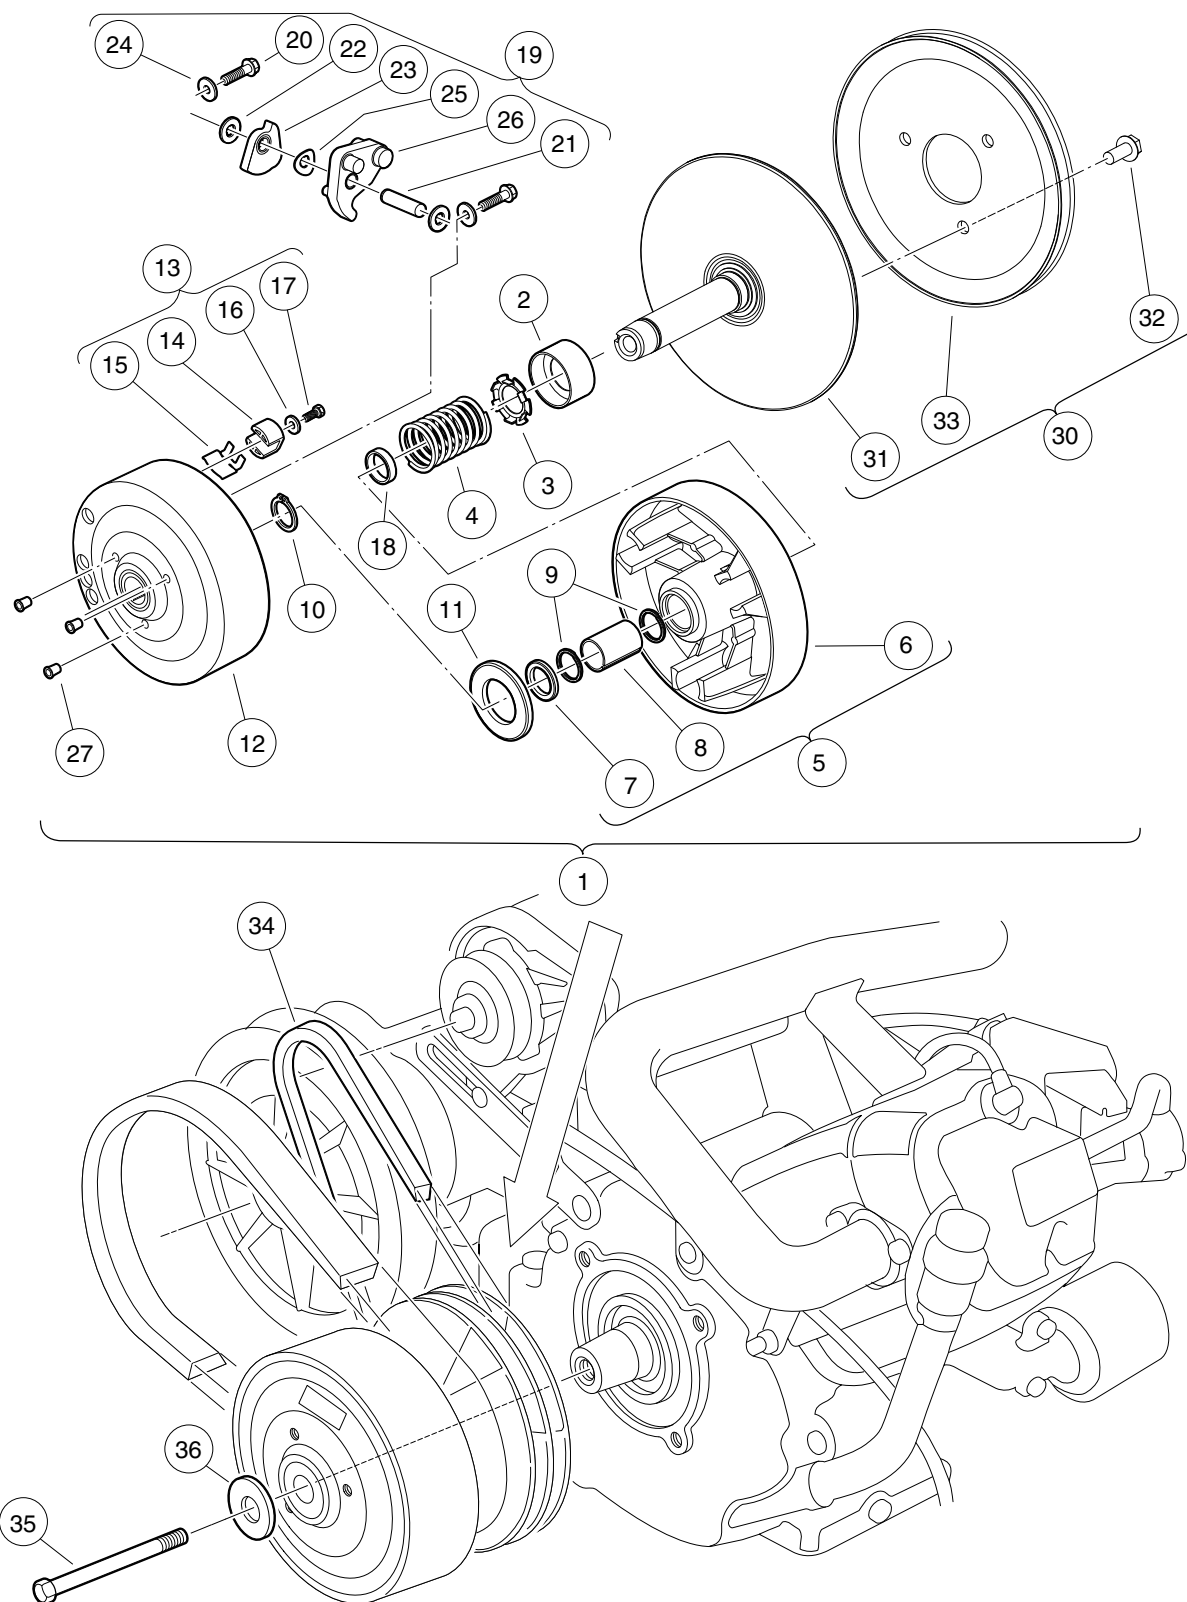


000217-001

DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101833902	Clutch, Drive (includes items 2 through 28)	1
2	1014049	Bearing, Idler	1
3	1014050	Retainer, Spring	1
4	1014051	Spring, Drive Clutch	1
5	1014052	Movable-Face Assembly (includes items 6 through 8)	1
6	N/A	Drive Clutch Movable Face	1
7	1014055	Retainer	1
8	N/A	Bushing, Split, Drive Clutch	1
9	1014056	Ring, Spiral Backup	2
10	1014057	Ring, 0.810" Internal Retaining	1
11	1014058	Thrust Washer	1
12	1014059	Drive Hub Assy, Drive Clutch	1
13	1014453	Kit, Drive Clutch Button (includes items 14 through 17)	1
14	1014062	Driver, Drive Clutch	3
15	1014287	Spring, Drive Button	3
16	183	Washer, #10 Type A Flat	3
17	8450	Screw, #10-24 X 0.50 Hex-Head	3
18	1016289	Spacer, Fixed Face Shaft	1
19	1016801	Kit, Drive Clutch Weight (includes items 20 through 26)	1
20	1014063	Screw, 1/4-20 X 1.00 Hex Head	6
21	N/A	Pin, 0.3752 X 1.50 Dowel	3
22	1014065	Washer, 0.38" ID Delrin Flat	6
23	N/A	Clutch Weight, Secondary	3
24	N/A	Washer	6
25	1016201	Washer, Wave	3
26	N/A	Weight, Primary	3
27	101925601	Plug, Drive Clutch	3
28	101929802	Kit, Fxd Face Dr Asm Fe290/350 (includes items 29 and 30)	1
29	N/A	Desiccant Bag (Not Shown)	1
30	101929801	Assembly, Fixed-Face Drive (includes items 31 through 33)	1
31	N/A	Fixed Face Assembly, Drive Clutch	1
32	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	3
33	N/A	Pulley, Clutch	1
34	101916701	V-Belt	1
35	103345701	Screw 3/8-24x5.5 Hex Loc Ptch	1
36	808	Washer, 3/8 Type B Flat	1
		Note: Item 29 not shown.	

11

G

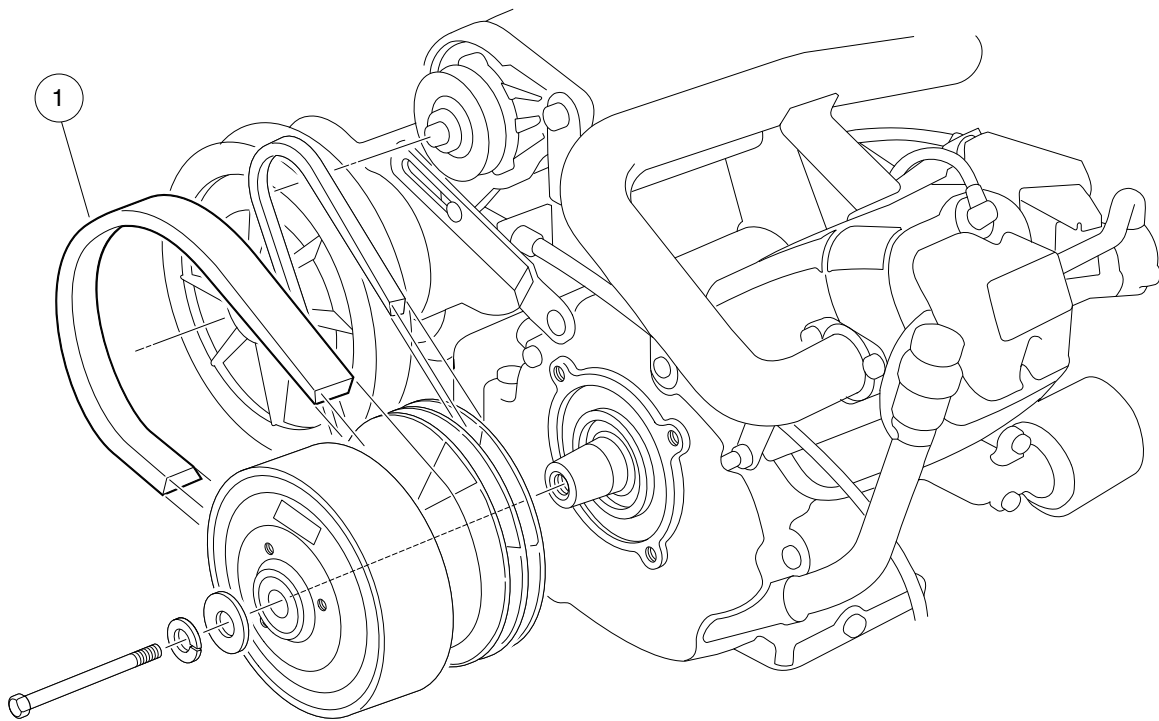


000218-001

DRIVE BELT – FE350

ITEM	PART NO.	DESCRIPTION	QTY
1	1017188	1 2 3 4 Belt, Drive (FE350)	1

11

G

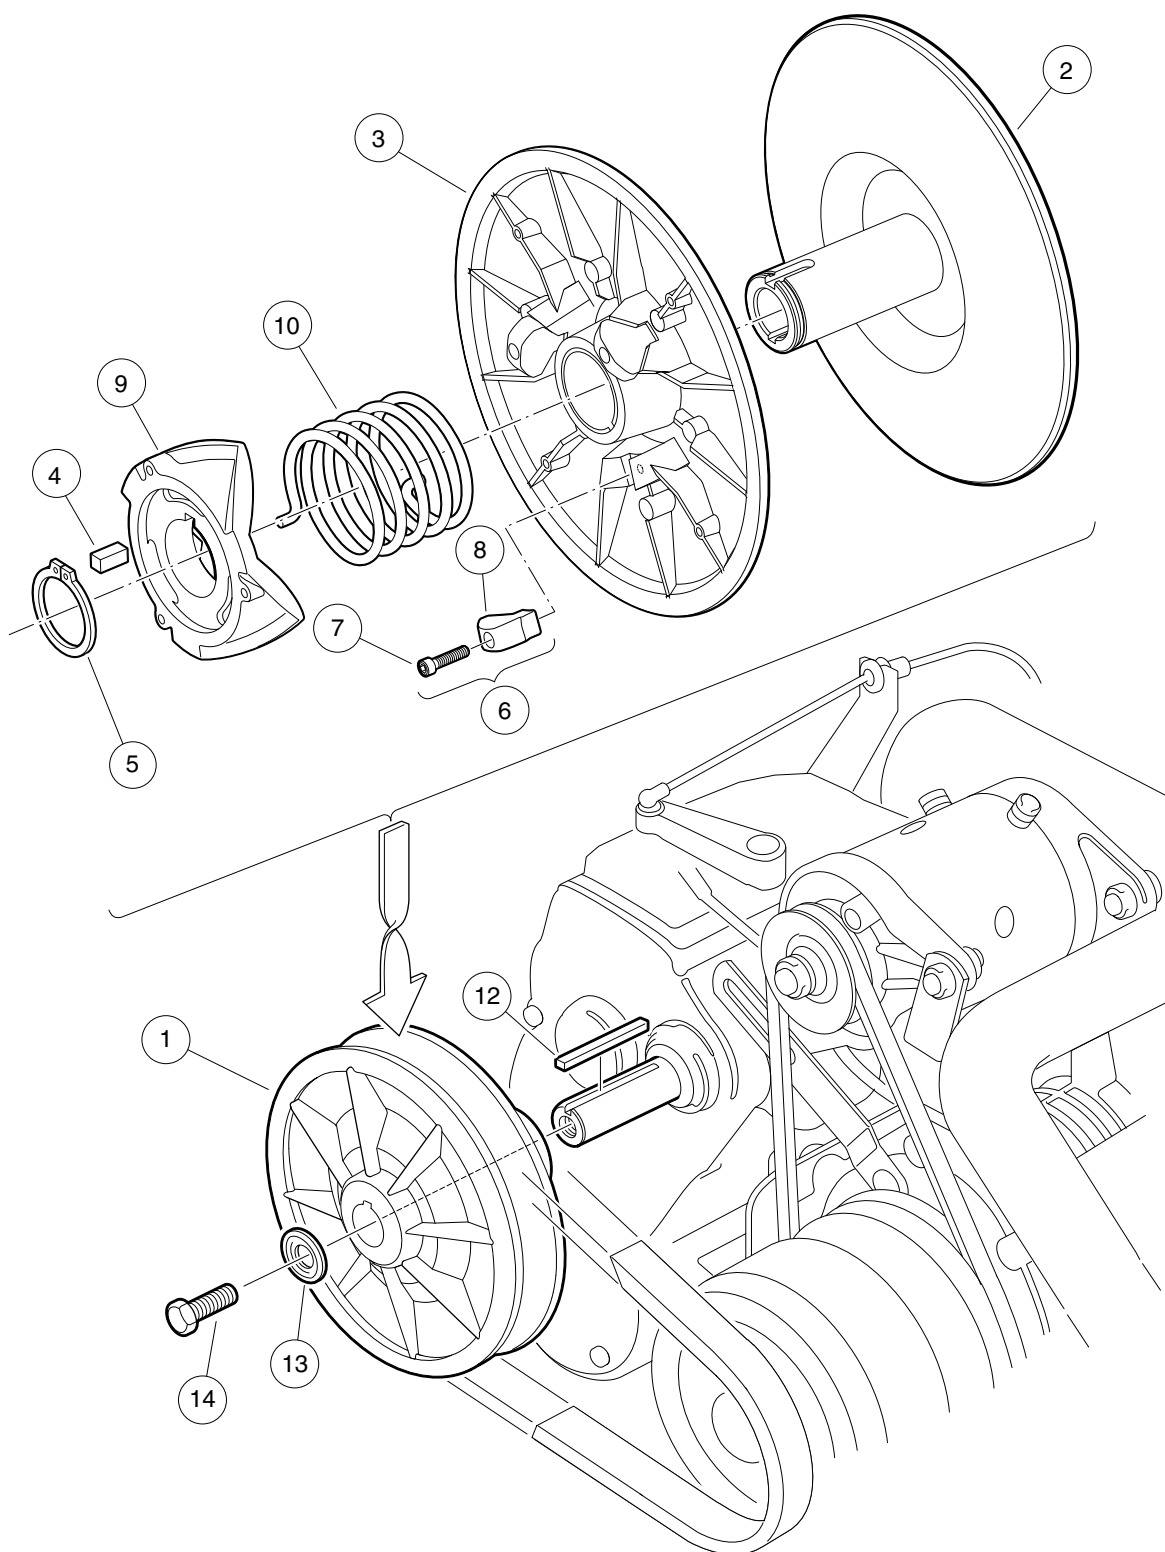

000219-001

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101834001	Assembly, Driven Clutch (includes items 2 through 10)	1
2	1014070	Fixed Face Assy, Driven Clutch	1
3	1014072	Movable-Face Assembly with Bushing	1
4	1014078	Key, Driven Clutch	1
5	1014080	Ring, Retaining	1
6	1014454	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	1012836	Screw, #8-32 X 3/4 Socket-Head Cap	3
8	1014076	Button, Drive	3
9	1017686	Cam, Driven Clutch	1
10	101836201	Spring, Driven Clutch, Reversed	1
11	AM10419	Kit, Clutch Repair (includes items 12 through 14)	1
12	101833401	Key, 3/16 Sq X 1.50"	1
13	102155801	Washer, Driven Clutch	1
14	102242101	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1


11

G

UNITIZED TRANSAXLE

12


G

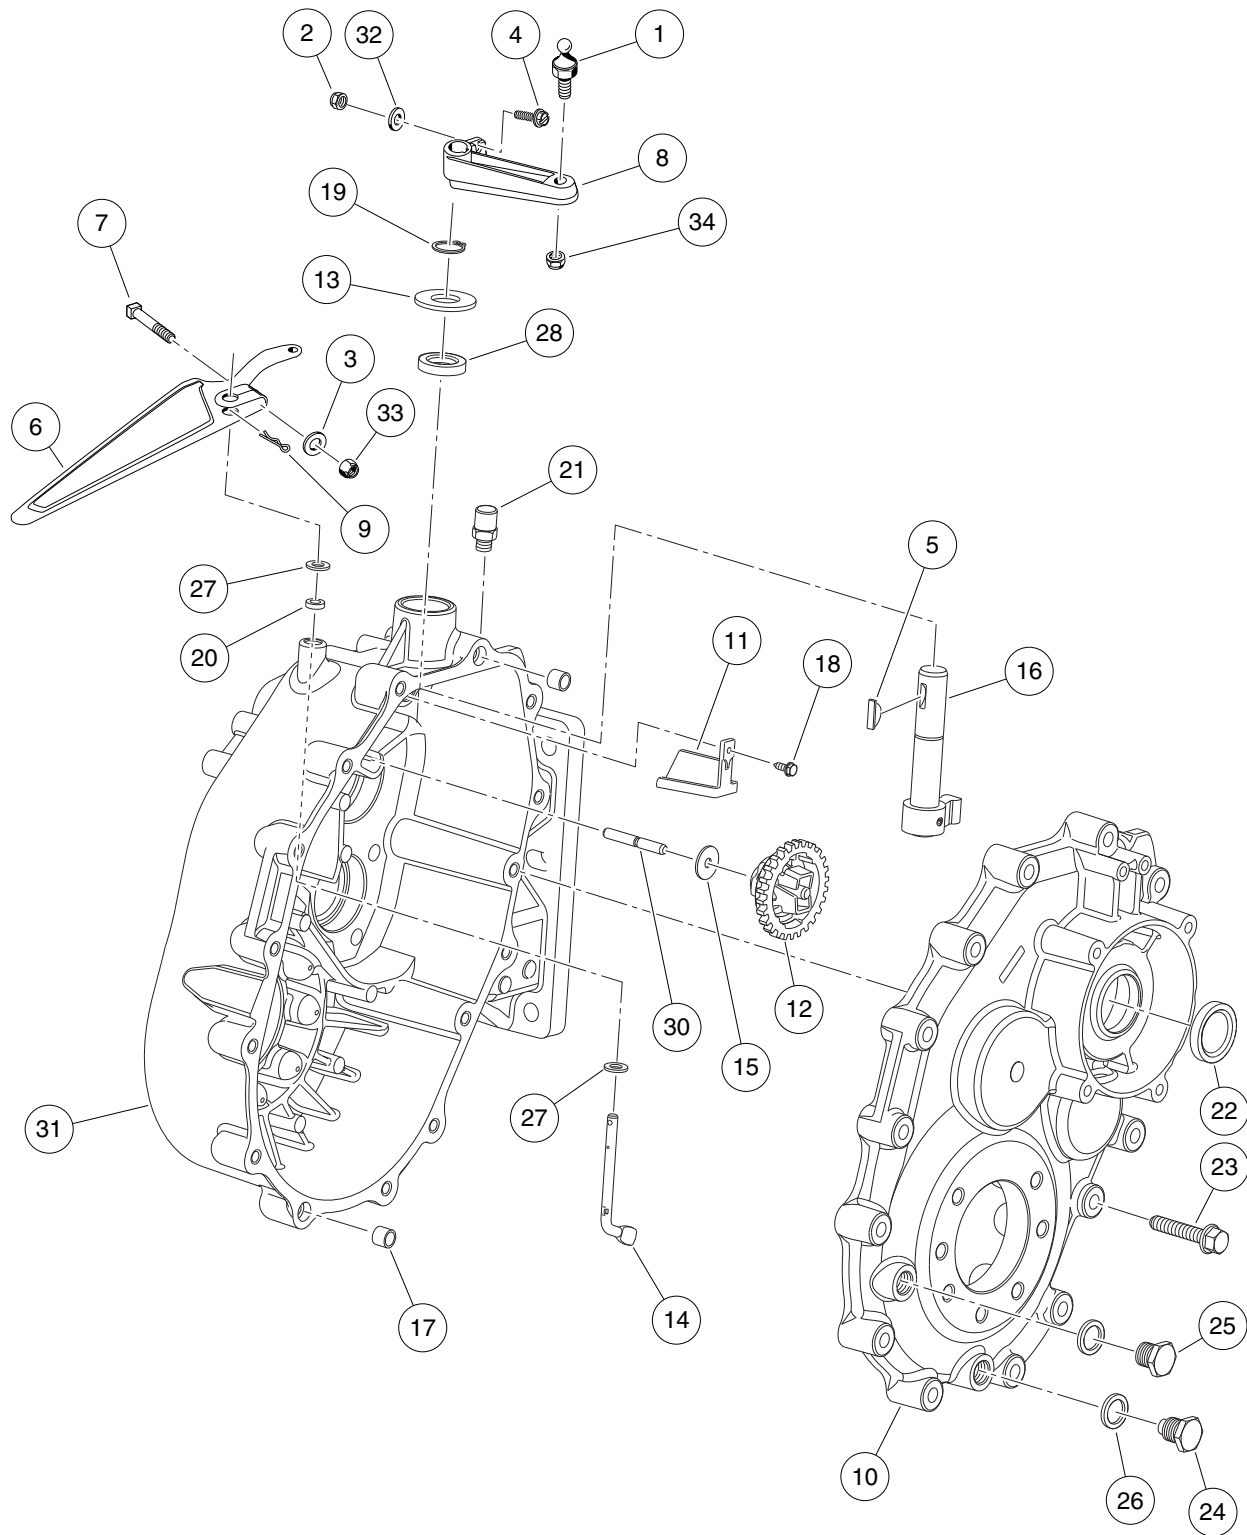

000801-001

TRANSAXLE – GASOLINE VEHICLES, GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY	12 G
		1 2 3 4		
1	1010954	Stud, 1/4-28 X 0.560 Ball	1	
2	1013061	Locknut, #10-32 Nylon Insert	1	
3	1014007	Washer, 1/4 Flat	1	
4	1017082	Screw, #10-32 X 0.75, Hex-Head Machine	1	
5	1017231	Key, Woodruff	1	
6	101834801	Arm, Governor	1	
7	101886101	Screw, 1/4-20 X 1.00 Square-Head	1	
8	102515401	Lever, Transmission Shift	1	
9	102897401	Pin, Split	1	
10	102897501	Cover, Box	1	
11	102897601	Conveyor, Oil	1	
12	102897701	Assembly, Speed Governor	1	
13	102897801	Washer, Thrust	1	
14	102897901	Lever, Speed Governor	1	
15	102898101	Bearing, Thrust	1	
16	102898201	Unit, Drive Selector	1	
17	102899101	Dowel	2	
18	102899201	Screw	1	
19	102899401	Ring, Snap	1	
20	102899701	Grommet	1	
21	102899801	Bleeder	1	
22	102899901	Grommet	1	
23	102900001	Screw	15	
24	102900101	Plug, Magnetic	1	
25	102900201	Plug	1	
26	102900301	Seal	2	
27	102900601	Washer	2	
28	102900901	Grommet	1	
29	N/A	Gearbox, Complete, Ab, Gas (includes items 30 and 31)	1	
30	N/A	Pin, Speed Governor	1	
31	N/A	Gearbox, Ab, Gas	1	
32	183	Washer, #10 Type A Flat	1	
33	8233	Locknut, 1/4-20 Nylon Insert	1	
34	8717	Locknut, 1/4-28 Nylon Insert	1	
Note: Items 9-13 are components of the unitized transaxle. Please, see following page for transaxle part number.				

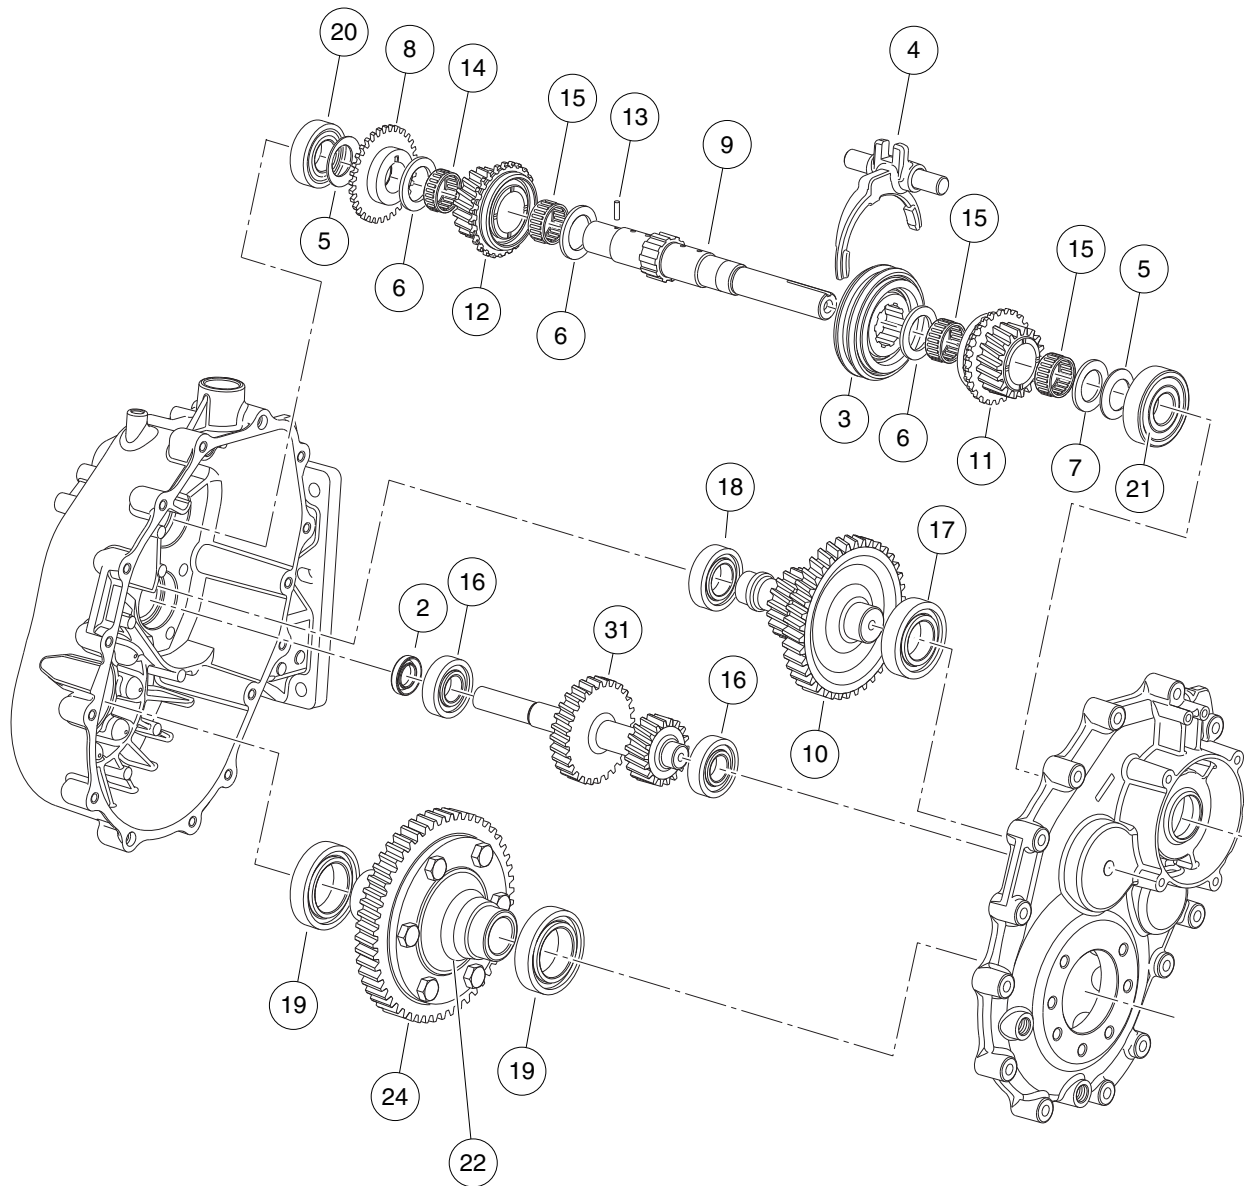


000802-001

TRANSAXLE – GASOLINE VEHICLES, TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Transaxle, Gas, Emag Brake (includes items 2 through 31)	1
2	101923501	Seal, Lip	1
3	102897201	Synchronizer, Complete	1
4	102897301	Fork, Complete	1
5	102898001	Washer, Belleville	2
6	102898301	Bearing, Thrust	3
7	102898401	Washer, Thrust	1
8	102898501	Gear, Speed Governor	1
9	102898601	Shaft, Main	1
10	102898701	Shaft, Secondary	1
11	102898901	Gear, Complete, 25t	1
12	102899001	Gear, Complete, 28t	1
13	102899301	Pin	1
14	102899501	Cage, Roller	1
15	102899601	Cage, Roller	3
16	102900401	Bearing	2
17	102900501	Bearing	1
18	102900701	Bearing	1
19	102900801	Bearing	2
20	102901001	Bearing	1
21	102901101	Bearing	1
22	102901201	Box, Differential	1
23	102902001	Assembly, Differential (includes items 24 through 30)	1
24	102901301	Screw, M10 X 25	6
25	102901401	Ring, Sleeve	2
26	102901501	Gear, Sun	2
27	102901601	Gear, Planetary	2
28	102901701	Ring, Sleeve	2
29	102901801	Pin	1
30	102901901	Gear	1
31	N/A	Shaft, Reverse Gear, Ab, Gas	1


12
G

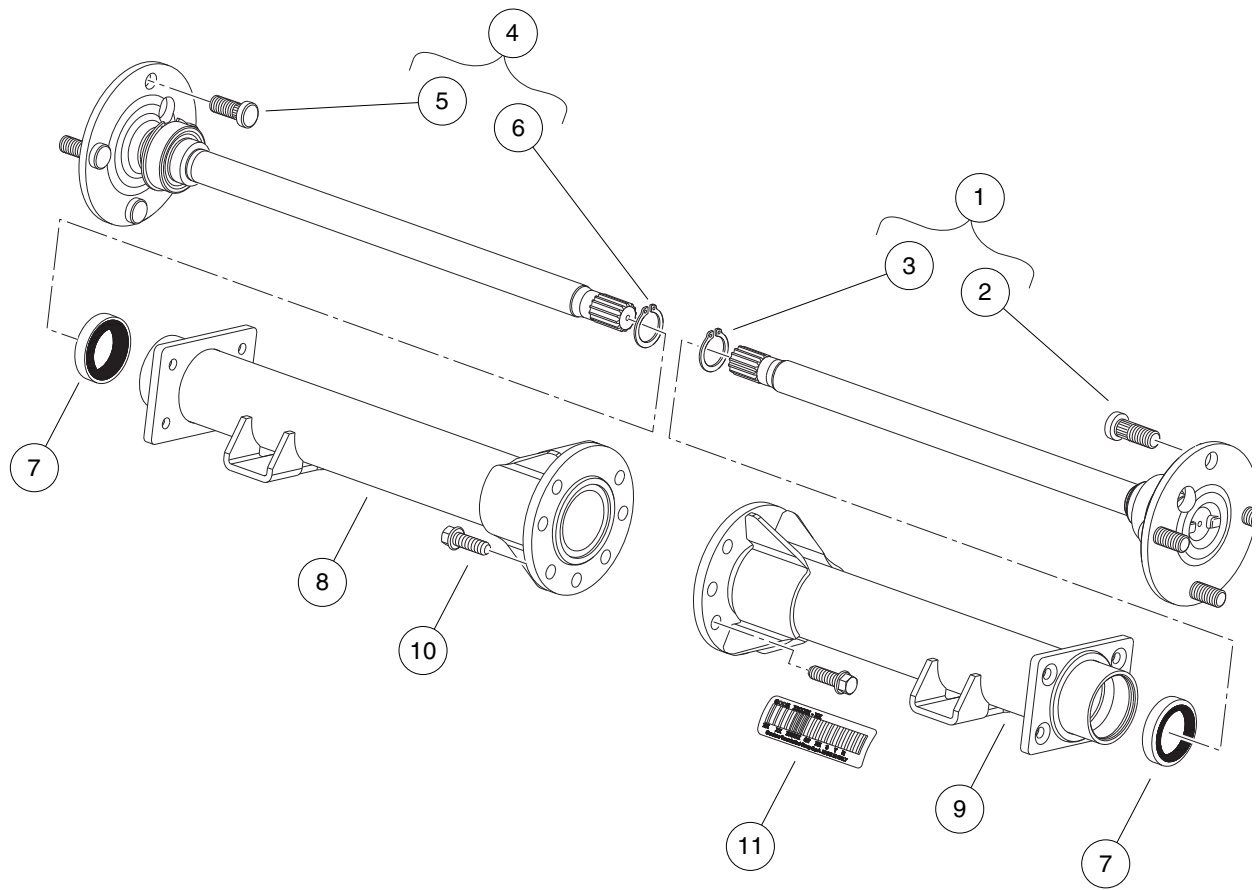

000803-001

TRANSAXLE – GASOLINE VEHICLES, SHAFTS AND TUBES

ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	102902101	Shaft, Short, Complete (includes items 2 and 3)	1		
2	102902301	Bolt, Stud	4		
3	102902401	Snap Ring	1		
4	102902201	Shaft, Long, Complete (includes items 5 and 6)	1		
5	102902301	Bolt, Stud	4		
6	102902401	Snap Ring	1		
7	102902501	Seal, Lip	2		
8	102902601	Assembly, Tube Extension, Lh	1		
9	102902701	Assembly, Tube Extension, Rh	1		
10	102902801	Screw, M10 X 30	14		
11	N/A	Tag, Serial	1		
Note: Items listed on this page are components of the unitized transaxle.					

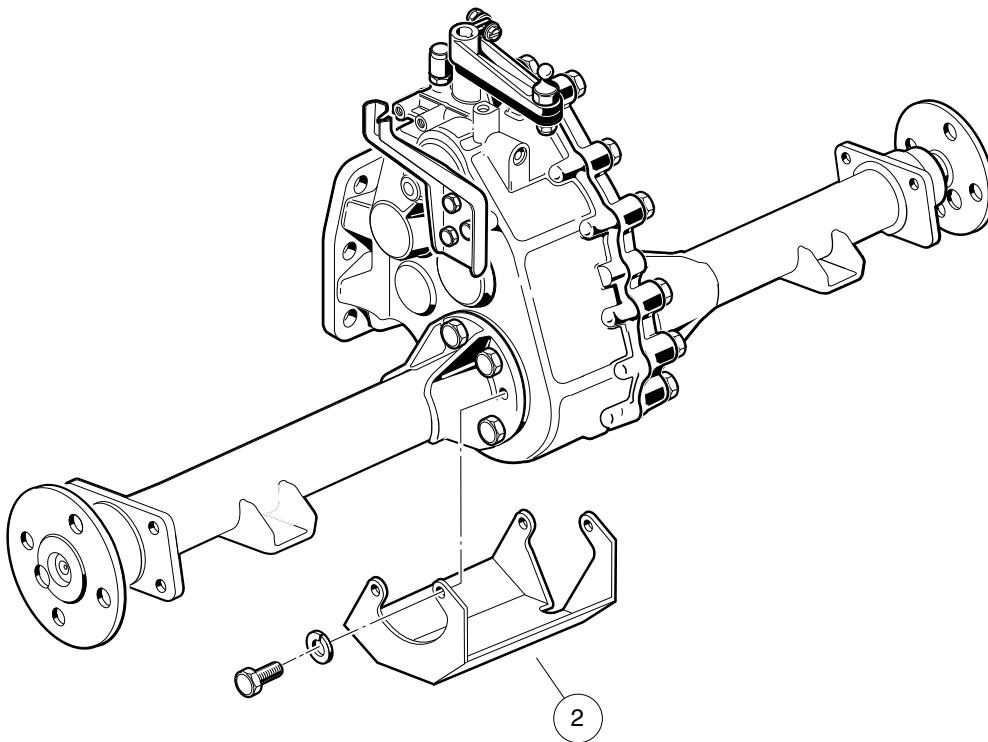


000784-001

12
G

12
G

12

G

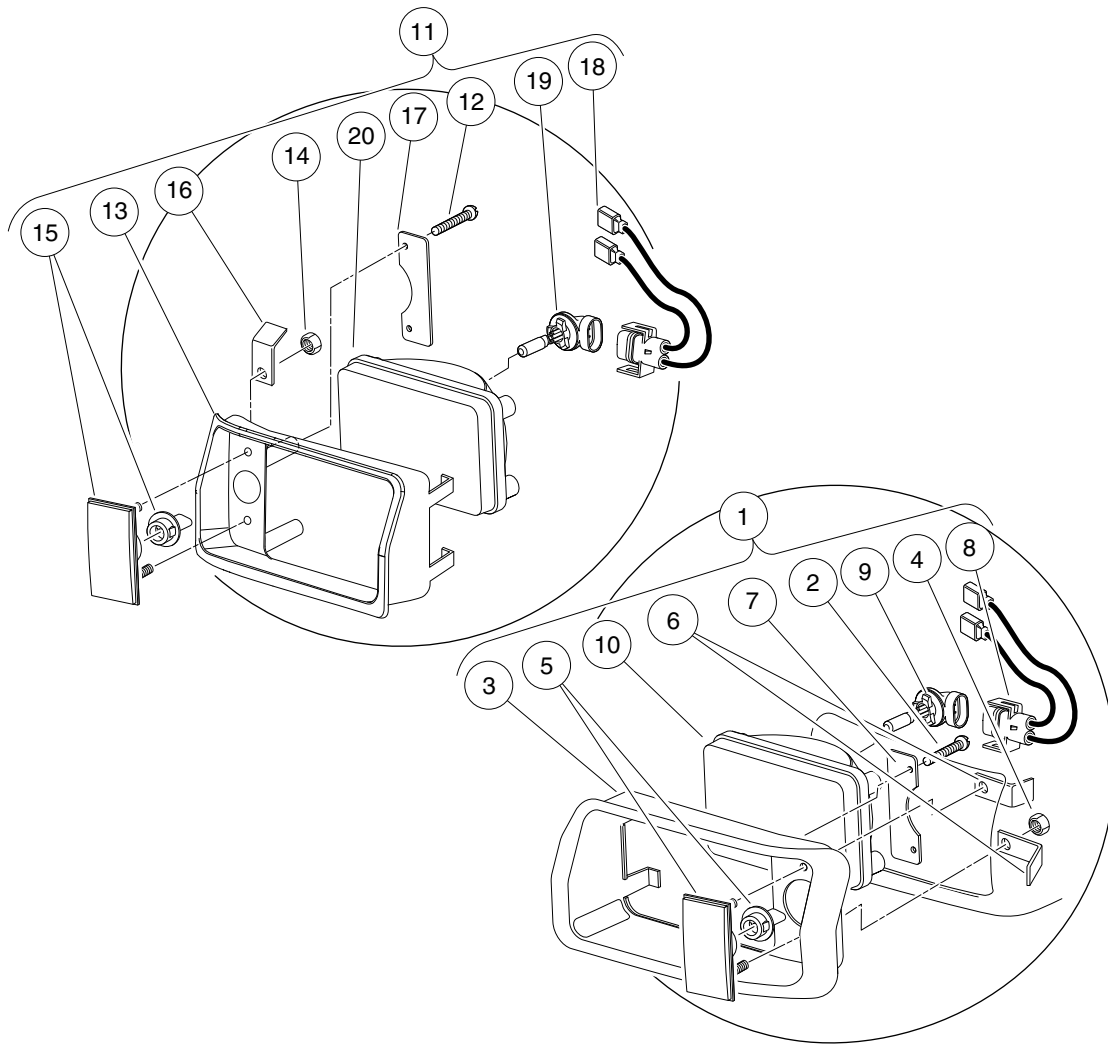


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101988001	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
3	1016880	Headlight Bezel, Left	1
4	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
5	1017062	Turn Signal Lens Assy	1
6	1017064	Mounting Bracket	2
7	1017065	Retainer, Headlight	1
8	101987901	Connector Harness Assembly, Headlight	1
9	101988101	Bulb, Headlight	1
10	101988201	Lens, Headlight	1
11	101988002	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
13	1016879	Headlight Bezel, Right	1
14	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
15	1017062	Turn Signal Lens Assy	1
16	1017064	Mounting Bracket	2
17	1017065	Retainer, Headlight	1
18	101987901	Connector Harness Assembly, Headlight	1
19	101988101	Bulb, Headlight	1
20	101988201	Lens, Headlight	1

13


E

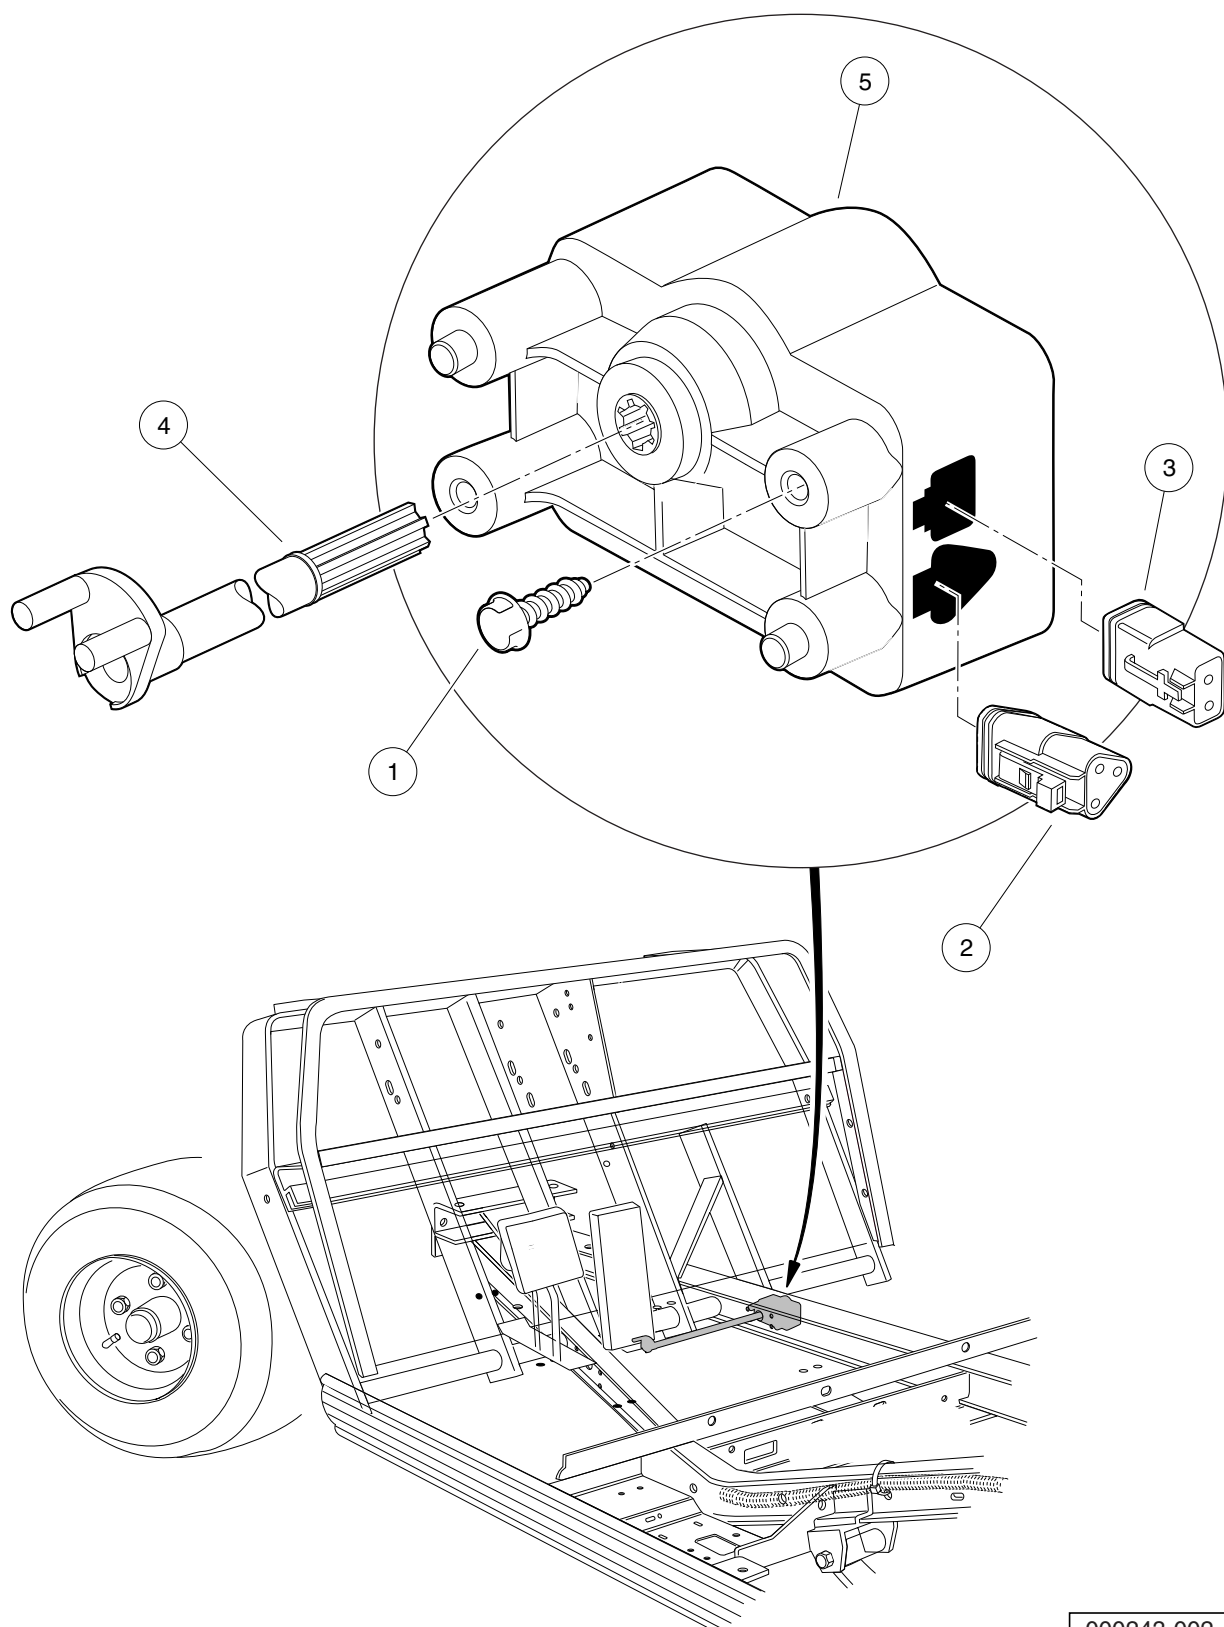

000243-002

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	2	
2	101920101	Kit, 3-Pin Wedge Lock	1	E
3	101936801	Kit, 2-Pin Wedge Lock	1	
4	102101001	Bar, Drive, Cast	1	
5	102101101	MCOR	1	

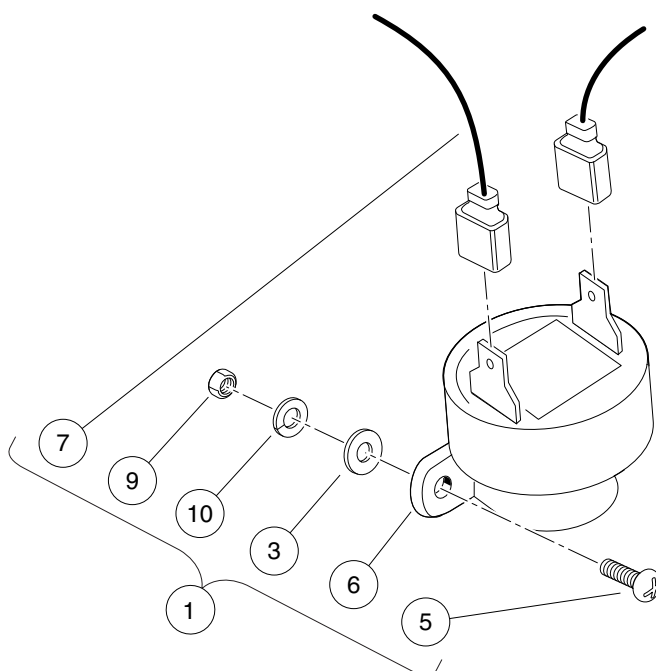


000741-003

REVERSE BUZZER KIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016859	Kit, Reverse Buzzer (includes items 2 through 10)	1
2	1011229	Locknut, #6-32 Whiz	1
3	1012431	Washer, #4 Flat	2
4	1015720	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	1016849	Screw, #4-24 X 0.33 Pan-Head Machine	2
6	1016851	Buzzer, Reverse (9-48 VDC)	1
7	1016857	Wire Assembly Black #18	1
8	8056	Screw, #4-40 X 0.75 Round-Head Machine	2
9	8057	Nut, #4-40 Hex Machine	2
10	8058	Lockwasher, #4 Split	2

13

E

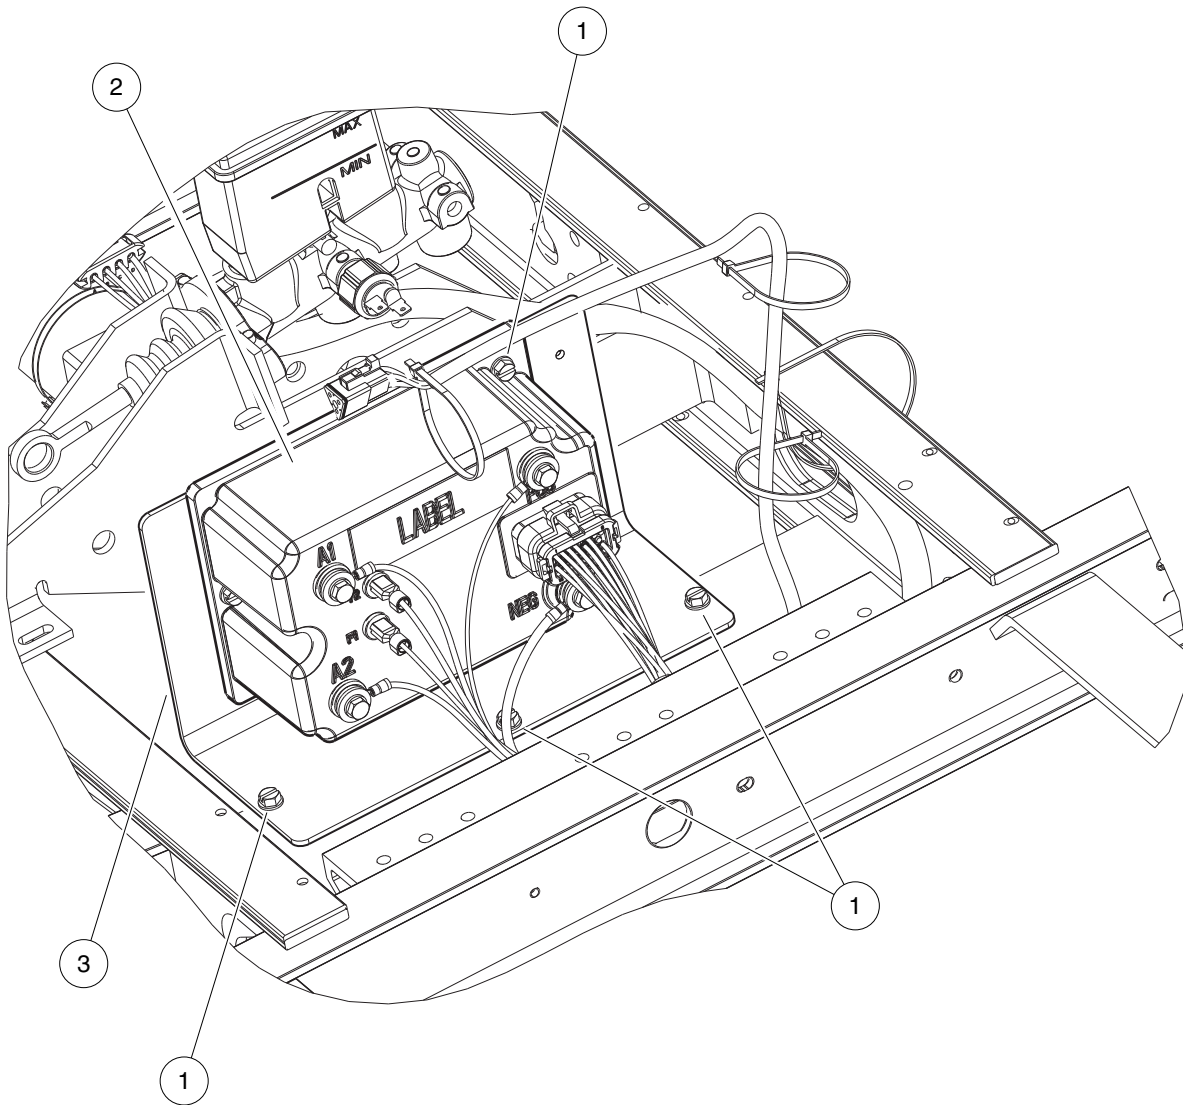


000808-001

BRAKE CONTROLLER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012285	Screw, 1/4 X 0.625 Hex-Head	6
2	103224501	Controller, Brake	1
3	103247901	Bracket, Mounting, Bcu	1

13

E

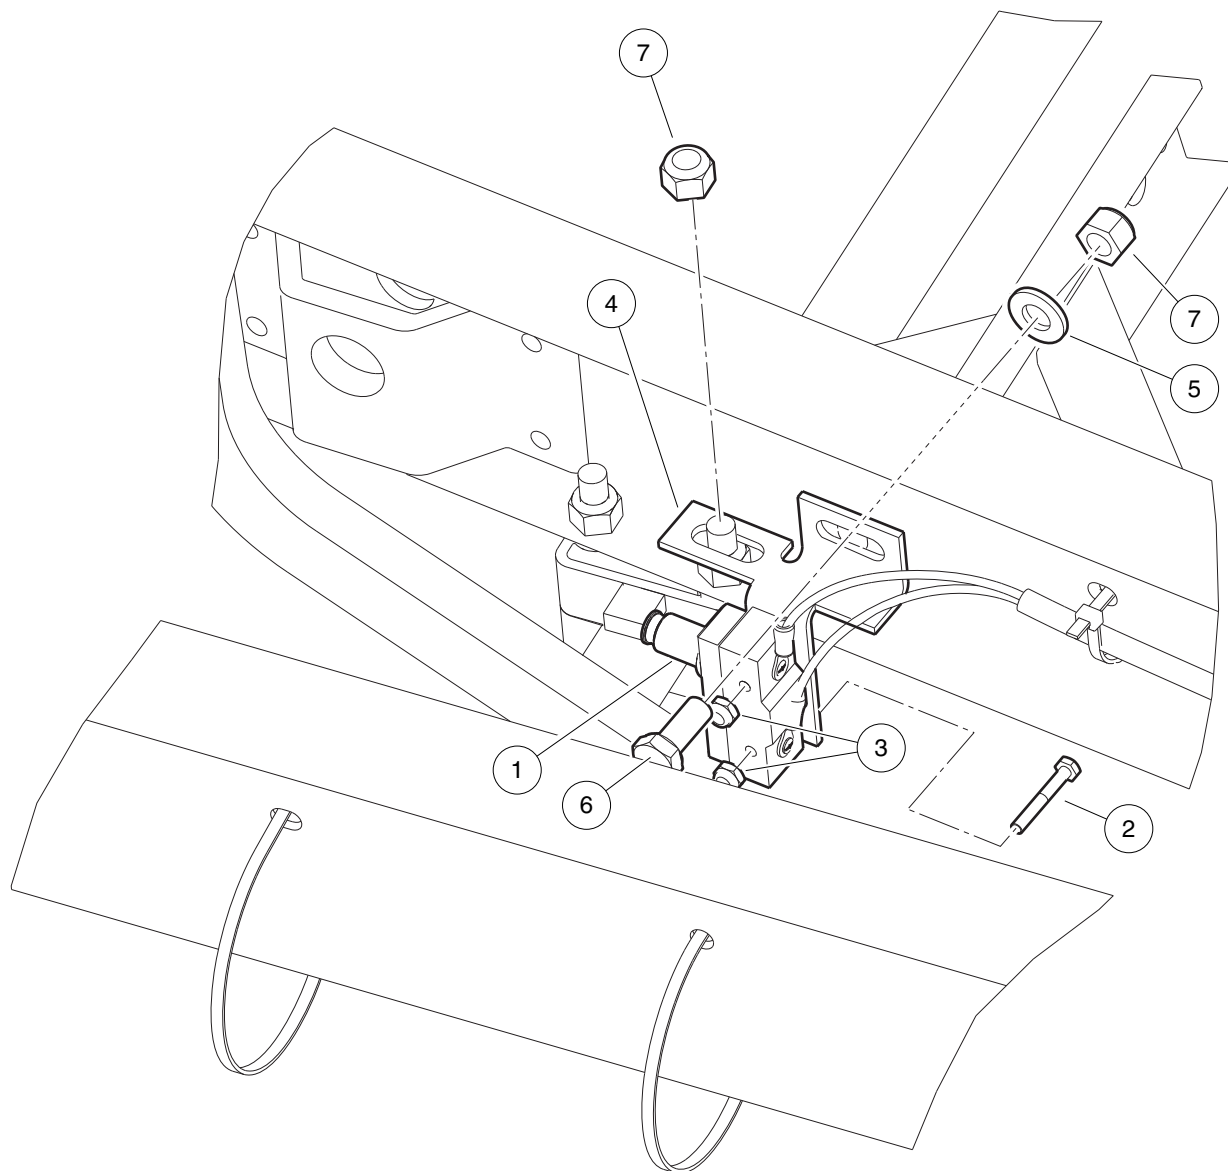


000809-001

BRAKE PEDAL SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011439	Switch, Limit	1
2	1011557	Screw, #6-32 X 1.00 Hex-Head Machine	2
3	101932201	Locknut, #6-32 Nylon	2
4	101957101	Bracket, Brake Light Switch	1
5	1241	Washer, 5/16 Type A Flat	1
6	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	1
7	7473	Locknut, 5/16-18 Nylon Insert	2

13
E

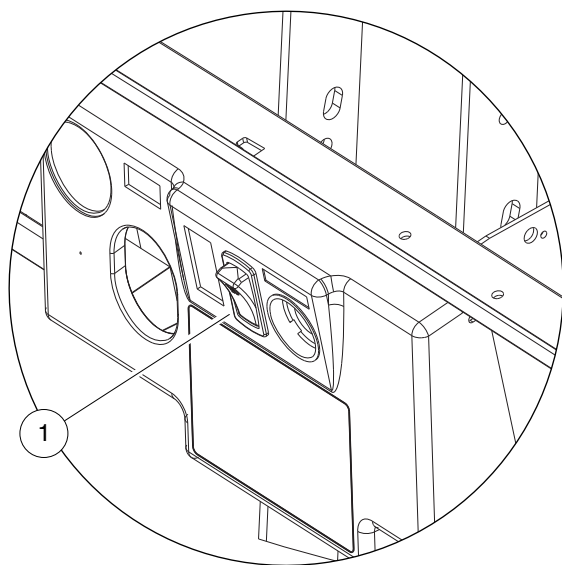


000073-003

HEADLIGHT SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
1	102869401	1 2 3 4 Switch, Rocker, Light	1

13

E

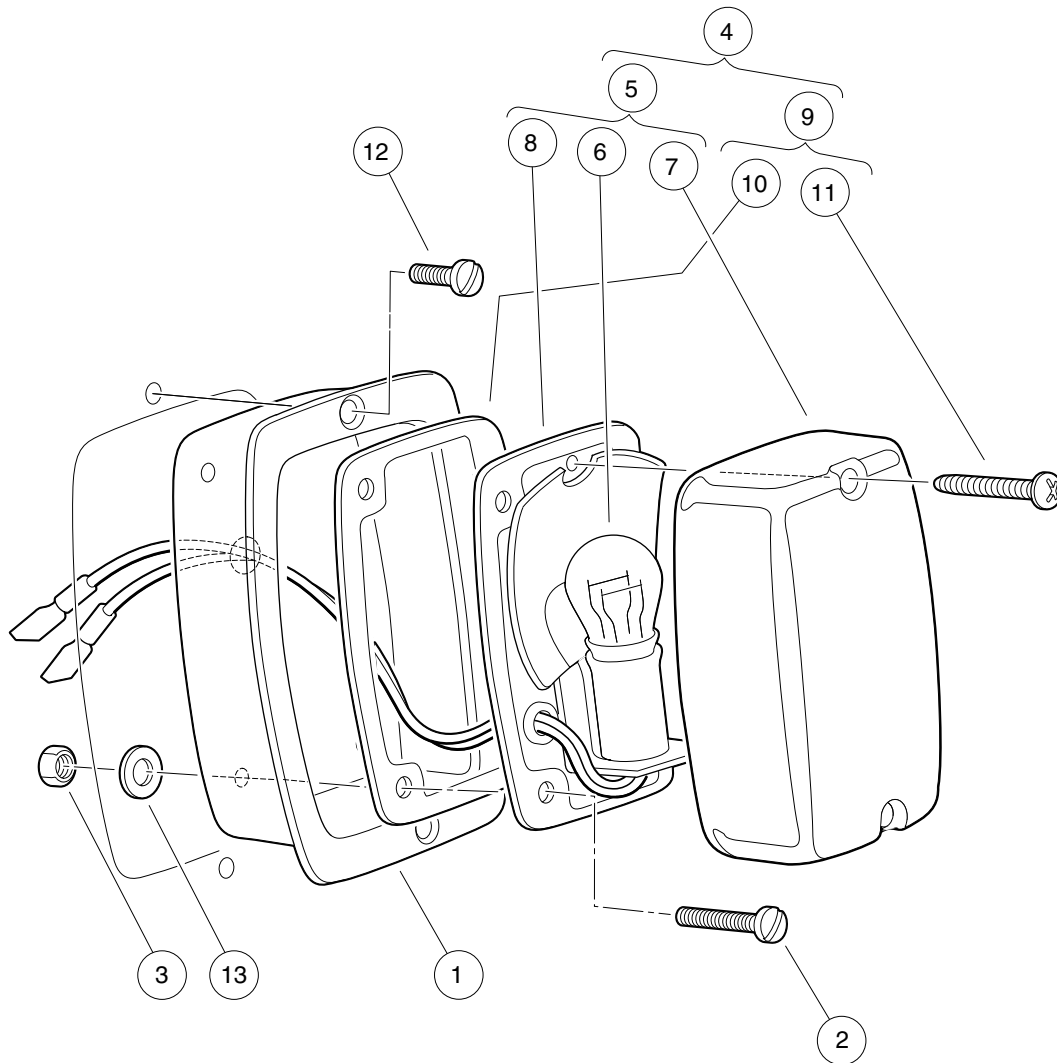


000348-006

TAIL LIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011497	Bezel, Taillight	1
2	1011557	Screw, #6-32 X 1.00 Hex-Head Machine	1
3	1011558	Nut, #6-32 Hex	1
4	1017035	Taillight Assembly (includes items 5 through 9)	1
5	N/A	Light, Tail (includes items 6 through 8)	1
6	1011582	Taillight Bulb	1
7	1011843	Taillight Lens	1
8	N/A	Base, Taillight	1
9	1017699	Hardware Kit, Tail Light (includes items 10 and 11)	1
10	N/A	Gasket	1
11	N/A	Screw, Tapered	2
12	102915601	Plastic Rivet - Tuflock	1
13	7591	Washer, #6 Flat	1

13

E

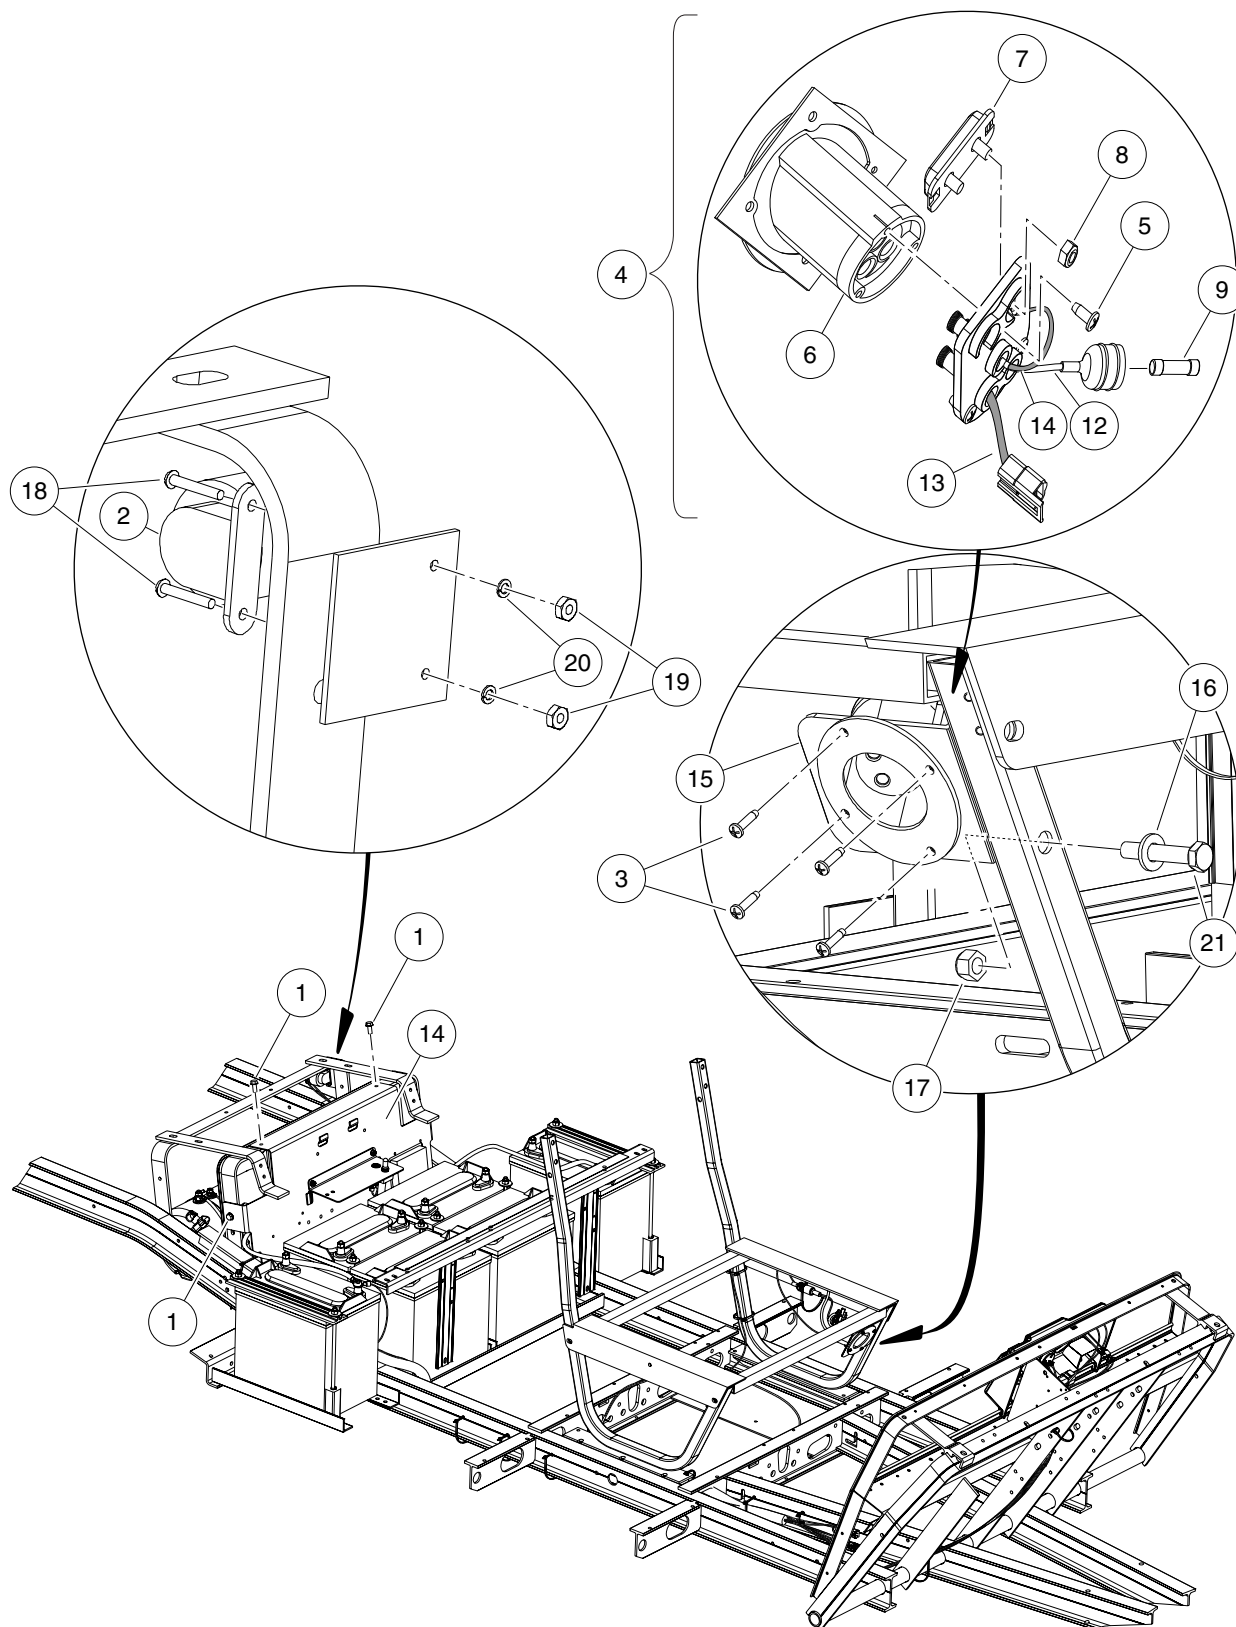


000764-001

CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	4
2	1016851	Buzzer, Reverse (9-48 VDC)	1
3	101832001	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
4	102848701	Fuse and Receptacle Assembly (includes items 5 through 12)	1
5	1017705	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
6	101796501	Receptacle	1
7	101796801	Fuse Assembly (includes item 8)	1
8	1013061	Locknut, #10-32 Nylon Insert	2
9	N/A	Fuse, 3/8-Amp	1
10	N/A	Wire Assembly, Sense Lead, Gray	1
11	N/A	Wire Assembly, #10 Red	1
12	N/A	Wire Assembly, #10 Black	1
13	N/A	Instl, Elec Sys, 48v, Mb	1
14	103214301	Cover, Iq Plus Controller	1
15	103244301	Plate, Receptacle Back	1
16	1241	Washer, 5/16 Type A Flat	1
17	7473	Locknut, 5/16-18 Nylon Insert	1
18	8056	Screw, #4-40 X 0.75 Round-Head Machine	2
19	8057	Nut, #4-40 Hex Machine	2
20	8058	Lockwasher, #4 Split	2
21	8963	Screw, 5/16-18 X 1.75 Hex-Head Cap	1

13

E

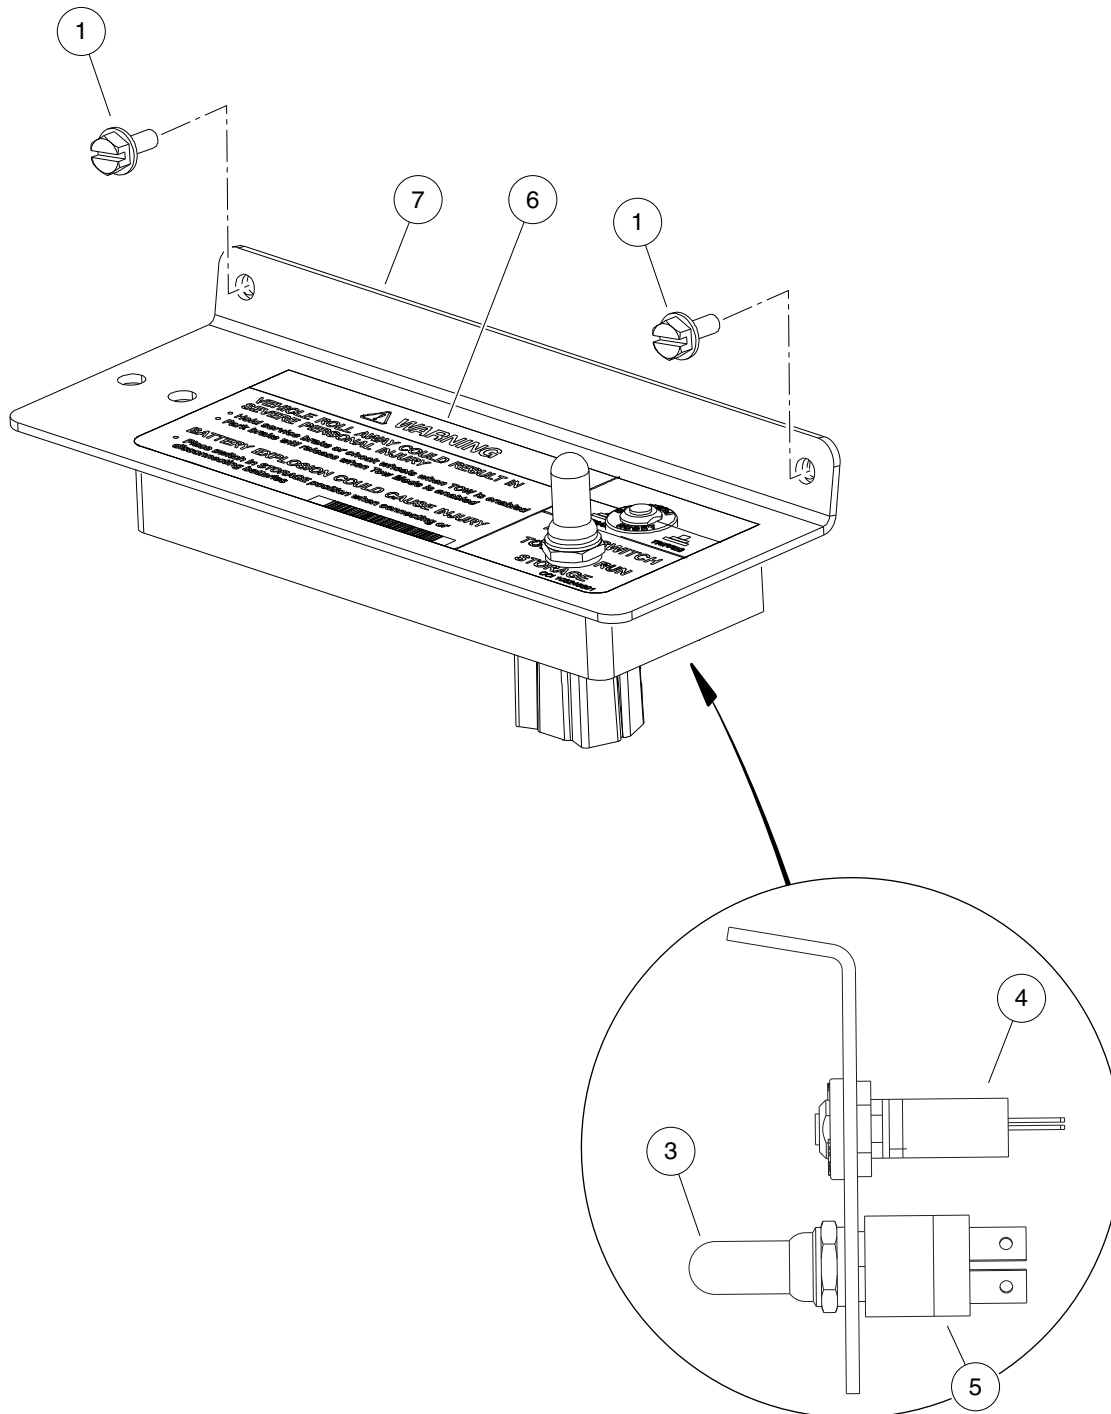


000425-002


TOW/RUN SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102817101	Screw, 1/4-20 X .50 Hex Wsh Hd	2
2	N/A	Asm, Stow Switch, Elec (includes items 3 through 7)	1
3	101908401	Boot, Switch	1
4	102838101	Circuit Breaker 250vac-50vdc	1
5	103248501	Switch, Toggle, 3 Pos Dpdt	1
6	103248801	Decal, Stow Switch, Elec	1
7	103259801	Plate, Switch, Run/stow	1

13

 E



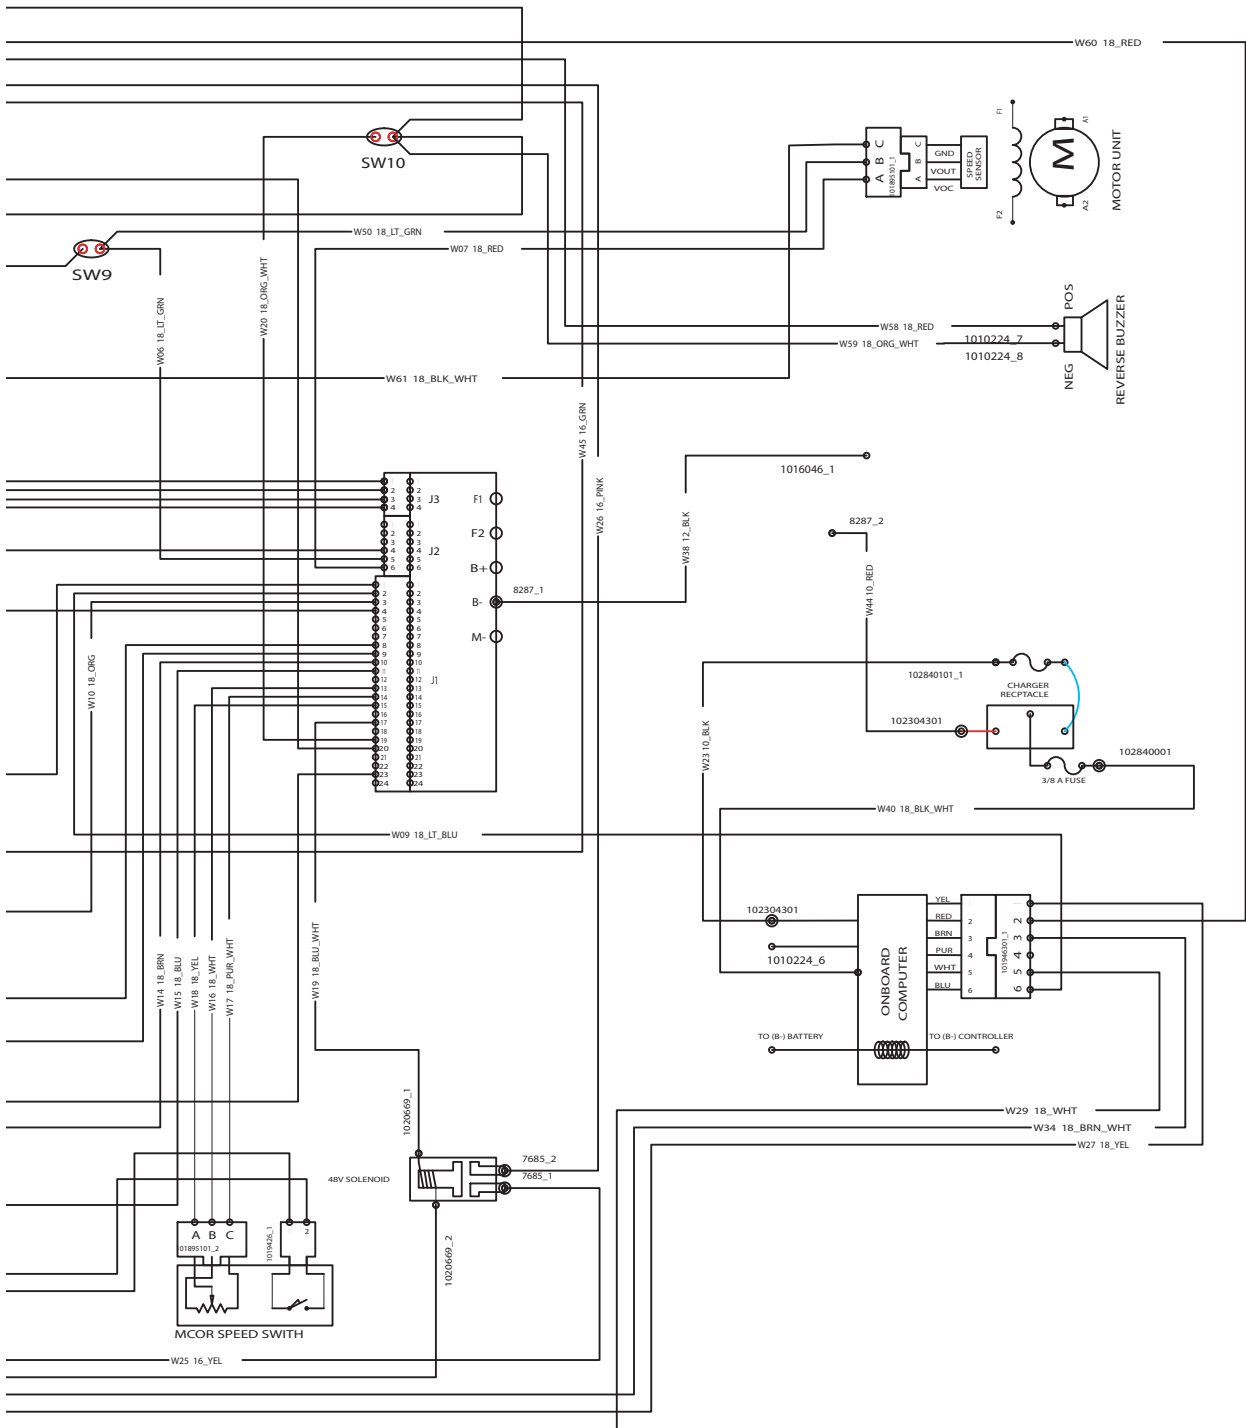

000766-001


See previous two pages for illustration.

WIRING – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102002801	Wire Assy, #4 Black	1
2	102002901	Wire Assy, #4 Black	1
3	N/A	Instl, Elec Sys, 48v, Ab	1
4	103013501	Wire Harness, Elec, Ctl	1
5	103013701	Wire Harness, Brake	1
6	103013801	Wire Harness, Power, Rear Plt	1

13

E

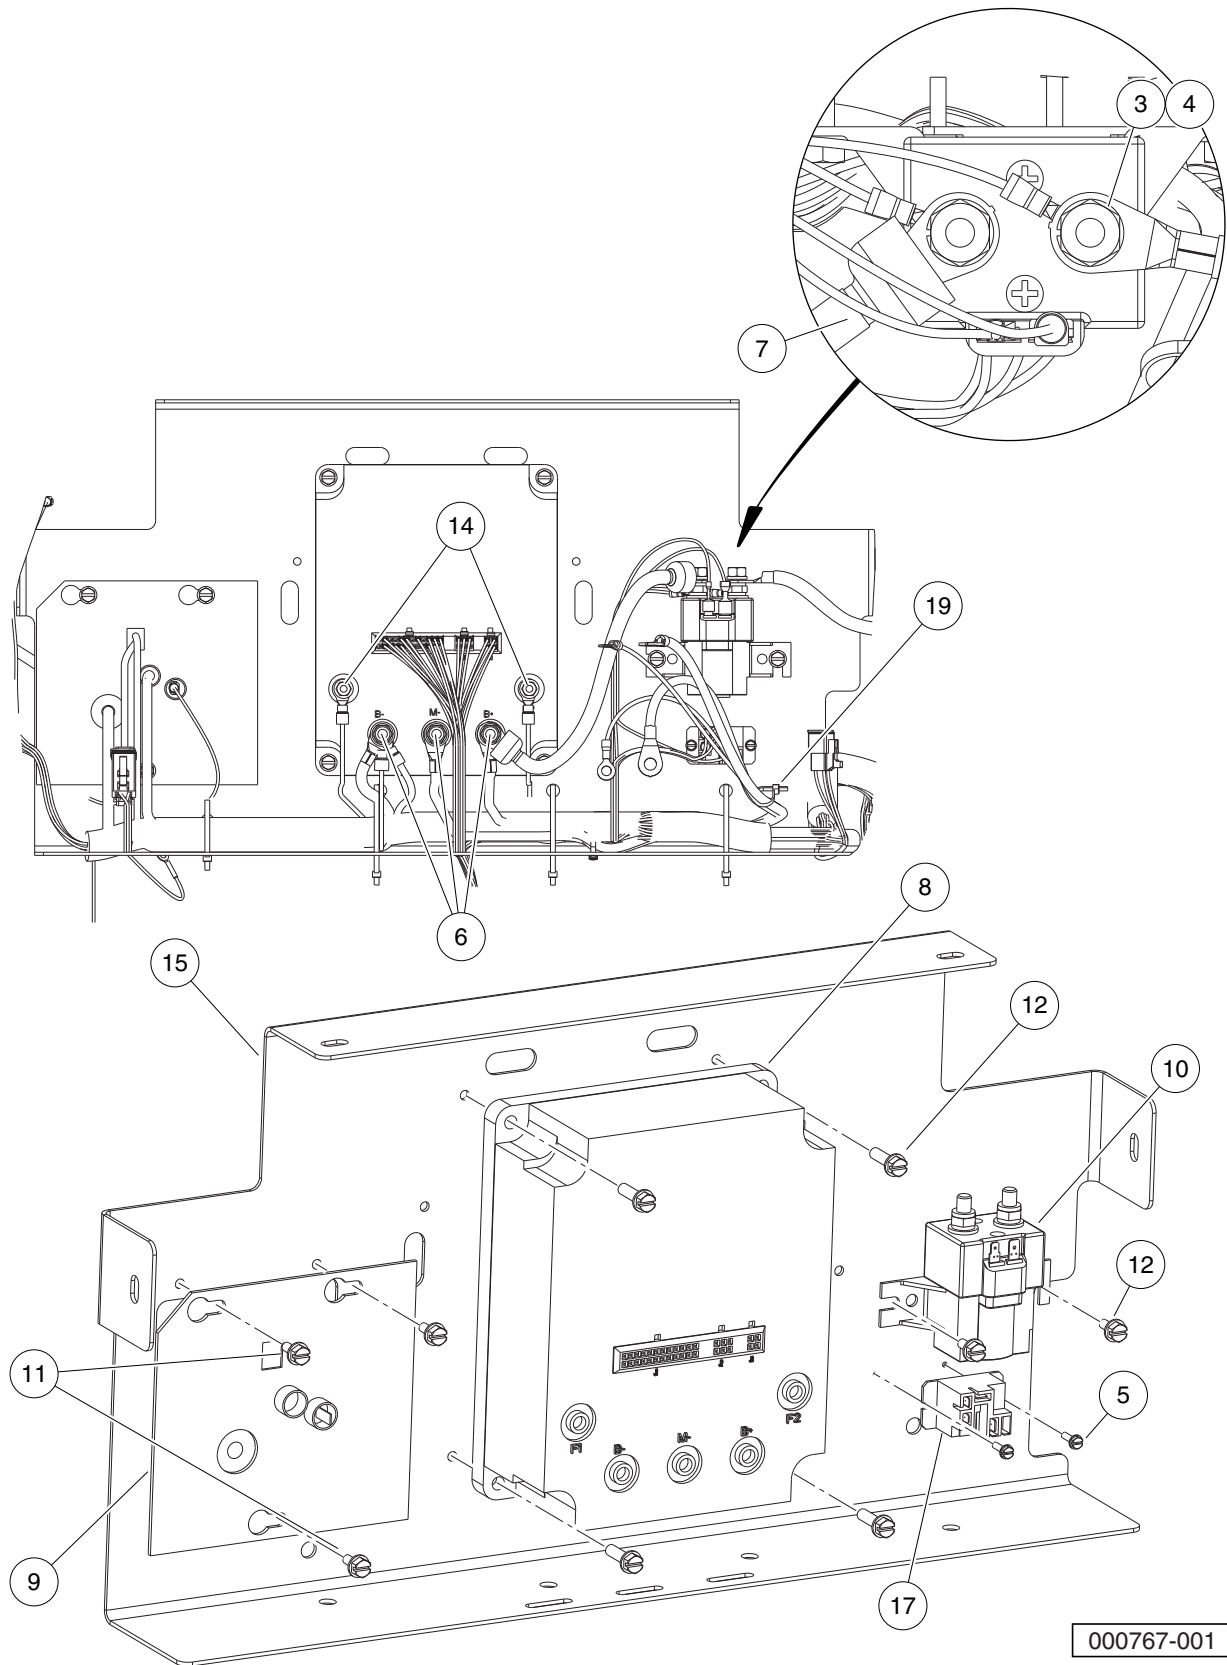


000767-001

COMPONENT MOUNTING PLATE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Elec Sys, 48v, Mb	1
2	N/A	Asm, Component Mtg Plate, Ab (includes items 3 through 19)	1
3	1012528	Nut, M8-1.25 Hex	2
4	1013734	Lockwasher, 8mm Split	2
5	1015720	Screw, #6-32 X 1/2 Hex Washer-Head	2
6	102240501	Bolt, Controller, Terminal	3
7	102440901	Wire Asm, #4 Yellow, 13"	1
8	102774501	Controller, 500 Amp	1
9	102774603	Computer, Onbrd, 8x 6v, 46"	1
10	102774701	Solenoid, 48v	1
11	102817101	Screw, 1/4-20 X .50 Hex Wsh Hd	5
12	102817201	Screw, 1/4-20 X .88 Hex Wsh Hd	4
13	102846402	Asm, #4 Red Wire, 33"	1
14	102859501	Screw, M6 X 1 X 20 Ser Hex Flg	2
15	102963301	Plate, Component Mtg, Elec.	1
16	103414901	Kit, Relay, 48v 30a W/instr (includes items 17 and 18)	1
17	103397901	Relay, Spst No, 48v 30a, Pmt	1
18	N/A	Kit, Relay, 48v 30a Instrns	1
19	8990	Tie Wrap, 8" Nylon	4

13

E

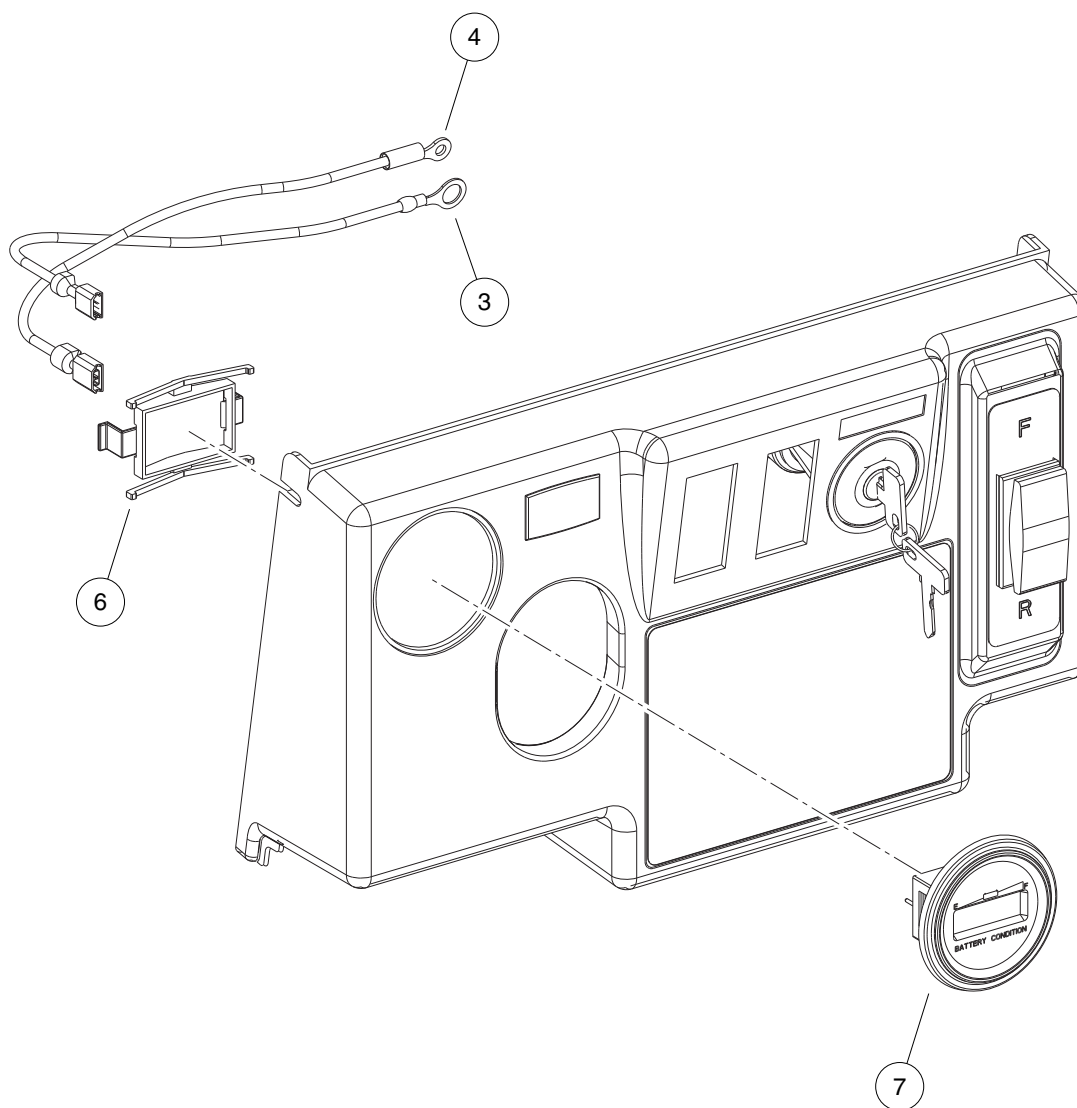


000817-001

BATTERY GAUGE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103257603	Instl, Gauge, Battery Cond, Ki (includes items 2 through 5)	1
2	N/A	Instructions,bat.cond.ind	1
3	103257701	Wire Asm, #18 Black, 2565mm	1
4	103257801	Wire Asm, #16 Red, 330mm	1
5	103354401	Gauge, Battery Cond Ind, Rnd (includes items 6 and 7)	1
6	103348202	Clip, Bci, Round	1
7	N/A	Battery Condition Indicator Gauge	1

13

E

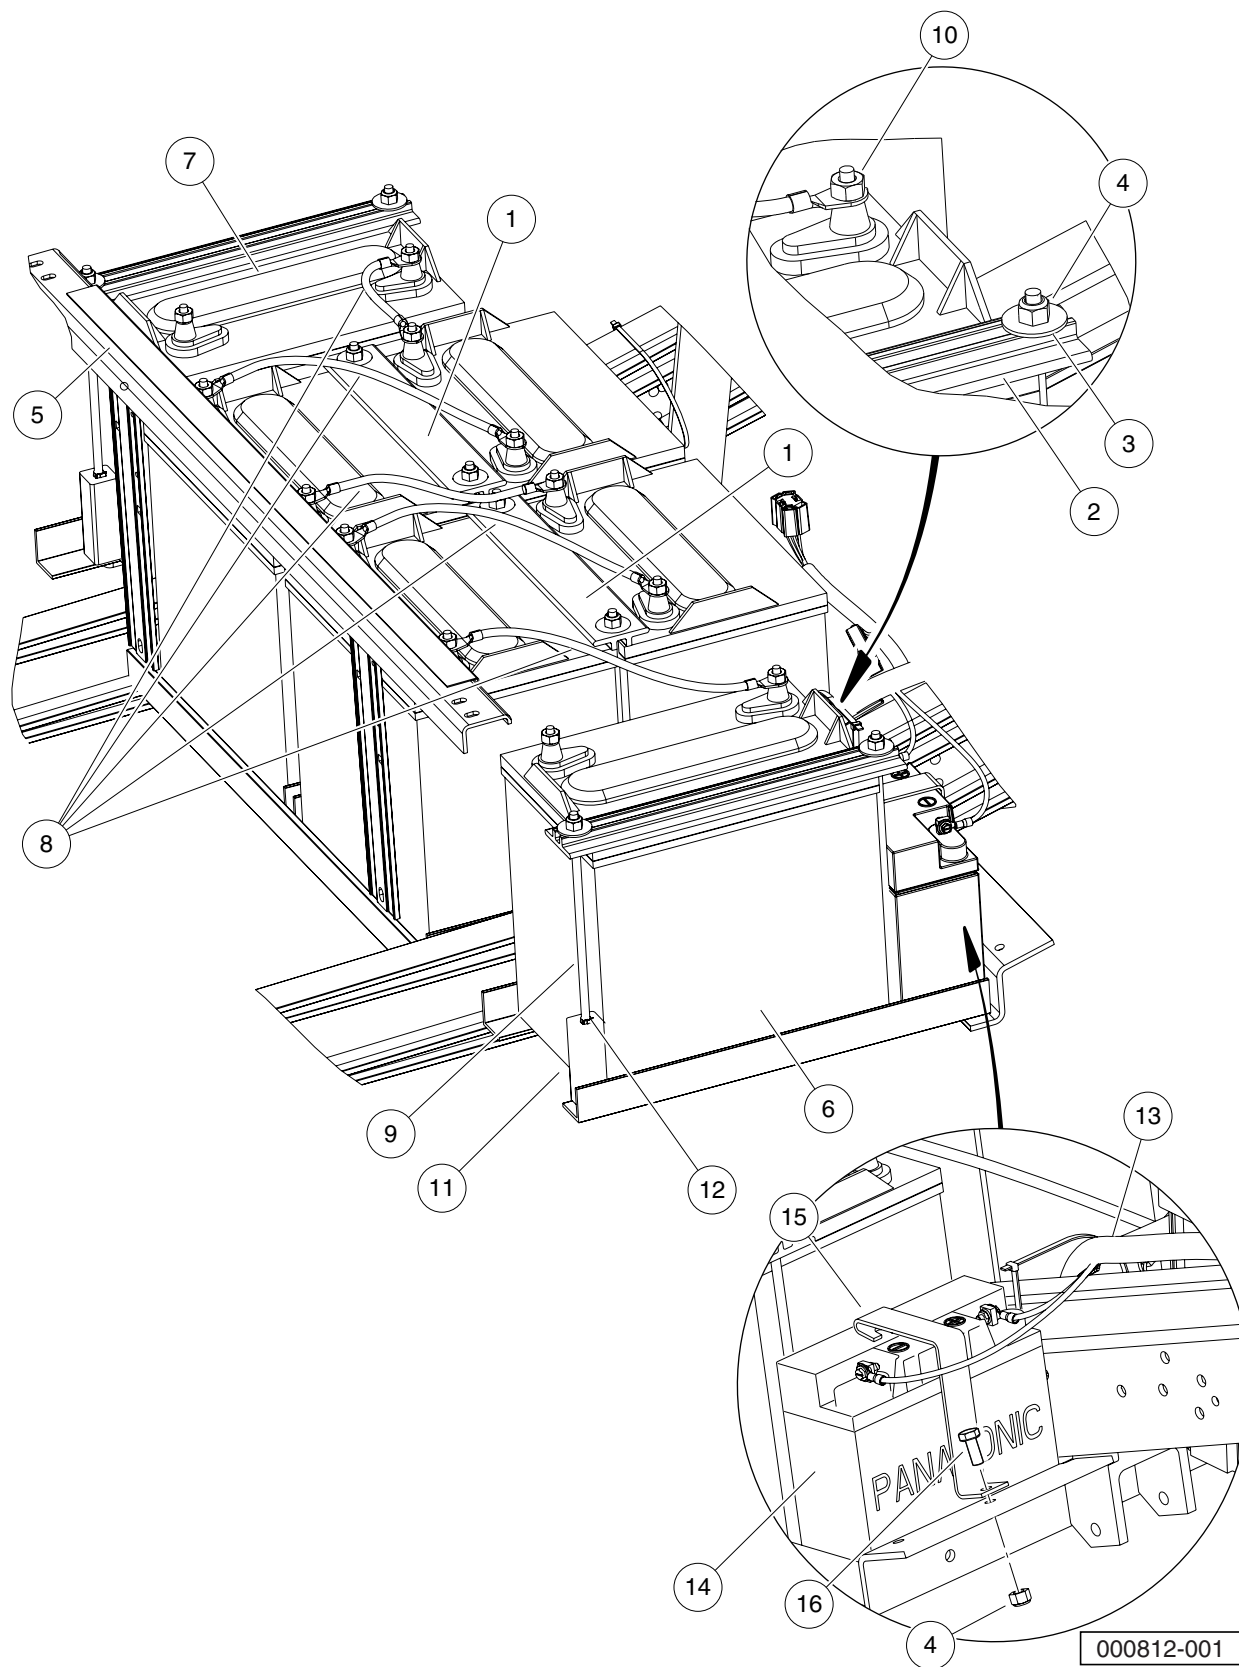



BATTERIES – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101090801	Hold-Down, Battery	2
2	101090802	Hold-Down, Battery	2
3	1011578	Washer, 5/16 Type B Flat	8
4	1015072	Locknut, 5/16-18 Nylon Insert	9
5	101837001	Battery Insulator	1
6	101964201	Battery, 8v Trojan T890 (Wet) (includes item 7)	6
7	101797801	Cap, 4-Gang Battery	1
8	102002801	Wire Assy, #4 Black	5
9	102845203	Rod, Battery Hold Down 10.7"	8
10	102873401	5/16-18 Heavy Hex Nut	12
11	102980801	Extr, Plastic, 1 X 1 X 3	2
12	102980901	Clamp, Hose, Nylon, .25	2
13	103013701	Wire Harness, Brake	1
14	103014101	Battery, Sla, 12v 17ah	1
15	103195101	Clamp, Battery, Redundant	1
16	103422501	Screw, 5/16 - 18 X .75 Ss Hex	1

13
E

13

E

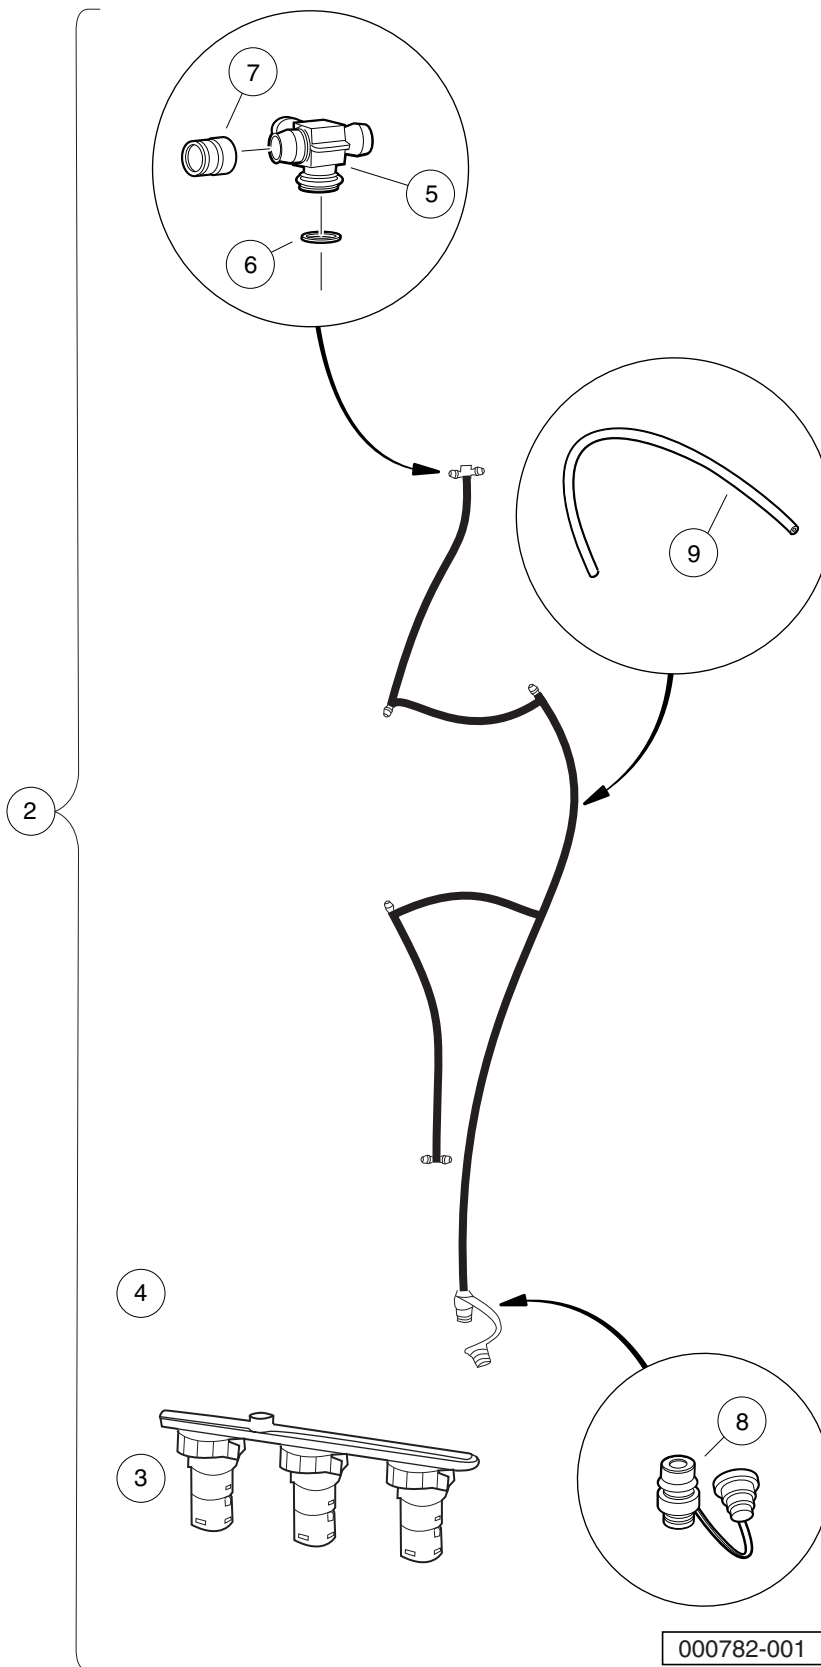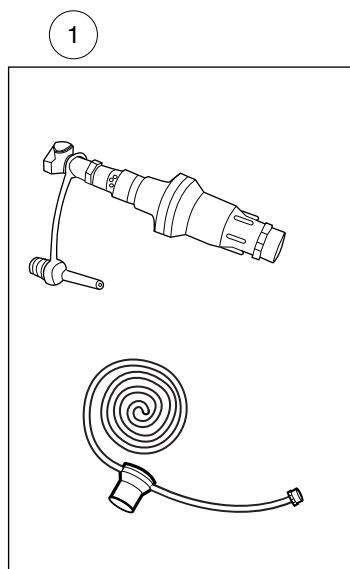


SINGLE POINT WATERING SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	102958001	Kit Regulated Hose Sply Spws	1	
2	103236801	Kit, Spws, 8v (includes items 3 through 9)	1	E
3	102956401	Manifold, SPWS (Single-Point Watering System)	6	
4	N/A	Instr Spws Kit Prec Ds Fr	1	
5	103226201	Fitting Spws Swivel T	6	
6	103226301	O-ring Spws Swivel T	6	
7	103226401	Cap Spws Swivel T Red	7	
8	103226601	Coupler Male Spws Supply	1	
9	103226701	Tubing Spws	1	

ELECTRIC MOTOR

14

E

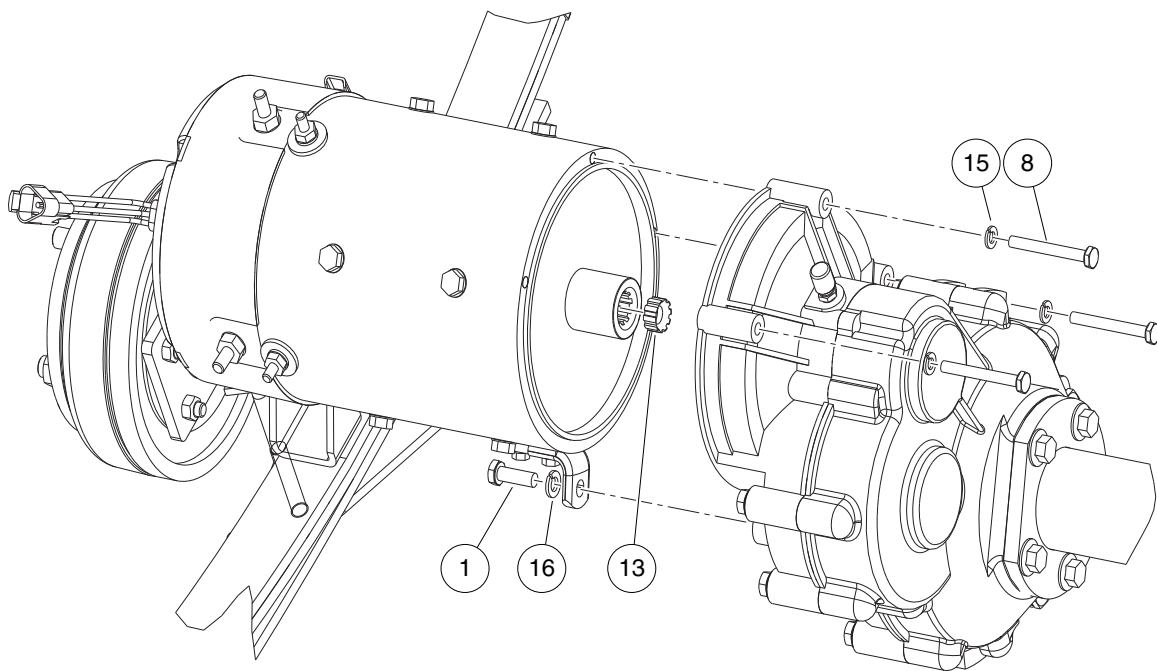


000758-001

DRIVE UNIT MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010934	Screw, 5/16-18 X 1.00 Hex Cap	1
2	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
3	102235201	Bumper, Drive Unit	1
4	451	Lockwasher, 1/4 Split	3
5	7174	Lockwasher, 5/16 Split	1

14

E

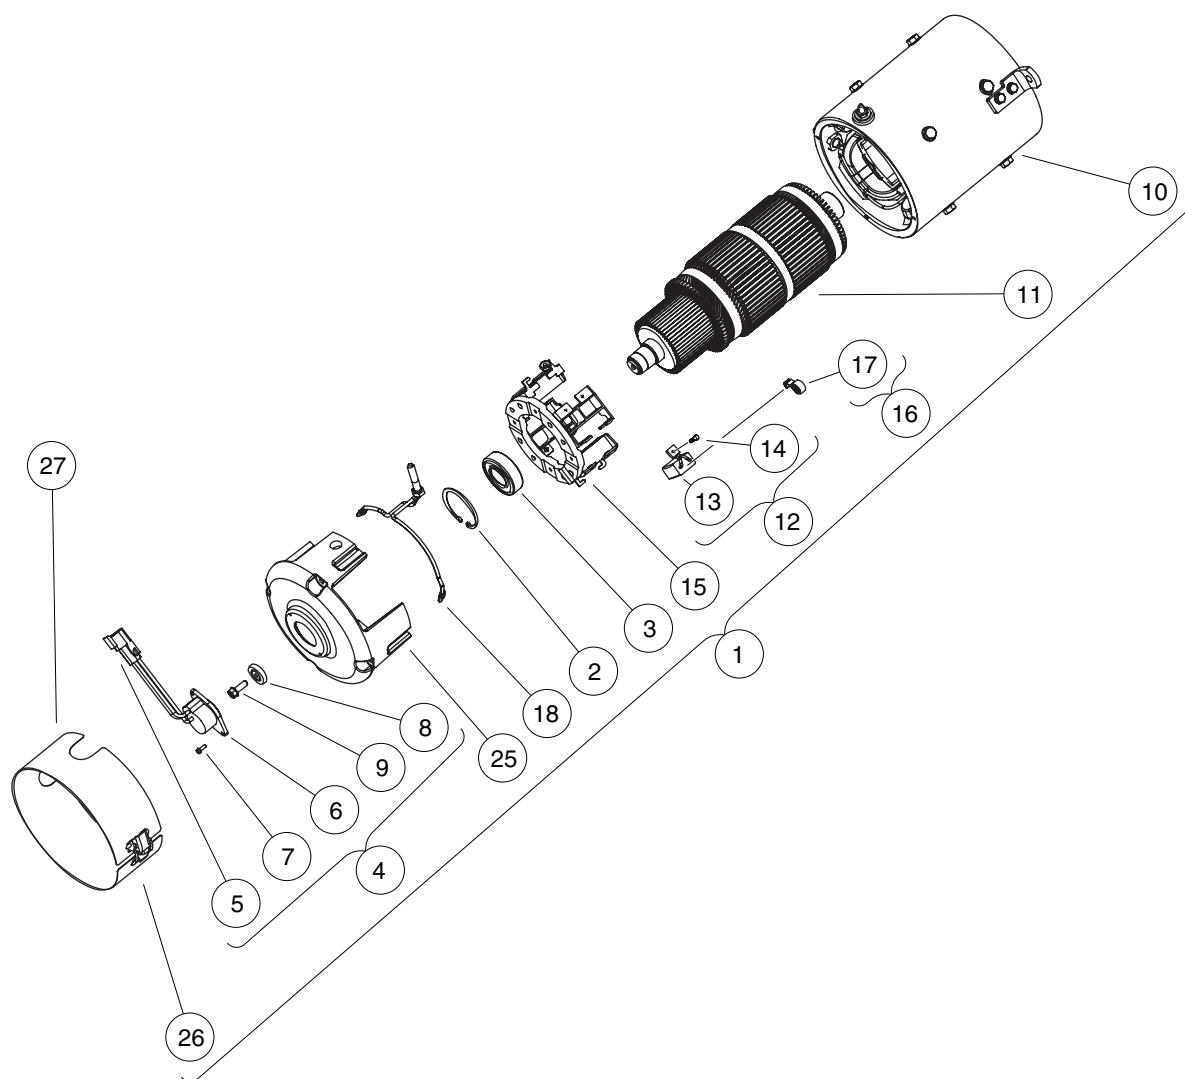

000411-003

ELECTRIC MOTOR (MODEL DA5-4006)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102775101	IQ Plus Electric Motor, 48-VDC 3.7 hp (includes items 2 through 26)	1
2	102186301	Ring, 2.24" Internal Retaining	1
3	102186401	Bearing, Ball	1
4	102704901	Kit, Speed Sensor (includes items 5 through 9)	1
5	101942301	Kit, 3-Pin Wedge Lock	1
6	N/A	Sensor, Motor Speed, ADC	1
7	N/A	Screw, #8-32, Taptite Thread	2
8	N/A	Magnet, ADC Motor	1
9	N/A	Screw, 1/4-20 x 0.5	1
10	N/A	Asm, Frame And Field, 3.7 Hp	1
11	N/A	Armature (Includes external hardware - not shown)	1
12	102938601	Kit, Brush, 3.7 Hp (includes items 13 and 14)	1
13	N/A	Brush, Motor	8
14	N/A	Screw, Taptite	8
15	102938701	Asm, Brush Box, 3.7 Hp	1
16	102938801	Kit, Brush Spring, 3.7 Hp (includes item 17)	1
17	N/A	Brush Spring	8
18	102938901	Kit, Brush Lead Asm, 3.7 Hp (includes items 19 through 24)	1
19	N/A	Terminal and Lead Assembly	2
20	N/A	Insulator, Terminal	2
21	N/A	Washer, Insulating	2
22	N/A	Washer, Flat, 5/16, Brass/Bronze	2
23	N/A	Nut, 5/16, Steel	4
24	N/A	Lockwasher, 5/16, Steel	2
25	102939001	Commutator End Head, 3.7 Hp	1
26	102939101	Sealed Headband, 3.7 Hp	1
27	102939102	Vented Headband, 3.7 HP (optional - not shown)	1
Note: Brush Lead Asm Kit includes 2 sets of wire assemblies, terminal hardware, and terminal insulators (not shown).			


14

E

TRANSAXLE – ELECTRIC VEHICLE

15

E

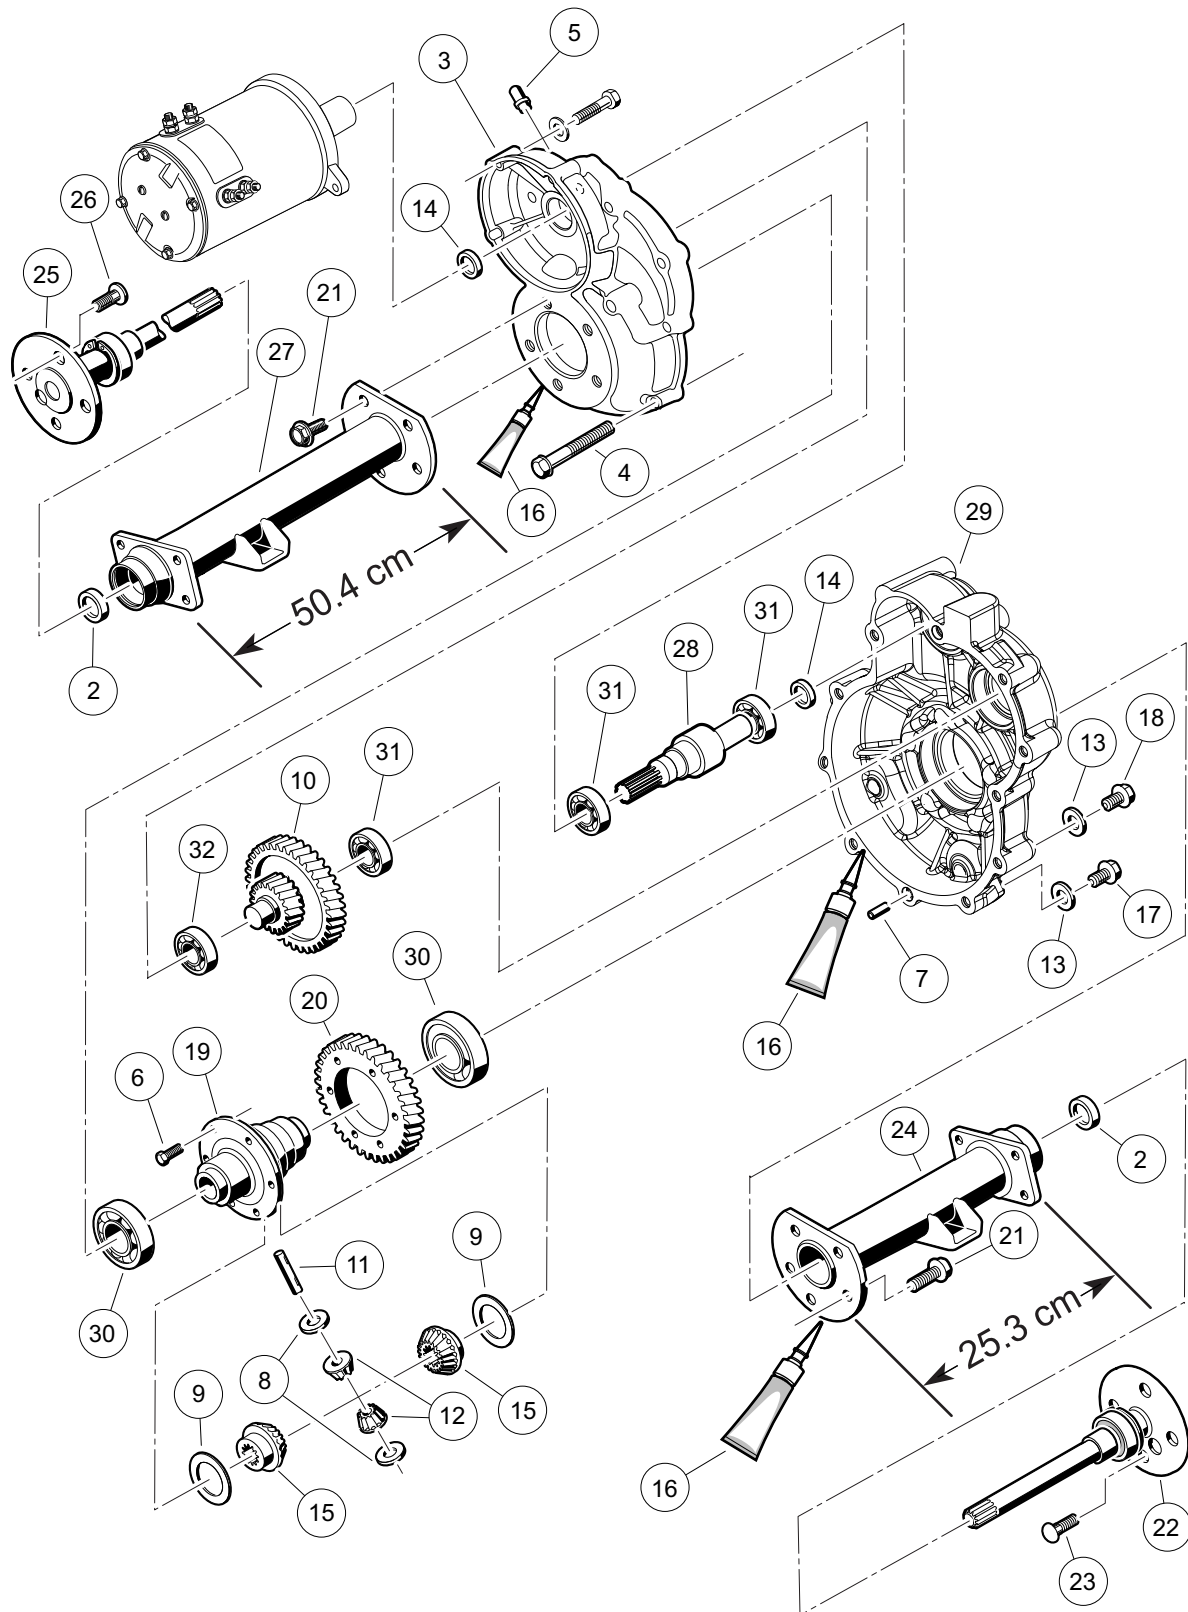

000223-003

TRANSAXLE – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103324201	Transaxle, Elec, Emag Brake (includes items 2 through 32)	1
2	1013794	Axle Shaft Oil Seal	2
3	101895501	Gear Case, Passenger-Side	1
4	101897001	Screw, M8-1.25 X 60mm Hex-Head	11
5	101897201	Breather	1
6	101897401	Screw, M10-1.25 X 25mm	6
7	101897601	Pin, 11mm OD X 8.5mm ID X 10mm	2
8	101903601	Washer, Thrust	2
9	101903701	Washer, Thrust	2
10	101906901	Intermediate Shaft Assembly	1
11	101922101	Pin, 15.99mm X 88.7mm Dowel	1
12	101923001	Gear, Differential Idler	2
13	101923201	Gasket	2
14	101923501	Seal, Lip	2
15	101923901	Gear, Differential	2
16	101928701	Liquid Gasket (Transaxle case)	1
17	101972101	Plug, M14-1.5 X 12mm Magnetic	1
18	101972201	Plug, M14-1.5 X 12mm Hex	1
19	102356601	Housing, Differential, 6 Bolt	1
20	102356801	Gear, Differential Output, 6-Bolt	1
21	102357001	Screw, Flg Hd M10 X 1.5 X 30	10
22	102886301	Axle Assembly, Driver-Side (includes item 23)	1
23	101922201	Lug Stud	4
24	102886401	Tube, Axle, Driver-Side	1
25	102886501	Axle Assembly, Passenger-Side (includes item 26)	1
26	101922201	Lug Stud	4
27	102886601	Tube, Axle, Passenger-Side	1
28	N/A	Shaft, AB, Elec	1
29	N/A	Gear Case, AB, Elec	1
30	7330	Inner Axle Tube Bearing	2
31	7335	Bearing	3
32	7336	Bearing	1

15

E


15

E

BATTERY CHARGER

16

E

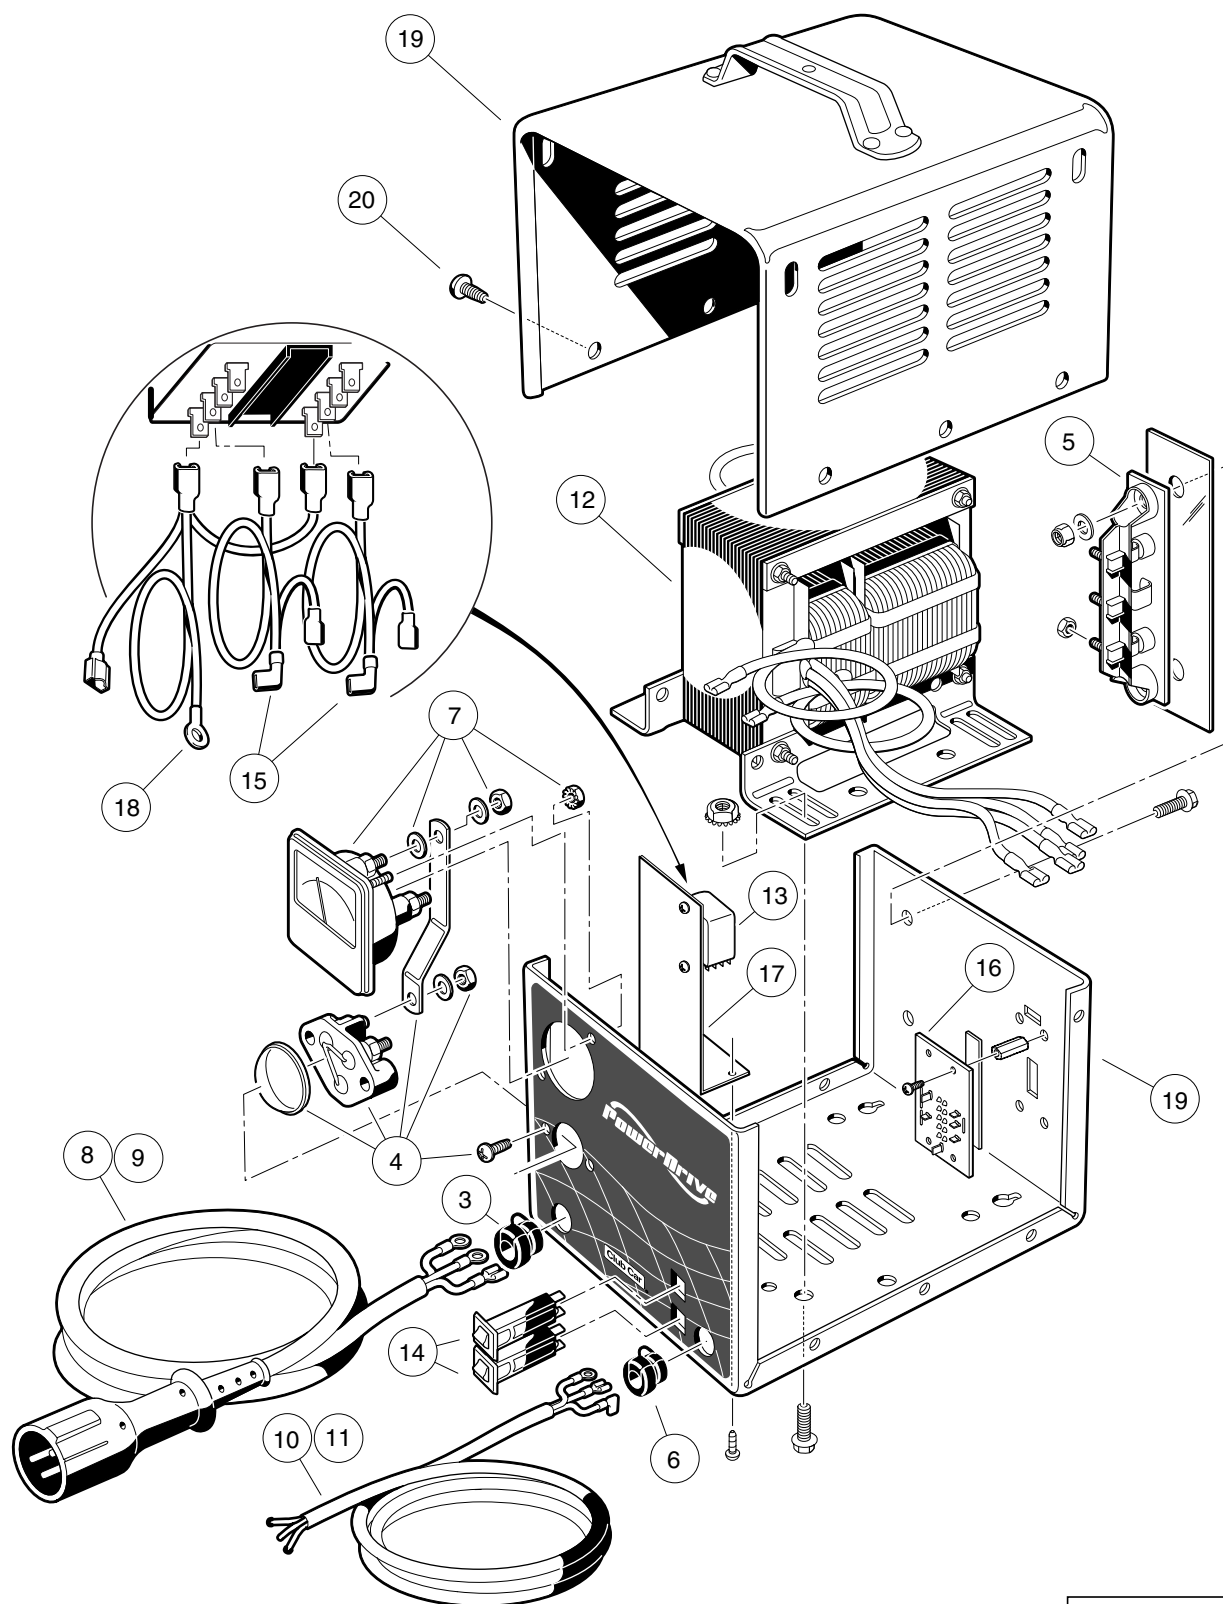

000352-001

POWERDRIVE BATTERY CHARGER (MODEL 18780), EXPORT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101831503	Battery Charger, 48-Volt DC (8.5-ft DC, 6-ft AC)	1
2	101831504	Battery Charger, 48-Volt DC (12-ft DC, 9-ft AC) (includes items 3 through 20)	1
3	1012098	Bushing, DC Cord	1
4	1012101	Fuse Assembly	1
5	1015914	Rectifier with Heatsink Assembly	1
6	1015917	Bushing, AC Cord	1
7	101828501	Ammeter	1
8	101828901	Cord, DC, 113-Inch (287 cm)	1
9	101828902	Cord, DC, 154-Inch (391 cm)	1
10	101831701	Cord, AC, 80-Inch (203 cm), without Plug	1
11	101831702	Cord, AC, 118-Inch (203 cm), without Plug	1
12	101838201	Transformer, Export Battery Charger	1
13	101838301	Relay, Export Charger	1
14	101838401	Circuit Breaker	2
15	101838501	Kit, Wire Assembly	1
16	101838601	Four-Position Switch	1
17	****	Mounting Bracket, Relay	1
18	101914401	Assembly, Voltage Suppressor	1
19	N/A	Case, Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
**** Special order item available upon request. Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

E

MAINTENANCE AND SERVICE TOOLS

17

G

E


D

17

G

E

D

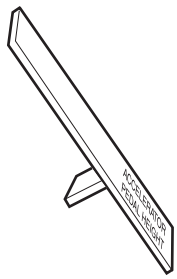


1



2



3

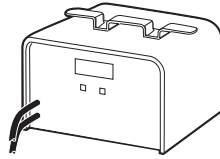


4




5



6

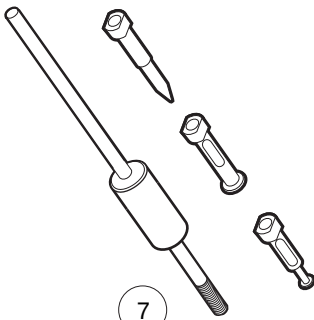


7

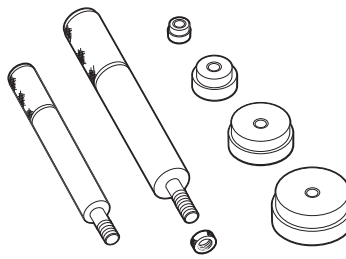

8




9

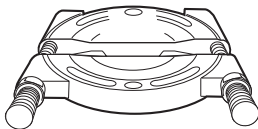


10




11

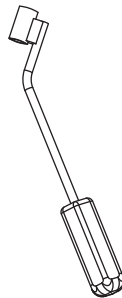


12

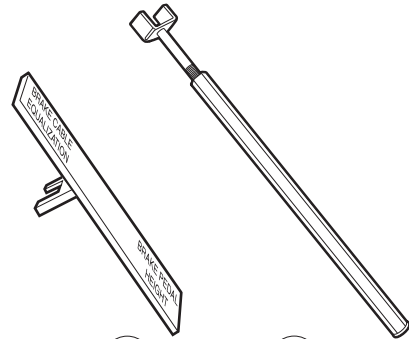


14 15
13

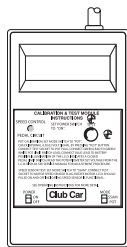


16

 

17

 

18

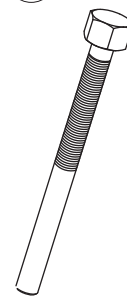

19

MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	101871001	Accelerator Pedal Adjustment Tool		1	1	
2	101813202	Adhesive, Guide Ring, 3-Gram Tube			1	
3	101641202	Arbor		1		
4	101831901	Battery Discharge Machine, 36/48 Volt			1	
5	1014305	Battery Terminal Protector Spray	1	1	1	
6	1011767	Battery Thermometer	1	1	1	
7	1016417	Bearing and Oil Seal Remover Assembly	1	1	1	
8	1016416	Bearing Driver Set	1	1	1	
9	1012811	Bearing Puller	1	1	1	
10	1012812	Bearing Puller Wedge Attachment	1	1	1	
11	1013582	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	102555501	Brake Cable Release Tool	1	1	1	
13	102249901	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	101887101	Calibration Test Module			1	
17	101808401	Cam Installation Tool		1		
18	102562401	Charger Bezel Tool			1	
19	102686101	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				



MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
20	1014510	Clutch Tool Kit (includes items 21 - 27)		1		
21	1014498	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
22	1014496	Drive Clutch Puller (for Kawasaki engines only)		1		
23	1014497	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	1014508	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	1014507	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	1015524	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	101809101	Press Weldment (for Kawasaki engines only)		1		
28	102601501	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	102603501	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	102605201	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	102606101	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	102607501	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	102773801	Cutter, Valve Seat, #122		1		
37	102773901	Cutter, Valve Seat #115		1		
38	102774101	Wrench, T, #505.....		1		
39	102774101	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	102774201	Pilot, 6.6 MM		1		
42	102774301	Pilot, 6.62 MM.....		1		
43	102774401	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

17


G

E

 
D




44

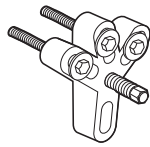

45

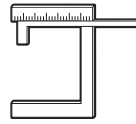


46

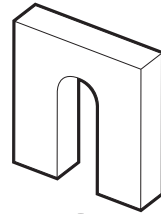


47



 48




49

 

50



51

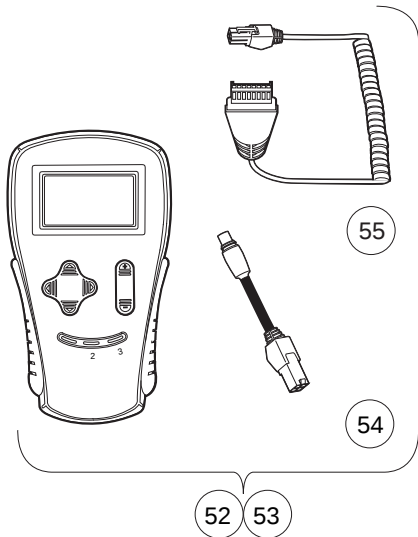


52

53

55

54

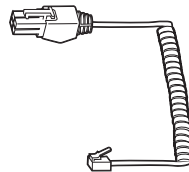

56



58




59

60



61

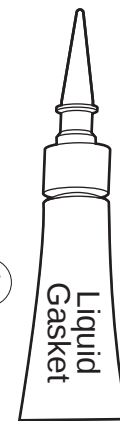

57

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
44	1012151	Dry Moly Lubricant	1	1	1	
45	1016627	Flywheel Puller Kit (for Kawasaki Engines)		1		
46	102669901	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		
47	1016418	Gear Yoke	1	1	1	
48	101933101	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	102169401	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	1011478	Hydrometer	1	1	1	
51	1013593	Internal Retaining Ring Pliers	1	1	1	
52	102248803	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	102248804	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	102251501	Adaptor, Cable			1	
55	102241502	IQDM Series 2 Cable			1	
56	102241501	IQDM Series 1 Cable (replacement)			1	
57	101928701	Liquid Gasket (transaxle case)	1	1	1	
58	102243402	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	101997201	Paint, Touch-Up – Beige*		1	1	
59	101997207	Paint, Touch-Up – Black*		1	1	
59	101997212	Paint, Touch-Up – Burgundy*		1	1	
59	101997211	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	101997205	Paint, Touch-Up – Dark Gray*	1	1	1	
59	101997209	Paint, Touch-Up – Dark Green*	1	1	1	
59	101997204	Paint, Touch-Up – Gray*	1	1	1	
59	101997203	Paint, Touch-Up – Red*	1	1	1	
59	101997206	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	101997202	Paint, Touch-Up – White*	1	1	1	
60	102562301	Paint, Precedent Underbody – Gray		1	1	
61	102587201	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 59 is not for use on Surlyn[®] body material, which is used on Precedent vehicles.						

17


G

E


D



62

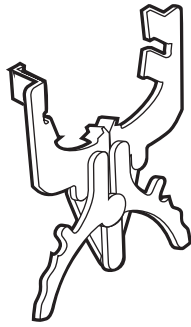

63

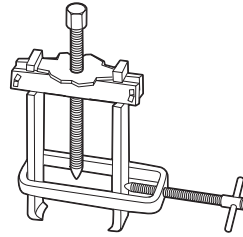


64



65



 66



67



68




69



70




71

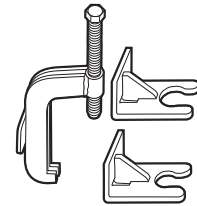

72



73

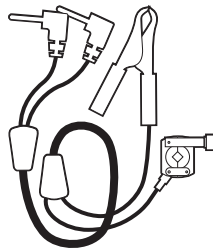


74




75



76

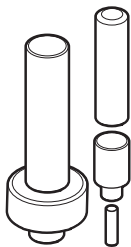

77

 

83



84



85




86

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17
		1 2 3 4				G
62	1016414	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		E
63	1016415	Piston Ring Pliers (for Kawasaki Engines)		1		D
64	102668801	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	1012549	Retaining Ring Pliers, 45° External	1	1	1	
66	1012560	Retaining Ring Pliers, 90° Internal	1	1	1	
67	101823101	Safety First Card (50 per pack)	1	1	1	
68	1012809	Seal Puller	1	1	1	
69	102330901	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	1014264	Steering Column Bearing Press Tool		1	1	
71	1014259	Steering Column Retaining Ring Tool		1	1	
72	102061201	Steering Wheel Puller Tool	1	1	1	
73	AM10753	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	AM10771	Tachometer Diesel Probe (for use with item 73)	1			
75	1014162	Transaxle Axle Seal Tool		1		
76	1014161	Transaxle Pinion Seal Tool		1		
77	1014115	Transmission Tool Kit		1		
78	101611003	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	AM11804	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	AM11805	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	AM1220301	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	AM1232401	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown).....		1		
83	1016413	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	102674601	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	101641201	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	102674401	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		




87

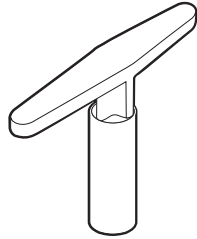


88

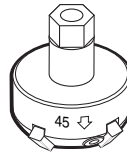


89

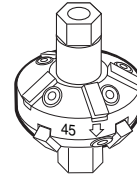


90

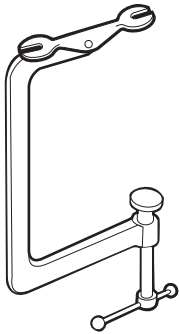

91

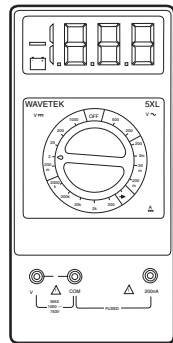


92

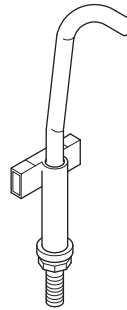


93



94

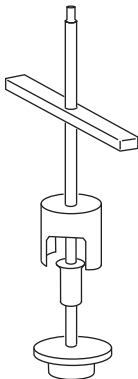

95

 

96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17
		1 2 3 4				G
87	1016552	Valve Seat Cutter Guide		1		E
88	1016551	Valve Seat Cutter T-Wrench		1		D
89	1016553	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	1016554	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	101641101	Valve Spring Compressor		1		
92	1011480	Volt Ohm Meter	1	1	1	
93	102570401	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	103601401	Puller, Drive Clutch, XRT 950*		1		
95	103601701	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	103600501	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number 103600501.						

INDEX

Part Number and Page

AM10753	17-9	7893	6-27, 6-33	1011394	1-29, 1-31
AM10771	17-9	7910	5-13, 5-15	1011415	5-11
AM10419	11-7	7973	1-29, 1-31, 1-51, 9-11	1011439	6-13, 13-11
AM10724	8-5	8056	6-9, 13-7, 13-17	1011478	17-7
AM10839	2-3	8057	6-9, 6-27, 6-33, 13-7, 13-17	1011480	17-11
AM10840	2-3	8058	6-9, 6-27, 6-33, 13-7, 13-17	1011497	6-17, 13-15
AM1232301	7-7	8067	5-13, 5-15	1011557	6-13, 6-17, 13-11, 13-15
183	1-51, 6-33, 9-11, 11-3, 12-3	8104	6-33	1011558	6-17, 13-15
304	1-39, 1-41, 6-33	8233	1-11, 1-21, 1-25, 1-27, 1-37, 1-39, 1-41, 1-51, 4-3, 6-33, 12-3	1011578	13-29
324	1-11, 1-51	8248	1-37, 9-3	1011582	6-17, 13-15
332	1-9, 1-11, 1-21, 1-25, 1-27, 1-39, 1-41, 1-51, 9-11, 10-3	8251	1-3, 1-25, 1-27, 1-39, 1-41	1011610	6-31
334	4-3, 4-5, 5-3, 7-15, 8-15	8418	1-39, 1-41	1011652	1-39, 1-41
343	1-51	8450	11-3	1011694	4-3
357	5-7	8574	4-5	1011697	1-51, 1-53, 7-15, 8-15
403	6-25	8639	1-29, 1-31	1011700	4-3
451	6-25, 10-3, 14-3	8717	4-3, 6-27, 6-33, 12-3	1011767	17-3
705	5-3, 6-7, 7-15, 8-15	8754	4-3, 5-3, 5-7, 5-9, 5-11, 6-7	1011843	6-17, 13-15
706	5-7, 5-9	8755	5-9, 5-11	1011883	1-11
808	11-3	8797	9-5	1011887	5-9
1017	6-3, 13-3	8861	5-9	1011893	5-9
1028	4-7	8915	4-5	1011895	5-9
1035	5-9	8963	1-37, 1-51, 13-17	1011930	5-9
1218	1-11, 4-5, 6-31	8990	4-9, 6-27, 6-31, 6-33, 13-25	1011931	4-3
1241	1-11, 1-29, 1-31, 1-37, 1-51, 4-3, 4-5, 4-7, 4-9, 6-7, 6-13, 6-31, 6-33, 10-3, 13-11, 13-17	1010005	5-13, 5-15	1011937	1-11
1242	6-7, 6-27, 6-31	1010028	6-33	1011965	9-3
1308	5-9	1010124	5-7	1011988	9-3
1606	1-51	1010138	5-9	1012098	16-3
1624	4-3	1010142	1-11, 5-11	1012101	16-3
1631	6-33	1010144	5-11	1012124	9-3
1703	1-9, 1-11, 1-51	1010145	5-11	1012126	6-19
2402	5-9	1010150	5-9	1012151	17-7
7048	5-13, 5-15	1010177	5-7	101217301	3-11
7173	6-13, 6-31, 6-33, 13-11	1010200	5-7	1012181	5-11
7174	4-5, 6-7, 6-31, 10-3, 14-3	101021902	5-9	1012182	5-11
7251	1-17, 1-29, 1-31	1010434	1-43, 1-45, 1-49, 4-9	1012285	1-11, 4-9, 4-11, 6-11, 13-9
7274	5-13, 5-15	1010435	1-19, 1-29, 1-31	1012295	6-27
7308	5-13, 5-15	1010546	1-19	1012303	5-9, 5-11
7310	2-5	1010577	1-37, 7-15, 8-15	1012328	6-31
7311	1-39, 1-41	1010811	4-7	1012333	6-33
7330	15-3	1010812	4-7	1012382	6-23
7335	15-3	1010878	4-7	1012412	1-25, 1-27, 1-37
7336	15-3	101090801	13-29	1012431	6-9, 6-27, 13-7
7473	1-11, 1-17, 1-19, 1-29, 1-31, 1-37, 1-51, 1-53, 4-3, 4-5, 4-7, 4-9, 6-13, 6-31, 13-11, 13-17	101090802	13-29	1012438	6-33
7555	5-9	1010921	1-51, 4-7	1012467	5-9
7577	16-3	1010934	4-9, 6-31, 14-3	1012505	1-29, 1-31
7591	6-17, 13-15	1010954	6-27, 12-3	1012528	10-3, 13-25
7602	5-9	1010984	2-5, 4-13	1012549	17-9
7716	4-3, 4-7	1010993	1-25, 1-27	1012560	17-9
7818	6-31	1011014	1-29, 1-31	1012565	5-5
7840	5-13, 5-15	1011017	1-29, 1-31	1012566	5-5
7847	1-21, 1-33, 10-3	1011019	1-29, 1-31	1012571	7-15, 8-15
		1011153	5-13, 5-15	1012581	1-3
		1011229	6-9, 13-7	1012604	5-3
		1011273	17-5	1012605	5-3
		1011382	1-29, 1-31	1012649	9-3
				1012809	17-9

INDEX

1012811	17-3	1014145	6-27	1015720	6-9, 13-7, 13-25
1012812	17-3	101414801	1-23	1015737	6-23
1012830	6-7, 10-3	1014161	17-9	1015741	6-27
1012836	11-7	1014162	17-9	1015752	4-7, 6-27, 6-31, 9-11, 13-5
1012991	6-5	1014201	14-3	1015814	10-3
1013001	6-5	1014213	5-3	1015878	6-27, 6-33
1013003	6-5	1014214	5-3	1015914	16-3
1013005	6-5	1014217	5-3	1015917	16-3
101301102	6-5	1014259	17-9	1015920	6-23
1013032	1-3	1014264	17-9	1015921	9-5
1013061	6-19, 6-33, 9-3, 12-3, 13-17	1014276	5-7	1015932	6-7
1013135	5-13, 5-15	1014287	11-3	1015969	7-5, 8-3
1013216	1-3	1014288	11-3, 13-17	1016004	9-5
1013218	1-3	1014289	6-5	1016074	6-7
1013343	1-29, 1-31	1014305	17-3	1016092	6-31
1013344	1-29, 1-31	1014306	1-9, 1-11, 1-25, 1-27, 1-51	101611003	17-9
1013461	6-3, 9-5, 13-3	1014375	6-31	1016154	5-5
1013462	9-5	1014392	1-49	1016156	5-5
1013494	1-29, 1-31	1014453	11-3	1016201	11-3
1013509	1-51	1014454	11-7	1016219	5-5
1013531	4-7	1014496	17-5	1016289	11-3
1013582	17-3	1014497	17-5	101629008	10-5
1013589	6-27	1014498	17-5	1016346	5-9
1013593	17-7	1014507	17-5	1016349	5-9
1013609	6-27	1014508	17-5	1016350	5-9
1013677	3-5	1014510	17-5	1016351	5-9
1013687	9-3	1014555	5-11	1016353	5-9
1013734	10-3, 13-25	1014807	6-27, 6-33	1016379	1-53
1013746	9-3, 9-5, 9-9, 9-15	1014808	6-27, 6-33	1016384	5-9
1013787	4-13	1014902	5-11	1016386	5-9
1013794	15-3	1014928	9-3	1016387	5-9
1013871	4-3	1014948	6-27	1016389	5-9
1013924	4-13, 7-15, 8-15	101503202	1-45, 1-47	101641002	17-5
1014007	1-33, 4-3, 12-3	1015072	13-29	101641101	17-11
1014049	11-3	1015075	1-29, 1-31	101641201	17-9
1014050	11-3	1015091	1-11	101641202	17-3
1014051	11-3	1015137	9-3, 9-5, 9-9, 9-15	1016413	17-9
1014052	11-3	1015139	9-5	1016414	17-9
1014055	11-3	1015143	9-5	1016415	17-9
1014056	11-3	101524002	6-7	1016416	17-3
1014057	11-3	1015332	7-5, 8-3	1016417	17-3
1014058	11-3	1015345	6-27	1016418	17-7
1014059	11-3	1015371	6-27	101642575	9-7, 9-13
1014062	11-3	1015372	6-27	101642578	9-7, 9-13
1014063	11-3	1015373	6-27	101642580	9-7, 9-13
1014065	6-27, 11-3	1015405	1-19, 6-27	101642582	9-7, 9-13
1014070	11-7	1015426	9-11	101642585	9-7
1014072	11-7	101547601	3-9	1016429	7-3, 8-7
1014076	11-7	1015521	1-9, 5-13	1016432	7-3, 8-7
1014078	11-7	1015524	17-5	1016436	7-9, 8-9
1014080	11-7	1015525	1-3	1016437	9-7
1014115	17-9	1015528	1-29, 1-31	1016438	9-9, 9-15
1014116	9-3	1015583	5-9, 5-11	1016440	7-9, 8-9, 9-9, 9-15
1014119	6-23	1015597	5-13, 5-15	1016441	9-9, 9-15
1014125	5-3	1015649	7-5, 8-3	1016444	9-9, 9-15
1014126	5-3	1015661	1-9	1016445	8-5

INDEX

1016449	7-9, 8-9	1016566	7-9, 8-9	1017082	9-3, 12-3
1016450	7-9, 8-9	1016569	7-9, 8-9	1017188	11-5
1016451	7-9	1016570	7-3, 8-7	1017231	12-3
1016452	7-9, 8-9	1016571	7-13, 8-13	1017266	5-9
1016453	7-11	1016572	9-9, 9-15	1017271	1-11, 1-51
1016454	7-11, 8-11	1016576	7-3, 8-7	1017273	5-5
1016455	7-7, 8-5	1016578	8-5	1017284	1-51
1016456	7-5, 8-3, 8-5	1016579	8-5	1017299	1-51
1016457	7-3, 8-7	1016581	7-3, 8-7	101734802	1-19
1016458	7-9, 8-9	1016582	9-9, 9-15	1017378	4-3
1016467	7-3, 8-7	1016583	7-9, 8-9	1017380	4-3
1016470	7-13, 8-13	1016584	7-11, 8-11	1017424	4-3
1016472	7-11, 8-11	1016585	9-7	1017434	7-9, 8-9
1016473	7-3, 8-7	1016586	8-5	1017435	8-9
1016474	7-9, 8-9	1016587	7-7, 8-5	1017442	7-3, 8-7
1016479	7-9, 8-9	1016588	7-7, 8-5	1017443	7-9, 8-9, 8-11
1016480	9-9	1016627	17-7	1017444	8-9
101648102	9-9, 9-15	1016630	1-31	1017445	7-9, 8-9
101648203	7-3, 8-7	1016663	5-5	1017446	8-9
1016483	7-9, 8-9	1016751	1-39, 1-41	1017447	8-11
1016486	9-7	101675511	1-39	1017448	7-7, 8-5
1016489	7-9, 8-9	101675512	1-41	101744901	7-13, 8-13
101649002	9-9, 9-15	101677701	1-41	101744902	7-13, 8-13
1016494	7-11, 8-11	101677703	1-39	1017450	7-13, 8-13
1016496	7-11, 8-11	1016801	11-3	101745101	7-13, 8-13
1016497	8-5	1016849	6-9, 13-7	101745102	7-13, 8-13
1016499	9-7	1016851	6-9, 13-7, 13-17	1017453	7-13, 8-13
1016501	9-7	1016857	6-9, 13-7	1017454	7-9, 8-9
1016502	7-3, 8-7	1016859	6-9, 13-7	1017455	7-7, 8-5
1016506	7-11, 8-11	1016868	1-17	1017456	7-3, 8-7
1016507	7-5, 8-3	1016874	1-53	101745701	7-13, 8-13
1016510	7-11, 8-11	1016875	1-53	101745702	7-13, 8-13
1016517	7-9, 8-9	1016876	1-53	1017458	7-3, 8-7
1016518	8-9	1016879	6-3, 13-3	1017460	7-3, 8-7
1016519	8-9	1016880	6-3, 13-3	1017461	9-7
1016521	7-11, 8-11	1016883	6-7	1017463	7-7, 8-5
1016531	7-5, 8-3	1016904	7-9, 8-9, 10-3	1017466	9-9, 9-15
1016535	7-11, 8-11	1016916	1-11	1017468	8-5
1016537	7-3, 8-7	101692501	1-23	1017471	7-13, 8-13
1016538	7-11, 8-11	101692502	1-23	1017472	7-11, 8-11
1016539	7-5, 8-3	101692510	1-23	1017473	7-9, 8-9
1016541	7-13, 8-13	101692512	1-23	1017474	7-5, 8-3
1016542	7-9	101692513	1-23	1017475	7-5, 8-3
1016544	7-7, 7-9, 7-11, 8-5, 8-9, 8-11	101693901	1-23	1017476	7-5, 8-3
1016545	7-9	101693902	1-23	1017486	7-5, 8-3
1016547	7-5, 8-3, 8-13, 9-9, 9-15	101693909	1-23	1017487	7-11, 8-11
1016549	7-9, 8-9	101693911	1-23	1017490	7-7, 8-5
1016551	17-11	101693912	1-23	1017500	8-3
1016552	17-11	1016952	1-33	1017501	7-13, 8-13
1016553	17-11	1016967	1-17	1017502	7-13, 8-13
1016554	17-11	1017035	6-17, 13-15	1017503	7-13, 8-13
1016560	8-9	1017062	6-3, 13-3	1017504	7-11, 8-11
1016561	7-7, 8-5	1017064	6-3, 13-3	1017507	7-3, 8-7
1016562	7-7, 7-13, 8-5, 8-13	1017065	6-3, 13-3	1017508	7-11, 8-11
1016563	7-9, 8-9	1017079	1-53	1017510	7-13, 8-13
1016564	7-11, 8-11	1017080	1-17	1017512	7-13, 8-13

INDEX

1017513	7-11, 8-11	101831702	16-3	101886101	12-3
1017514	7-11, 8-11	101831801	17-5	101887101	17-3
101751801	7-11, 8-11	101831901	17-3	101887601	7-5, 8-3
101751802	7-11, 8-11	101832001	13-17	101895501	15-3
101751803	7-11, 8-11	101832601	7-15, 8-15	101896501	6-5
1017653	6-5	101832701	7-15, 8-15	101896901	9-5
1017672	1-51	101833101	7-15, 8-15	101897001	15-3
1017686	11-7	101833401	11-7	101897201	15-3
1017689	10-3	101833701	6-5	101897401	15-3
1017696	4-3	101833902	11-3	101897601	15-3
1017699	6-17, 13-15	101834001	11-7	101898001	6-31
1017705	13-17	101834502	1-29, 1-31	101903101	5-9
101773301	7-13, 8-13	101834601	7-15, 8-15	101903601	15-3
101773302	7-13, 8-13	101834701	1-37	101903701	15-3
101773303	7-13, 8-13	101834801	12-3	101905901	9-7
101773304	7-13, 8-13	101835601	9-3	101906901	15-3
101773305	7-13, 8-13	101836201	11-7	101908401	6-19, 13-19
101773306	7-13, 8-13	101837001	13-29	101909201	8-5
101773307	7-13, 8-13	101837101	9-11	101909301	8-5
101773308	7-13, 8-13	101837301	6-7	101909401	8-5
101773309	7-13, 8-13	101838201	16-3	101909501	8-5
101773310	7-13, 8-13	101838301	16-3	101910401	1-37
101773311	7-13, 8-13	101838401	16-3	101914401	16-3
1017774	1-37	101838501	16-3	101915201	3-9
1017841	1-51	101838601	16-3	101916001	8-13
1017936	1-21	101851101	1-29, 1-31	101916101	7-5, 8-3
101796201	4-3	101856002	1-29	101916201	8-5
101796501	13-17	101856102	6-27	101916301	7-7, 8-5
101796801	13-17	101861901	4-3	101916701	6-7, 11-3
101797801	13-29	101862001	4-3	101916901	4-7
101804301	1-31, 6-33, 9-11	101869302	6-5	101917601	9-11
101806005	4-7	101870602	5-9	101919801	4-3
101808401	17-3	101871001	17-3	101920101	13-5
101809101	17-5	101874901	6-5	101921501	9-11
101811801	9-11	101875001	6-5	101922101	15-3
101811901	9-11	101875101	6-5	101922201	15-3
101812301	9-11	101875102	6-5	101923001	15-3
101813001	9-11	101875201	6-5	101923201	15-3
101813202	17-3	101875301	6-5	101923501	12-5, 15-3
101817401	4-3	101875401	6-5	101923901	15-3
101821501	9-11	101875501	6-5	101925601	11-3
101823101	17-9	101875601	6-5	101925701	9-11
101824401	9-3, 9-5	101875701	6-5	101926802	6-33
101825101	1-29, 1-31, 3-3, 3-7	101875802	6-5	101928701	15-3, 17-7
101825701	9-11	101876001	6-5	101929801	11-3
101826201	1-29	101876202	6-5	101929802	11-3
101826301	1-31	101876301	6-5	101932201	6-13, 13-11
101827101	7-15, 8-15	101876402	6-5	101932902	12-9
101828501	16-3	101876501	6-5	101933101	17-7
101828901	16-3	101877601	6-5	101933701	6-33
101828902	16-3	101877701	6-5	101936801	13-5
101830601	1-29, 1-31	101878101	6-5	101939901	6-5
101830701	1-29, 1-31	101879001	6-5	101942301	14-5
101831503	16-3	101881101	8-5	101953101	4-7
101831504	16-3	101881701	9-11	101953105	4-7
101831701	16-3	101884801	7-15, 8-15	101953802	8-3

INDEX

101954301	1-11	102050601	4-13	102540301	7-15, 8-15
101955301	9-3	102050701	4-13	102541425	1-11
101957101	6-13, 13-11	102051201	4-5	102555501	17-3
101960501	3-9	102051301	4-5	102556701	2-5
101963401	6-33, 7-15, 8-15	102051401	4-5	102562401	17-3
101964201	13-29	102061201	17-9	102570401	17-11
101971301	9-11	102065901	7-15, 8-15	102572401	1-29
101972001	17-7	102066201	5-11	102579601	1-51
101972002	17-7	102101001	4-7, 13-5	102579801	1-51
101972003	17-7	102101101	4-7, 13-5	102579802	1-51
101972004	17-7	102155801	11-7	102581201	1-11, 1-37
101972005	17-7	102163001	1-5	102585901	10-3
101972006	17-7	102163101	1-5	102601501	17-5
101972007	17-7	102169401	17-7	102603501	17-5
101972009	17-7	102186301	14-5	102605201	17-5
101972011	17-7	102186401	14-5	102606101	17-5
101972012	17-7	102196901	1-29	102607501	17-5
101972101	15-3	102225101	9-3	102616701	6-33
101972201	15-3	102227101	9-3	102668801	17-9
101972801	9-11	102227501	9-3	102669901	17-7
101973101	9-7	102235201	14-3	102674001	17-5
101973301	9-7	102240501	13-25	102674101	17-5
101973401	9-9, 9-15	102241501	17-7	102674201	17-5
101987701	9-3	102241502	17-7	102674401	17-9
101987901	6-3, 13-3	102242101	11-7	102674601	17-9
101988001	6-3, 13-3	102242401	1-9, 1-11, 1-51	102675001	17-5
101988002	6-3, 13-3	102243402	17-7	102675101	17-5
101988101	6-3, 13-3	102248803	17-7	102675201	17-5
101988201	6-3, 13-3	102249901	17-3	102675301	17-5
101998211	1-39	102251501	17-7	102675401	17-5
101998212	1-41	102278001	1-29, 1-31	102684602	6-33
102002801	13-23, 13-29	102292801	4-5	102686101	17-3
102002901	13-23	102298401	5-9	102704901	14-5
102003201	9-3	102304801	7-9, 8-9	102711201	6-27
102005701	1-5	102323101	4-5, 4-7	102753401	8-9
102005702	1-5	102323201	4-5, 4-7	102774501	13-25
102005801	1-5	102330901	17-9	102774603	13-25
102026001	4-3	102355301	6-31	102774701	13-25
102028601	4-7	102356601	15-3	102775101	14-5
102028903	4-7	102356801	15-3	102817101	13-19, 13-25
102033201	4-5	102357001	15-3	102817201	13-25
102033301	4-13	102376001	6-33	102838101	13-19
102044101	4-13	102406701	9-5	102842401	1-25, 1-27
102044401	4-9, 4-13	102430901	8-13	102845203	13-29
102045501	4-9, 4-13	102431001	8-11	102846402	13-25
102049401	4-13	102440901	13-25	102848701	13-17
102049501	4-13	102442901	4-5	102859501	13-25
102049601	4-13	102488001	4-9	102865101	9-3
102049701	4-13	102491601	4-9	102869401	6-15, 13-13
102049901	4-13	102493301	4-9	102871801	5-11
102050001	4-13	102508701	1-29	102873401	13-29
102050101	4-13	102515401	12-3	102886301	15-3
102050201	4-13	102519001	4-5	102886401	15-3
102050301	4-13	102522001	9-5	102886501	15-3
102050401	4-13	102526201	6-33	102886601	15-3
102050501	4-13	102534201	5-9	102897201	12-5

INDEX

102897301	12-5	102915701	6-19	103196301	5-13
102897401	12-3	102917101	5-11	103196401	5-13
102897501	12-3	102920201	5-13, 5-15	103196501	5-13
102897601	12-3	102938601	14-5	103198301	1-29
102897701	12-3	102938701	14-5	103198701	4-5
102897801	12-3	102938801	14-5	103199001	1-31
102897901	12-3	102938901	14-5	103199101	1-31
102898001	12-5	102939001	14-5	103203001	1-13
102898101	12-3	102939101	14-5	103204901	1-33
102898201	12-3	102939102	14-5	103210201	1-31, 3-7
102898301	12-5	102949701	5-13, 5-15	103210301	1-29, 3-3
102898401	12-5	102955301	1-11	103212201	1-39
102898501	12-5	102955302	1-11	103212202	1-41
102898601	12-5	102956401	13-31	103213001	1-13
102898701	12-5	102958001	13-31	103213101	1-13
102898901	12-5	102961801	1-33	103214301	13-17
102899001	12-5	102962801	1-5	103217401	5-13, 5-15
102899101	12-3	102963301	13-25	103218601	1-29
102899201	12-3	102967601	3-5	103219601	1-25
102899301	12-5	102967801	1-9	103219602	1-25
102899401	12-3	102969401	6-33	103219609	1-25
102899501	12-5	102969902	6-33	103219611	1-25
102899601	12-5	102976201	4-5	103219612	1-25
102899701	12-3	102976301	4-5	103219631	1-27
102899801	12-3	102976401	4-5	103219632	1-27
102899901	12-3	102976501	4-5	103219639	1-27
102900001	12-3	102976601	4-5	103219641	1-27
102900101	12-3	102976701	4-5	103219642	1-27
102900201	12-3	102977001	1-31	103224501	6-11, 13-9
102900301	12-3	102977002	1-29	103224601	1-11
102900401	12-5	102977801	1-33	103224701	1-11
102900501	12-5	102979201	2-5	103224901	1-39
102900601	12-3	102979202	2-5	103224902	1-41
102900701	12-5	102980801	13-29	103225001	1-39
102900801	12-5	102980901	13-29	103225002	1-41
102900901	12-3	103013501	13-23	103225701	1-39, 1-41
102901001	12-5	103013601	6-23	103226201	13-31
102901101	12-5	103013701	13-23, 13-29	103226301	13-31
102901201	12-5	103013801	13-23	103226401	13-31
102901301	12-5	103014101	13-29	103226601	13-31
102901401	12-5	103020601	4-5	103226701	13-31
102901501	12-5	103173301	6-33	103229601	4-13
102901601	12-5	103177401	6-33	103231601	1-7
102901701	12-5	103180101	6-31	103232101	5-3
102901801	12-5	103190401	4-9	103233101	5-9
102901901	12-5	103192701	6-33	103234101	5-9
102902001	12-5	103192901	6-33	103236801	13-31
102902101	12-7	103193901	5-13	103238801	1-15
102902201	12-7	103194101	5-13	103238802	1-15
102902301	12-7	103194201	5-15	103244301	13-17
102902401	12-7	103194401	1-9	103245301	1-37
102902501	12-7	103194701	4-9	103247601	1-29, 1-31
102902601	12-7	103194801	4-9	103247901	6-11, 13-9
102902701	12-7	103195101	13-29	103248501	6-19, 13-19
102902801	12-7	103195501	4-5	103248801	3-5, 13-19
102915601	6-17, 13-15	103196201	5-13, 5-15	103249001	3-9, 6-19

INDEX

103252301 1-25, 1-27
 103257603 13-27
 103257701 13-27
 103257801 13-27
 103259801 13-19
 103262201 5-9
 103263101 4-9
 103264801 5-9
 103264901 4-5
 103282402 1-39, 1-41
 103295101 6-33
 103295203 6-33
 103296101 1-45, 1-47
 103296401 1-47
 103296402 1-45
 103305401 1-39, 1-41
 103311101 4-11
 103312101 1-37
 103313701 1-39
 103313702 1-41
 103313801 1-39
 103313802 1-41
 103318501 4-5
 103324201 15-3
 103325201 3-3, 3-7
 103325301 3-3, 3-7
 103327501 3-3, 3-7
 103333701 4-9
 103334001 4-11
 103334101 4-11
 103345101 1-37
 103345201 1-37
 103345301 1-37
 103345401 1-37
 103345701 11-3
 103348201 1-31
 103348202 13-27
 103348601 1-31
 103350301 6-33
 103351101 5-11
 103354401 13-27
 103354501 4-11
 103354601 4-11
 103357401 1-9
 103358801 4-11
 103367101 1-11
 103367401 1-11
 103367701 1-11
 103367801 1-11
 103369501 6-33
 103370801 1-51
 103371001 1-51
 103371102 1-51
 103372101 9-5
 103372302 9-5
 103375101 1-15

103375201 1-9
 103380301 1-51
 103386202 7-5
 103391101 6-25
 103391601 6-25
 103397901 13-25
 103402801 1-35
 103407001 1-43
 103411601 1-13
 103414901 13-25
 103422501 13-29
 103502701 5-9
 103507001 5-9
 103507101 9-15
 103507201 9-15
 103507301 9-15
 103520301 9-11
 103522401 1-11
 103615601 7-9
 103615701 7-9
 103615801 7-13
 103615901 7-11
 103616201 7-13
 103616301 7-9
 103616401 7-11
 103616501 7-7
 103616601 7-7
 103616701 7-7
 103616801 7-7
 103616901 9-13
 103628801 5-9
 103651901 9-5
 103776901 9-5
 96704416 7-15, 8-15

A

absorber, shock 5-9
 AC cord 16-3
 accelerator bracket and bearing assembly 4-3
 accelerator pedal 4-3
 accelerator pedal adjustment tool 17-3
 accelerator pivot rod 4-3
 accelerator return spring 4-3
 access door 1-3
 adapter
 cable (IQDM) 17-7
 adhesive, guide ring 17-3
 adjuster
 hydraulic brake 17-7
 adjuster, lash 8-11
 air box 9-11
 air box top 9-11
 air filter 9-11
 air intake hose 9-11
 ammeter 16-3
 A-plate strap 5-9

A-plate, delta 5-9
 arbor 17-3
 arm
 governor 12-3
 rocker 7-9, 8-9
 armature 6-5, 14-5
 armature conversion kit 6-5
 ashtray 1-33
 ashtray bracket 1-33
 assembly
 accelerator bracket and bearing 4-3
 accelerator pivot rod 4-3
 air box 9-11
 air box top 9-11
 armature 6-5
 backing plate 4-13
 bearing, steering shaft 5-3
 bell crank and shaft 6-27
 brush connector 6-5
 brush holder 6-5
 carburetor 9-7
 connecting rod 7-13, 8-13
 cylinder head 8-9
 delta A-plate 5-9
 drive hub 11-3
 driven clutch 11-7
 driven clutch fixed-face 11-7
 field coil 6-5
 filler cap 4-5
 float 9-7
 fuel tank vent 9-5
 headlight 6-3, 13-3
 headlight harness 6-3, 13-3
 idle screw 9-7
 kingpin 5-9
 moveable-face 11-3, 11-7
 pilot air screw 9-7
 plug cap 7-7, 8-5
 score card plate 5-5
 secondary clutch weight 11-3
 steering wheel 5-5
 turn signal lens 6-3, 13-3
 axle 15-3
 axle guard 12-9
 axle shaft oil seal 15-3
 axle tube 15-3

B

backing plate 4-13
 bag hook 1-51
 bag rack 1-51
 bag rack cover 1-51
 bag rack mounting bracket 1-51
 bag rack support 1-51
 bag rack weldment 1-51
 bag rest mat 1-49

INDEX

- bag strap 1-51
 - bag, desiccant 11-3
 - ball bearing 7-11, 8-11
 - ball joint 5-9, 6-33
 - ball stud 6-27, 12-3
 - ball, steel pressure relief 7-3, 8-7
 - band, RPM limiter mount 8-5
 - banjo bolt 4-9
 - bar, drive 4-7, 13-5
 - barb, vent 9-3, 9-5
 - barrel, plastic 1-43, 1-45, 1-49, 4-9
 - basket 1-9
 - hardware kit 1-9
 - basket support bracket 1-9
 - battery cap 13-29
 - battery charger 16-3
 - battery charger case 16-3
 - battery charger receptacle 13-17
 - battery charger transformer 16-3
 - battery clamp 6-31
 - battery condition indicator 13-27
 - battery discharge machine 17-3
 - battery hold-down 13-29
 - battery hold-down rod 13-29
 - battery insulator 13-29
 - battery light 1-29
 - battery terminal protector spray 17-3
 - battery thermometer 17-3
 - battery, 12-volt 6-31
 - battery, 8-volt, Trojan T890 13-29
 - bearing 15-3
 - ball 7-11, 8-11
 - ball (motor) 14-5
 - front wheel hub 5-13, 5-15
 - idler 11-3
 - inner axle tube 15-3
 - pivot support 4-3
 - steering shaft 5-3
 - thrust 5-9
 - bearing and oil seal remover 17-3
 - bearing driver set 17-3
 - bearing puller 17-3
 - bearing puller wedge 17-3
 - bearing seat 5-3
 - bell crank and shaft 6-27
 - belt, drive 11-5
 - belt, starter/generator 6-7, 11-3
 - bezel, choke cable 6-33
 - bezel, headlight 6-3, 13-3
 - bezel, taillight 6-17, 13-15
 - block, fuse 6-27
 - body
 - beige 1-25, 1-27
 - burgundy 1-25, 1-27
 - classic blue 1-25, 1-27
 - dark green 1-25, 1-27
 - white 1-25
 - body kick plate 1-25, 1-27, 1-37
 - body, rear 1-27
 - bolt
 - banjo 4-9
 - bolt, U- 5-11
 - boot
 - master cylinder 4-5
 - boot, steering column 1-29, 1-31
 - boot, switch 6-19, 13-19
 - bottom, air box 9-11
 - box
 - air 9-11
 - electrical component 6-27
 - brace, windshield 1-11
 - bracket
 - adjustable starter/generator 6-7
 - ashtray 1-33
 - bag rack mounting 1-51
 - basket support 1-9
 - brake light switch 6-13, 13-11
 - FNR shifter 6-33
 - fuel pump 9-3
 - headlight mounting 6-3, 13-3
 - muffler mounting 10-3
 - oil filter mount 7-3, 8-7
 - oil level switch 7-11, 8-11
 - relay mounting 16-3
 - retaining 9-11
 - RPM limiter 8-5
 - shock absorber 5-11
 - shock mounting 5-11
 - snubber 7-15, 8-15
 - starter/generator mounting 6-7
 - throttle spring return 9-9, 9-15
 - bracket, carburetor intake manifold 9-15
 - brake adjustment tool 17-3
 - brake cable release tool 17-3
 - brake cluster 4-13
 - brake drum 4-13
 - brake light switch bracket 6-13, 13-11
 - brake mount 4-7
 - brake pedal 4-7
 - brake pedal adjustment tool 17-3
 - brake pedal tension tool 17-3
 - brake return spring 4-7
 - brake system indicator light 1-29, 1-31
 - breaker, circuit 16-3
 - breather 15-3
 - brush and screw set 6-5
 - brush box assembly 14-5
 - brush connector 6-5
 - brush holder 6-5
 - brush inspection port cover 6-5
 - brush kit, motor 14-5
 - brush port cover 6-5
 - brush rigging 14-5
 - brush spring 14-5
 - brush spring set 6-5
 - brush, motor 14-5
 - buckle strap 1-51
 - bulb, headlight 6-3, 13-3
 - bulb, tail light 6-17, 13-15
 - bumper
 - drive unit (motor) 14-3
 - front 1-17
 - front, heavy duty 1-19
 - front, kit 1-17
 - rear 1-53
 - rubber 4-7
 - spring return 4-3
 - bumper mounting 1-53
 - bumper, heavy duty 1-19
 - bushing 6-33, 11-3
 - bronze 5-13, 5-15
 - greaseless 4-5
 - return line 9-5
 - spindle 5-13, 5-15
 - steel 5-9, 5-11
 - urethane 5-9, 5-11
 - button, drive 11-7
 - buzzer, reverse 6-9, 13-7, 13-17
- ## C
- cable
 - choke 6-33
 - FNR shifter 6-33
 - IQDM 17-7
 - calibration test module 17-3
 - cam
 - driven clutch 11-7
 - electrical component box 6-27
 - cam installation tool 17-3
 - cam, FNR shifter 6-33
 - camshaft 8-11
 - camshaft shim 7-11, 8-11
 - canopy
 - beige 1-11
 - frame 1-11
 - hand hold 1-11
 - hardware kit 1-11
 - splice bar 1-11
 - support bracket 1-11
 - white 1-11
 - canopy drain grommet 1-13
 - canopy drain kit 1-13
 - canopy drain tubing 1-13
 - cap
 - battery 13-29
 - dust 1-29
 - filler 4-5
 - key switch 1-29, 1-31

INDEX

plug 7-7, 8-5
 seat back 1-39, 1-41
 carburetor 9-7
 carburetor adapter 9-15
 carburetor float level tool 17-7
 carburetor gasket 9-9, 9-15
 carburetor insulator 9-9, 9-15
 carburetor mounting gasket 9-9, 9-15
 card, safety first 17-9
 cargo net 1-15
 cargo net kit 1-15
 cargo net, front 1-15
 cargo net, rear 1-15
 case
 battery charger 16-3
 rocker 8-9
 charger bezel tool 17-3
 charger receptacle 13-17
 choke cable 6-33
 choke cable bezel 6-33
 choke valve 9-11
 circuit breaker 13-19, 16-3
 clamp
 battery 6-31
 hose 9-3, 9-5, 9-9, 9-11, 9-15
 muffler hose 10-3
 clevis, upper delta 5-9
 clip, drain tube 1-13
 clip, meter 1-31
 clip, score card 5-5
 clip, windshield 1-13
 closeout, under seat 1-43
 clutch alignment tool 17-5
 clutch pulley 11-3
 clutch removal tool 17-3
 clutch repair kit 11-7
 clutch tool kit 17-5
 clutch weight 11-3
 clutch, drive 11-3
 clutch, driven 11-7
 coil, field 6-5
 coil, ignition 8-5
 collet 7-9, 8-9
 communication display module 17-5
 component box, electrical 6-27
 component mounting plate, ele 13-25
 compression gauge 17-5
 compressor, piston ring 17-9
 compressor, valve spring 17-11
 computer 13-25
 connecting rod 7-13, 8-13
 connector, a- 6-5
 continuity tester 17-5
 controller, speed 13-25
 cord connector 7-11, 8-11
 cord, AC 16-3

cord, DC 16-3
 counterbalance guide shaft 7-13, 8-13
 counterbalance weight 7-13, 8-13
 coupler, SPWS 13-31
 cover
 brush inspection port 6-5
 brush port 6-5
 crankcase 7-11, 8-11
 dust 4-13, 5-9
 electrical box 6-27
 oil pump 7-3, 8-7
 rocker switch hole 6-31
 screw head 1-29, 1-31
 cover, air intake 6-33
 cover, bag rack 1-51
 cover, controller 13-17
 cover, under seat 1-43
 cowl 1-23
 crankcase 8-13
 crankcase cover 7-11, 8-11
 crankcase vent tube 9-9, 9-15
 crankshaft 7-13, 8-13
 crankshaft rod 7-13, 8-13
 crankshaft shim 7-13, 8-13
 cup, spring 4-3
 cupholder 1-33
 cushion, shock absorber 1-11, 5-11
 cutter, valve seat 17-5, 17-11
 cylinder, master 4-5
 cylinder, wheel 4-13

D

damper, RPM limiter 8-5
 dash component 1-29, 1-31
 dash panel 1-29, 1-31
 DC cord 16-3
 decal
 4-gauge wire warning 3-5
 battery danger 3-5
 car number 3-11
 driver/passenger 3-9
 FNR 1-29, 1-31, 3-3, 3-7
 frame ground 3-9
 IQ Plus 1-25, 1-27
 on/off 1-29, 1-31, 3-3, 3-7
 rotating parts 3-9
 warning, dash 1-29, 1-31, 3-3, 3-7
 warning, pass 3-3, 3-7
 delta A-plate 5-9
 delta A-plate sub-assembly 5-9
 desiccant bag 11-3
 DF-terminal insulator 6-5
 diagnostic port 1-29
 diesel tachometer probe 17-9
 differential gear 15-3
 differential guard 12-9

differential housing 15-3
 diode 6-27
 dipstick 7-5, 8-3
 disc rotor 5-13, 5-15
 door, access 1-3
 drain plug 7-3, 8-7
 drain plug gasket 7-3, 8-7
 drain tube clip 1-13
 drain, canopy 1-13
 drive bar 4-7, 13-5
 drive belt 11-5
 drive button 11-7
 drive clutch 11-3
 drive clutch button 11-3
 drive clutch fixed sheave tool 17-5
 drive clutch fixed-face 11-3
 drive clutch holder tool 17-5
 drive clutch hub puller 17-5
 drive clutch puller 17-5
 drive clutch spider removal tool 17-5
 drive clutch spring 11-3
 drive clutch weight 11-3
 drive hub 11-3
 drive unit bumper 14-3
 drive unit guard 12-9
 driven clutch 11-7
 driven clutch button 11-7
 driven clutch cam 11-7
 driven clutch cam puller 17-5
 driven clutch fixed-face assembly 11-7
 driven clutch puller plug 17-5
 driven clutch spring compression base tool 17-5
 driven clutch spring compression collar tool 17-5
 driven clutch spring compression nut tool 17-5
 driver, drive clutch 11-3
 drum, brake 4-13
 dry moly lubricant 17-7
 dust cap 1-29
 dust cover 4-13, 5-9

E

electric fuel pump 9-3
 electrical box cover 6-27
 electrical component box 6-27
 end bell, commutator 6-5
 end bell, output shaft 6-5
 end cap, motor 14-5
 engine mounting plate 7-15, 8-15
 engine shroud 7-5, 8-3
 engine, FE350 CW without ACR 8-3
 engine, FE350 S27 7-5
 equalizer rod 4-7
 exhaust system 10-3

INDEX

exhaust valve 7-9, 8-9

F

face, moveable 11-3, 11-7
fan housing 7-5, 8-3
fan shroud 7-5, 8-3
fan, flywheel 7-7, 8-5
fender, inner 1-21
field coil 6-5
field coil housing 6-5
filler cap 4-5
filter
 air 9-11
 fuel 9-3
 oil 7-3, 8-7
 oil pump 7-3, 8-7
finishing plug 1-11, 1-51
fitting, thread-forming grease 5-13, 5-15
fixed-face, drive clutch 11-3
fixed-face, driven clutch 11-7
float 9-7
floor mat 1-45, 1-47
floor mat 1-45, 1-47
floor mat trim 1-45, 1-47
floor mat, ele 1-47
floor mat, gas 1-45
flywheel 8-5
flywheel fan 7-7, 8-5
flywheel fan plate 7-7, 8-5
flywheel puller 17-7
FNR closeout brush 1-31
FNR shift lever 12-3
FNR shifter assembly 6-33
FNR shifter bracket 6-33
FNR shifter cable 6-33
FNR shifter cam 6-33
FNR shifter lever 6-33
folding windshield, lower 1-5
folding windshield, upper 1-5
frame and field, motor 14-5
front bumper 1-17
front bumper kit 1-17
front spring retainer plate 5-7
F-terminal hardware 6-5
f-terminal insulator 6-5
fuel filter 9-3
fuel gauge sending unit 9-5
fuel line 9-3, 9-5, 9-9, 9-15
fuel meter 1-31
fuel pump bracket 9-3
fuel pump, electric 9-3
fuel tank 9-5
fuel tank strap 9-3
fuel tank vent 9-5
fuse 13-17, 16-3
 10-amp 6-27

3/8-amp 13-17
fuse and receptacle 13-17
fuse block 6-27

G

gasket 15-3
 carburetor 9-9, 9-15
 carburetor mounting 9-7, 9-9, 9-15
 crankcase cover 7-9, 8-9, 8-11
 drain plug 7-3, 8-7
 exhaust 7-9, 8-9, 10-3
 head 7-9, 8-9
 insulator 7-9, 8-9, 9-9, 9-15
 liquid 15-3, 17-7
 rocker case 7-9, 8-9
 sending unit 9-5
 taillight 6-17, 13-15
gasket kit, FE350 7-9, 8-9
gauge, battery condition 13-27
gauge, compression 17-5
gauge, fuel-hour 1-31
gear
 case 15-3
 differential 15-3
 differential idler 15-3
 differential output 15-3
 helical 7-13, 8-13
 spur 7-13, 8-13
gear case 15-3
gear yoke 17-7
governor arm 12-3
governor shaft installation tool 17-7
grip, pencil 5-5
grommet 9-5
grommet, body drain tube 1-25, 1-27
guard, differential 12-9
guide
 intake valve 8-9
 valve 8-9
 valve seat cutter 17-11
guide ring adhesive 17-3

H

hand hold, canopy 1-11
hardware
 axle 4-13
hardware, F-terminal 6-5
harness, wire 9-3, 13-23
head gasket 7-9, 8-9
head, cylinder 8-9
headband, sealed, motor 14-5
headband, vented, motor 14-5
headlight assembly 6-3, 13-3
headlight bulb 6-3, 13-3
headlight harness 6-3, 13-3

headlight retainer 6-3, 13-3
heatsink and rectifier 16-3
heavy duty bumper 1-19
helical gear 7-13, 8-13
hinge plate 1-25, 1-27, 1-37, 1-39, 1-41
hold-down rod, battery 13-29
hold-down, battery 13-29
hold-down, brake shoe 4-13
hole plug 1-29
hose, air intake 9-11
hose, fuel 9-3
hose, SPWS 13-31
hour meter 1-31
housing
 2-pin 13-5
 3-pin 13-5, 14-5
 differential 15-3
 fan 7-5, 8-3
 field coil 6-5
hub 5-13, 5-15
hydraulic brake adjuster 17-7
hydraulic shoe 4-13
hydrometer 17-7

I

idle screw assembly 9-7
idler bearing 11-3
idler gear, differential 15-3
ignition coil 8-5
indicator, battery condition 13-27
inner frame snubber 7-15, 8-15
input shaft 15-3
instruction
 basket hardware kit 1-9
 canopy drain kit 1-13
 canopy kit 1-11
 cargo net kit 1-15
 rear windshield kit 1-7
 windshield kit 1-5
instrument panel 1-29, 1-31
insulating washer 14-5
insulator gasket 7-9, 8-9, 9-9, 9-15
insulator, battery 13-29
insulator, carburetor 9-9, 9-15
insulator, motor terminal 14-5
intake cover 6-33
intake pipe 9-9
intake valve 8-9
intermediate shaft 15-3
internal retaining ring pliers 17-7
IQ display module (IQDM) 17-7

J

jet, main 9-7, 9-13
jet, pilot 9-7

INDEX

joint

ball 6-33

K

key

crankshaft 7-7, 7-13, 8-5, 8-13

driven clutch 11-7

On/Off 1-29, 1-31

square 11-7

starter/generator 6-5

woodruff 12-3

key switch 1-31

key switch cap 1-29, 1-31

key switch, On/Off 1-29

kick plate, body 1-25, 1-27, 1-37

kingpin 5-9

kit

2-pin housing 13-5

3-pin housing 13-5, 14-5

accelerator pivot rod 4-3

axle adjuster 4-13

axle hardware 4-13

basket hardware 1-9

brake pedal adjustment tool 17-3

canopy hardware 1-11

cargo net 1-15

clutch repair 11-7

drive clutch button 11-3

drive clutch weight 11-3

driven clutch button 11-7

fuel tank 9-5

hydraulic shoe 4-13

IQ display module (IQDM) 17-7

motor brush 14-5

motor speed sensor 14-5

reverse buzzer 6-9, 13-7

shock absorber cushion 5-11

spws 13-31

taillight hardware 6-17, 13-15

tune-up 17-9

knob, forward/reverse 6-33

L

lash adjuster 8-11

latch, air box 9-11

leaf spring 5-11

lens, headlight 6-3, 13-3

lens, taillight 6-17, 13-15

lever

choke 9-11

light

battery 1-29

oil 1-31

light, indicator, brake sys 1-29, 1-31

limit switch 6-13, 6-27, 6-33, 13-11

limiter

RPM 8-5

line, fuel 9-3, 9-5, 9-9, 9-15

link, rack and pinion drag 5-9

liquid gasket 15-3, 17-7

low oil warning light 1-31

lubricant, dry moly 17-7

lubricant, moly-teflon 17-7

lug nut 2-5, 4-13

lug stud 4-13, 15-3

M

magnet, speed sensor 14-5

main jet 9-7, 9-13

manifold, SPWS 13-31

master cylinder 4-5

master cylinder boot 4-5

mat, floor 1-45, 1-47

MCOR 4-7, 13-5

meter clip 1-31

meter, volt ohm 17-11

module

calibration test 17-3

communication display 17-5

moly-teflon lubricant 17-7

motor

48-volt IQ Plus 14-5

motor brush 14-5

motor brush kit 14-5

motor brush spring 14-5

motor bumper 14-3

motor controller 13-25

motor end cap 14-5

motor frame and field 14-5

motor headband, sealed 14-5

motor headband, vented 14-5

motor magnet, speed sensor 14-5

motor speed sensor 14-5

motor speed sensor kit 14-5

motor terminal and lead assembly 14-5

motor terminal insulator 14-5

moveable-face 11-3, 11-7

muffler hose clamp 10-3

N

nameplate, Club Car, Amber 1-23

net, cargo 1-15

nozzle, main 9-7

nut, lug 2-5, 4-13

O

obc 13-25

oil filler tube 7-5, 8-3

oil filter 7-3, 8-7

oil filter mount bracket 7-3, 8-7

oil filter screen 7-11, 8-11

oil filter screen plate 7-11, 8-11

oil level sensor 7-11, 8-11

oil level switch bracket 7-11, 8-11

oil pump and rotor 7-3, 8-7

oil pump cover 7-3, 8-7

oil pump filter 7-3, 8-7

oil pump plate 7-3, 8-7

oil seal 7-9, 7-11, 7-13, 8-9, 8-11, 8-13

oil warning light, low 1-31

O-ring 7-5, 7-9, 7-11, 7-13, 8-3, 8-9, 8-11, 8-13, 13-31

P

pad

accelerator pedal 4-3

brake pedal 4-7

paint, touch-up 17-7

panel, instrument 1-29, 1-31

pedal, accelerator 4-3

pedal, brake 4-7

pencil grip 5-5

pilot air screw assembly 9-7

pilot jet 9-7

pin, piston 7-13, 8-13

pipe, intake 9-9

piston 7-13, 8-13

piston pin 7-13, 8-13

piston ring 7-13, 8-13

piston ring compressor 17-9

piston ring pliers 17-9

piston ring set 7-13, 8-13

pivot support bearing 4-3

plate

backing 4-13

body kick 1-25, 1-27

bumper mounting 1-53

engine mounting 7-15, 8-15

flywheel fan 7-7, 8-5

front spring retainer 5-7

hinge 1-25, 1-27, 1-37, 1-39, 1-41

oil filter screen 7-11, 8-11

oil pump 7-3, 8-7

score card 5-5

spring mounting 5-7

plate, receptacle back 13-17

plate, run/stow switch 13-19

plate, Tow/Run switch 6-19

pliers

internal retaining ring 17-7

piston ring 17-9

retaining ring 17-9

plug 1-11, 1-51

drain 7-3, 8-7

driven clutch puller 17-5

hole 1-29

INDEX

- spark 8-5
- plug cap 7-7, 8-5
- plug, carburetor intake manifold 9-15
- plug, spark 7-7
- pole set 6-5
- port, diagnostic 1-29
- press weldment 17-5
- pressure switch 4-5
- protector spray, battery terminal 17-3
- puller
 - bearing 17-3
 - clutch 17-3
 - drive clutch 17-5
 - drive clutch hub 17-5
 - driven clutch cam 17-5
 - flywheel 17-7
 - seal 17-9
 - special use tool 17-9
- pulley
 - clutch 11-3
 - starter-generator 6-5
- pump, fuel, electric 9-3
- push rod 7-9, 8-9
- putter tube 1-51

R

- race, front hub bearing 5-13, 5-15
- rack and pinion drag link 5-9
- reamer, valve guide 17-9
- rear body 1-27
- rear bumper 1-53
- receptacle and fuse 13-17
- receptacle back plate 13-17
- receptacle, battery charger 13-17
- rectifier with heatsink 16-3
- regulator, voltage 6-27
- relay 16-3
- relay mounting bracket 16-3
- remover, bearing and oil seal 17-3
- retainer
 - accelerator pedal spring 4-3
 - headlight 6-3, 13-3
 - shock absorber cushion 5-11
 - spring (drive clutch) 11-3
 - valve spring 7-9, 8-9
- retaining bracket 9-11
- retaining ring 5-3
- retaining ring pliers 17-9
- return spring bumper 4-3
- reverse buzzer 6-9, 13-7, 13-17
- rim 2-5
- ring
 - piston 7-13, 8-13
 - retaining 5-3, 6-27, 11-3, 11-7
 - snap 7-13, 8-9, 8-13
 - spiral backup 11-3

- ring, piston 7-13, 8-13
- rivet, blind push 1-17
- rock guard 12-9
- rocker arm 7-9, 8-9
- rocker case 8-9
- rocker case gasket 7-9, 8-9
- rocker shaft 7-9, 8-9
- rocker switch 1-29
- rocker switch (lights) 6-15, 13-13
- rod
 - accelerator pivot 4-3
 - battery hold-down 13-29
 - connecting 7-13, 8-13
 - crankshaft 7-13, 8-13
 - equalizer 4-7
 - push 4-5, 7-9, 8-9
- rod, tie 5-9
- rotor, disc 5-13, 5-15
- rotor, oil pump and 7-3, 8-7
- RPM limiter 8-5
- RPM limiter bracket 8-5
- RPM limiter damper 8-5
- RPM limiter mount band 8-5
- run/stow switch plate 13-19

S

- safety first card 17-9
- score card clip 5-5
- score card holder 5-5
- score card plate 5-5
- screen, oil filter 7-11, 8-11
- screw, valve clearance adjuster 17-9
- seal
 - intake 9-11
 - lip 12-5, 15-3
 - oil 7-9, 7-11, 7-13, 8-9, 8-11, 8-13, 15-3
 - vertical socket dust 5-9
- seal puller 17-9
- sealant 15-3
- seat
 - buff 1-39
 - spring 7-9, 8-9
 - valve 7-3, 8-7
 - white 1-41
- seat back 1-39, 1-41
- seat back assembly 1-39
- seat back cap 1-39, 1-41
- seat back, beige 1-39
- seat back, white 1-41
- seat bottom cover 1-39
- seat bottom cover, white 1-41
- seat bottom weldment 1-37
- seat bottom, beige 1-39
- seat bottom, buff 1-39
- seat bottom, white 1-41
- seat cover, white 1-41
- seat frame weldment 1-37
- seat frame, rear 1-37
- seat support, front 1-37
- seat, bearing 5-3
- sending unit, fuel gauge 9-5
- sensor, motor speed 14-5
- sensor, oil level 7-11, 8-11
- set, brush and screw 6-5
- set, pole 6-5
- shackle weldment 5-11
- shaft
 - counterbalance guide 7-13, 8-13
 - intermediate 15-3
 - rocker 7-9, 8-9
- shaft, input 15-3
- shaft, steering 5-3
- shift lever 12-3
- shifter lever, FNR 6-33
- shifter, FNR 6-33
- shim, camshaft 7-11, 8-11
- shim, crankshaft 7-13, 8-13
- shock absorber 5-9, 5-11
- shock absorber cushion 1-11, 5-11
- shock absorber cushion retainer 5-11
- shock mounting bracket 5-11
- shroud 7-5, 8-3
- shroud, engine 7-5, 8-3
- shroud, fan 7-5, 8-3
- single point watering system 13-31
- sleeve
 - delta A-plate 5-9
- snap ring 7-13, 8-9, 8-13
- snubber bracket 7-15, 8-15
- snubber, inner frame 7-15, 8-15
- socket 5-9
- solenoid 13-25
- solenoid, 12-volt 6-27
- spacer
 - accelerator pivot rod 4-3
- spanner wrench 17-9
- spark arrester 10-5
- spark plug 7-7, 8-5
- speed controller 13-25
- speed sensor 14-5
- speed sensor magnet 14-5
- speed sensor, motor 14-5
- spindle 5-15
- spiral backup ring 11-3
- spray, battery terminal protector 17-3
- spring
 - accelerator return 4-3
 - brake return 4-7
 - brush 6-5, 14-5
 - compression 5-5
 - drive button 11-3
 - drive clutch 11-3

INDEX

driven clutch 11-7
 extension return 9-11
 leaf 5-11
 shoe to shoe 4-13
 steering shaft compression 5-3
 throttle return 9-9, 9-15
 valve 7-9, 8-9
 spring cup 4-3
 spring mounting plate 5-7
 spring, motor brush 14-5
 spur gear 7-13, 8-13
 spws 13-31
 SPWS coupler 13-31
 SPWS fitting, swivel T 13-31
 SPWS hose 13-31
 SPWS manifold 13-31
 SPWS tubing 13-31
 starter/generator 6-5
 starter/generator belt 6-7, 11-3
 starter/generator pulley 6-5
 steel bushing 5-9, 5-11
 steel pressure relief ball 7-3, 8-7
 steering column 5-3
 steering column bearing press tool 17-9
 steering column installation 5-3
 steering column retaining ring tool 17-9
 steering rack 5-9
 steering shaft 5-3
 steering shaft compression spring 5-3
 steering wheel 5-5
 steering wheel puller tool 17-9
 stem, valve 2-5
 stiffener, flywheel side 7-15, 8-15
 stiffener, PTO side 7-15, 8-15
 storage basket 1-9
 strap buckle 1-51
 strap, A-plate 5-9
 strap, bag 1-51
 strap, fuel tank 9-3
 stud 7-15, 8-15
 lug 4-13, 15-3
 stud, ball 6-27, 12-3
 suppressor, voltage 16-3
 switch
 four-position 16-3
 key 1-29, 1-31
 light rocker 6-15, 13-13
 limit 6-13, 6-27, 6-33, 13-11
 pressure 4-5
 rocker 1-29
 switch rubber boot 6-19, 13-19

T

12-volt battery 6-31
 12-volt solenoid 6-27
 tachometer 17-9

tachometer probe, diesel 17-9
 tail light bulb 6-17, 13-15
 taillight 6-17, 13-15
 taillight assembly 6-17, 13-15
 taillight base 6-17, 13-15
 taillight bezel 6-17, 13-15
 taillight gasket 6-17, 13-15
 taillight hardware kit 6-17, 13-15
 taillight lens 6-17, 13-15
 tank, fuel 9-5
 tappet 7-11
 tester, continuity 17-5
 thermometer, battery 17-3
 thread-forming grease fitting 5-13, 5-15
 throttle return spring 9-9, 9-15
 throttle spring return bracket 9-9, 9-15
 thrust bearing 5-9
 tie rod 5-9
 tie wrap 1-29, 1-31, 4-9, 6-27, 6-31, 6-33, 13-25
 tire 2-5
 tire, pro tour, 205-50 x 10 2-5
 tool

 accelerator pedal adjustment 17-3
 belt tensioning, starter/generator 17-11
 brake adjustment 17-3
 brake cable release 17-3
 brake pedal adjustment 17-3
 brake pedal tension 17-3
 cam installation 17-3
 carburetor float level 17-7
 charger bezel 17-3
 clutch alignment 17-5
 cT-wrench 17-5
 drive clutch fixed sheave 17-5
 drive clutch holder 17-5
 drive clutch spider removal 17-5
 driven clutch spring compression base 17-5
 driven clutch spring compression collar 17-5
 driven clutch spring compression nut 17-5
 governor shaft installation 17-7
 puller, special use 17-9
 steering column bearing press 17-9
 steering column retaining ring 17-9
 steering wheel puller 17-9
 transaxle axle seal 17-9
 transaxle pinion seal 17-9
 transmission 17-9
 valve guide driver 17-9
 valve seat cutter 17-5

tool kit, clutch 17-5
 touch-up paint 17-7
 Tow/Run switch plate 6-19
 transaxle
 gear case 15-3

transaxle axle seal tool 17-9
 transaxle guard 12-9
 transaxle housing 15-3
 transaxle pinion seal tool 17-9
 transformer, battery charger 16-3
 transmission tool 17-9
 transzaxle
 shaft 15-3
 trim
 cowl 1-29, 1-31
 trim, floor mat 1-45, 1-47
 tube
 crankcase vent 9-9, 9-15
 oil filler 7-5, 8-3
 tube, putter 1-51
 tubing, SPWS 13-31
 tune-up kit 17-9
 turn signal lens 6-3, 13-3
 T-wrench tool 17-5

U

U-bolt 5-11
 upper delta clevis 5-9
 urethane bushing 5-9, 5-11

V

valve
 choke 9-11
 exhaust 7-9, 8-9
 fuel pickup tube 9-5
 intake 8-9
 reed 7-9, 8-9
 valve clearance adjuster screw 17-9
 valve guide 8-9
 valve guide driver tool 17-9
 valve guide reamer 17-9
 valve guide, intake 8-9
 valve seat 7-3, 8-7
 valve seat cutter 17-5, 17-11
 valve seat cutter guide 17-11
 valve seat cutter tool 17-5
 valve seat t-wrench 17-11
 valve spring 7-9, 8-9
 valve spring compressor 17-11
 valve spring retainer 7-9, 8-9
 valve stem 2-5
 vent barb 9-3, 9-5
 vertical socket dust seal 5-9
 volt ohm meter 17-11
 voltage regulator 6-27
 voltage suppressor 16-3

W

warning light, low oil 1-31
 washer, insulating 14-5

INDEX

wedge, bearing puller 17-3
weight
 clutch 11-3
 counterbalance 7-13, 8-13
 secondary clutch 11-3
weldment
 bag rack 1-51
 press 17-5
 rear seat hip 1-39, 1-41
 seat frame 1-37
 shock and rack mount 5-9
wheel 2-5
wheel cover, chrome 2-3
wheel cover, gold 2-3
wheel cylinder 4-13
wheel, steering 5-5
windshield brace 1-11
windshield channel 1-5
windshield frame pad 1-11
windshield hinge 1-5
windshield kit, folding 1-5
windshield kit, rear 1-7
windshield, folding, lower 1-5
windshield, folding, upper 1-5
windshield, rear 1-7
wire harness 9-3, 13-23
woodruff key 12-3
wrap, tie 1-29, 1-31, 4-9, 6-27, 6-31, 6-33, 13-25
wrench, spanner 17-9

Y

yoke, gear 17-7



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808