



280, rue Bonin Acton Vale (Québec) Canada JOH 1A0 mobilicab.com

- 1. Set the key switch located on the instrument panel to the position « ON ».
- The <u>forward-reverse</u> control is located on the body panel at the bottom of the seat. Press F to go forward and R to reverse.
- **3.** The **accelerator pedal** is the one on the right with the word "**GO**" written on it. When you press the accelerator pedal the **parking brake** will automatically apply and the vehicle will start.
- **4.** To engage the **parking brake**, press firmly on the pedal marked **"STOP PARK".** * Also press the small section marked **"PARK".**

5. Charge the cart

- <u>A</u>) Plug the charger into a 15 AMP (standard) outlet. Do not use an extension cord.
- **<u>B</u>**) Plug the gray tip into the receptacle under the forward-reverse control.
- **<u>C</u>**) Leave plugged in until the charger stops.

- Autonomy varies greatly depending on several factors; difference in level of terrain, load weight, temperature, full starting load.

- Check the maintenance switch if the cart does not operate. The switch is under the seat on the panel behind the batteries. It must be in the "RUN" position for the cart to operate.