

INSTRUCTION

Gas cart

MOBILICAB
450.546.0999 

280, rue Bonin
Acton Vale (Québec)
Canada J0H 1A0
mobilicab.com

1. 2 start options :
 - a. If the **three-position** switch (Off – On – Start)
 - i. Set the key switch located on the dashboard to the "**START**" position **until the engine starts**. The key will return to "ON" when released.
 - b. If the **two-position** switch (Off – On)
 - i. Set the key switch located on the instrument panel to the "**ON**" position. The motor will automatically activate when the pedal is depressed.
2. The **forward-reverse** control is located on the body panel below the seat. Press **F** to go forward and **R** to reverse.
3. The **accelerator pedal** is the one on the right with the word "**GO**" written on it. When the engine is running and the forward-reverse switch is in the "**F**" or "**R**" position, depressing the accelerator pedal will release automatically the parking brake and move the vehicle forward. selected.
4. To apply the **parking brake**, press firmly on the « **STOP-PARK** » pedal and the small « **PARK** » section as well.
5. The **gasoline engine choke** is located under the forward-reverse level. If the engine has trouble starting, hold it down for a few seconds while pushing the accelerator pedal. ** Please note, not all models have this option.*
 - Check the **maintenance switch** if the cart does not work. The switch is under the seat on the panel behind the batteries. It must be in the "**RUN**" position for the cart to work.