

1976-1980 Caroche Golf Car Illustrated Parts List




Electric Vehicles


Manual Number 8958 Edition Code 0180B1008A

INDEX

SPEE	ED	S	WI	T	CH		AS	SE	ME	ВL	Y	•	•	•	•	•	•	•	•	٠		•	•	1
BAG	M.	AS!	r	A	SS	EI	MB	LY			•	•	•	•	•	•	•	•	•	•	•	•	•	2
BODY	7	ANI	D	C	OW	L	G	RO	UI	•	•	•	•	•	•	•	٠	•	•	•	•	•	•	3
DRIV	Έ	UI	NI	T	A	S	SE	ΜB	LY		•	•	•	•	٠	٠	•	•	•	•	•	•	•	4
FORW	IA:	RD.	- R	E	VE	R	SE	s	WI	T	СН	<i>1 2</i> 4	SS	EM	1BI	Y	•	•	•	•	•		•	5
FRON	T	st	JS	PI	ΕN	s	10	N	•		•	•	•	•	•	•	•	•	•	•		•	٠	6
HYDR	A	UL:	C	I	ВR	Αŀ	ΚE	G	RC	U	P	•	•	•	•	•	•	•	•	•	•	•	•	7
MOTO	R	AS	SS	ΕI	мв	L3	Z	•	•		•	•	•	•	•	•	•	•	•	٠	•	•	•	8
PEDA	L	Al	1D	1	LI	NI	(A	GΕ	G	R	οu	P	•	•	•	•	•	•	•	٠	•	•	•	9
POWE	R	W	R	11	9 <i>1</i>		•	•	•		•	•	•	•	•	•	•	•	•	•	•	•	٠	10
REAR	: :	SUS	SP	Εì	NS	IC	N	•	•		•	•		•	•	•	•	•	•	٠	•	٠	•	11
RESI	S	roi	2	AS	ss	ΕN	1B	LΥ	•		•	•	•	•	•		•	•	•	•	•	•	•	12
SEAT	' (GRO	U	P		•	•		•		•	•	•		•		•	•	•	•	•	•	•	13
STEE	R.	INC	3	GI	RO	UE	?	•	•		•	•	•	•	•	•	•	•	•	•	•	•	•	14
SOLE	N	OII)	AS	SS	ΕN	1B	LΥ	•		•	•	•	•	•	•	•	•	•	•	•	•		15
CANO	P?	Y F	S	SI	ΞM	ΒI	Ϋ́	•	•		•	•	•	•	•	•		•	•	•	•	٠		16
row	ВZ	AR	A	SS	SE:	ΜE	BL.	Y							•			•						17

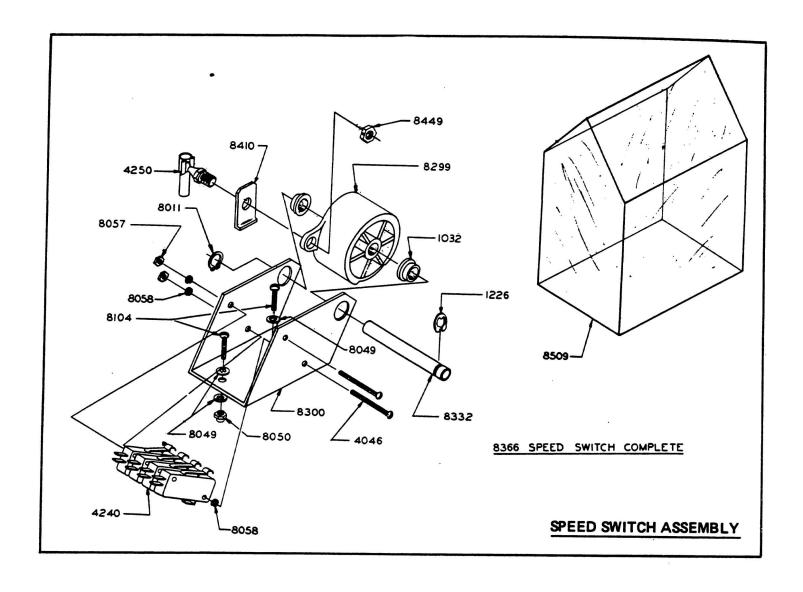


Part No.	Description	No. Req'd.
1032	Nylon Bushing	2
1226	"E" Ring	1
4046	No. 4-40 x 2-1/8" Rd. Hd. Mach. Screw	2
4240	Limit Switch	4
4250	Ball Joint (Accelerator)	1
8011	Retainer (Lock) Ring	1
8049	No. 10 Internal Tooth Lockwasher	4
8050	No. 10-32 Acorn Nut	ż
8057	No. 4-40 Hex Nut	ž
8058	No. 4 Lockwasher	4
8104	No. 10-32 x %" Pan Head Mach Screw	ż
8299	Speed Switch Cam	ī
8300	Speed Switch Case	i
8332	Speed Switch Shaft	i
8366	Speed Switch Assembly, Complete	į
8410	Cam Stop	4
8449	%-28" Dimpled Lock Nut	- 1
8509	Speed Switch Cover	i

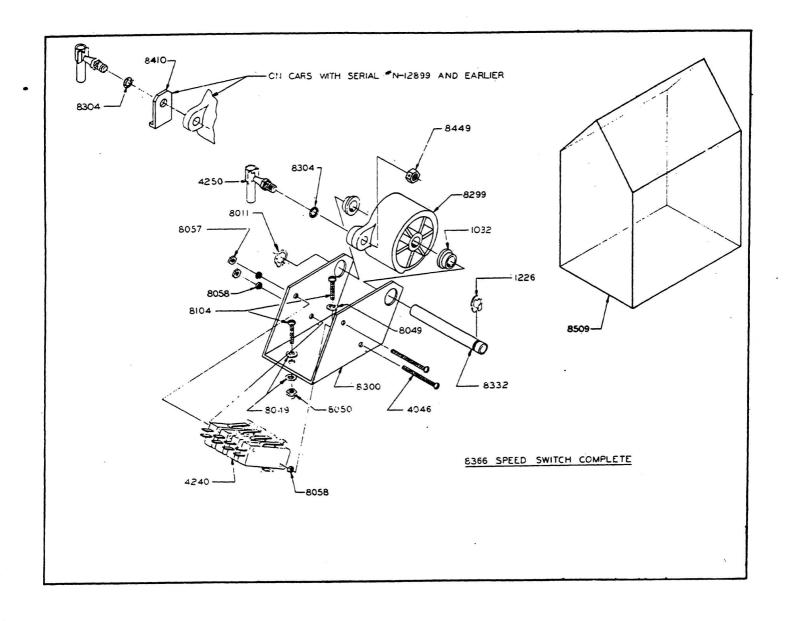


SPEED SWITCH ASSEMBLY

PART NO.	DESCRIPTION	NO. REQ'D
1032	NYLON BUSHING	2
1226	"E" RING	1
4046	\$4-40 x 2 1/8" ROUND HEAD MACHINE SCREW	2
4240	LIMIT SWITCH	4
4250	BALL JOINT (ACCELERATOR)	1
8011	RETAINER (LOCK) RING	1
8049	#10 INTERNAL TOOTH LOCKWASHER	4
8050	#10-32 ACORN NUT	2
8057	#4-40 HEX NUT	2
8058	#4 LOCKWASHER	4
8104	#10-32 x 3/4" PAN HEAD MACHINE SCREW	2
8299	SPEED SWITCH CAM	1
8300	SPEED SWITCH CASE	1
8304	y" Internal tooth lockwasher	1
8332	SPEED SWITCH SHAFT	1
8410	CAM STOP	1
8449	₹"-28 DIMPLED LOCKNUT	1
8509	SPEED SWITCH COVER	1

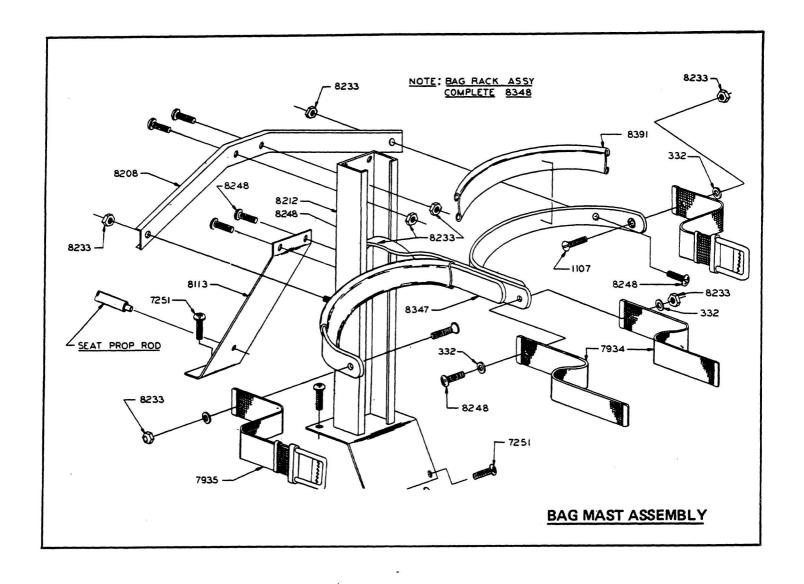


Part No.	No. Description Req'd.
332	1/4" Flatwasher
1107	"x %" Flat Head Machine Screw
7251	5/16" x 1" Phillips Head Machine Screw
7934	Bag Strap
7935	Bag Strap with Buckle
8113	Bag Rack Support
8208	Main Bag Rest Support
8212	Mast and Plate Assembly
8233	%-20 Nylon Insert Lock Nut 10
8248	14-20 x 1/4" Phillips Head Mach. Screw (Steel) 8
8347	Bag Rack Hoop Assembly
8348	Bag Rack Assembly Complete
8391	Vinyl Trim

•			

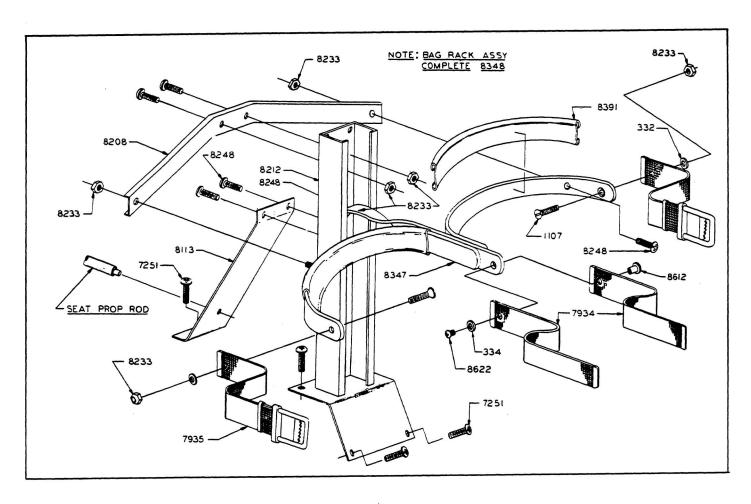

BAG MAST ASSEMBLY

PART NO.	DESCRIPTION	NO. REQ'D.
•••	1 "THE ARTIST CHIEF	2
332	4 FLATWASHER	1
334	3/8" FLATWASHER	<u> </u>
1107	⅓" x 3/4" FLAT HEAD MACHINE SCREW	2
7251	5/16" x 1 PHILLIPS HEAD MACHINE SCREW	5
7473	5/16"-18 NYLON INSERT LOCKNUT	4
7934	BAG STRAP	2
7935	BAG STRAP WITH BUCKLE	2
8113	BAG RACK SUPPORT	1
8208	MAIN BAG REST SUPPORT	1
8212	MAST AND PLATE ASSEMBLY	1
8233	½"−20 NYLON INSERT LOCKNŮT	7
8248	½"-20 x 3/4" PHILLIPS HEAD MACHINE SCREW	
	(STEEL)	7
8347	BAG RACK HOOP ASSEMBLY	1
8391	VINYL TRIM	2
8612	PHILLIPS TRUSS HEAD TUBULAR NUT	1
8622	¼"-20 x 3/8" PHILLIPS TRUSS HEAD MACHINE	
	SCREW	1

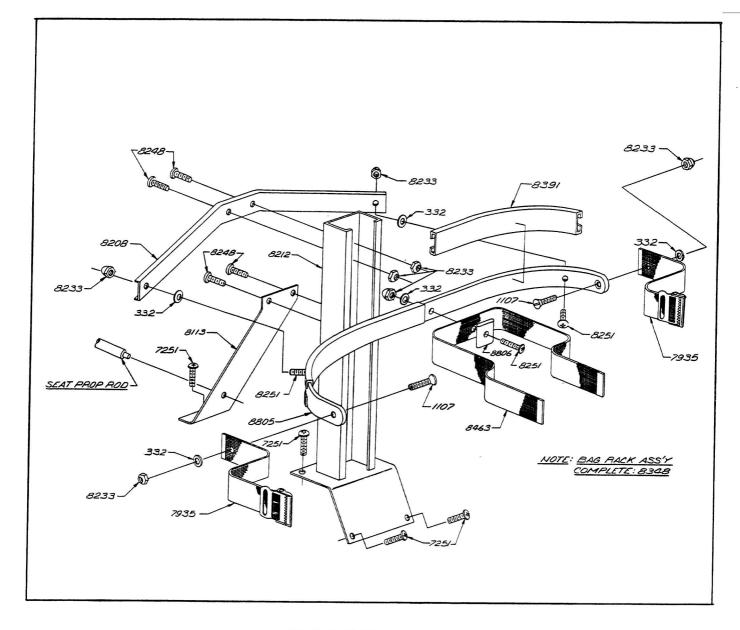


"BAG MAST ASSEMBLY"


Part. No.	Description	K Factor
332	¼ Flatwasher	5
1107	14-20 x 34 Flat Head Mach. Screw	
7251	5/16-18 x 1 Phillips Truss HD. Mach. Screw	5
7935	Bag Strap with Buckle	2
8113	Bag Rack Support	
8208	Main Bag Rest Support	1
8212	Mast and Plate Assembly	1
8233	1/4-20 Nylon Insert Locknut	9
8248	14-20 x 34 Phillips Truss HD. Mach. Screw	4
8251	14-20 x 1 Phillips Truss HD. Mach. Screw	3
8391	Vinyl Trim	2
8463	Bag Strap	1
8805	Bag Mast Hoop	1
8806	Bag Strap Retainer	1

KEY #	PART #	DESCRIPTION	QUANTITY REQ'
1	1010434	PLASTIC BARRELS	£
2	1010413	BAG STRAP ASS'Y	4
3	1010420	VINYL BAG HOOP TRIM	
4	1010433	SELF CUNCHING FLUSH HD STUD	2
5	1010435	5/16 - 18 x 1.00 CARRIAGE BOLT	7
9	1010394	WASHER CAP	7
7	0007473	5/16 - 18 LOCKNUT	7
8	0001241	5/16 FLAT WASHER	7
6	1010313	HOOP - BAG RACK	_
0	0007251	5/16 - 18 x 1.00 PH TRUSS HD. MACH. SCREW	REW 1
-	1010410	BUCKLE RETAINER PIN	2
.2	1010393	SPRING	2
.3	1010391	BUCKLE	2
7	1010392	BUSHING	2
5.	0008233	½ x 20 LOCKNUT	7
9.	1010432	BAG MAST & PLATE WELD ASS'Y	
7	1010218	RAKE HOLDER	
8	0001107	4 - 20 UNC FLAT HEAD SCREW	2


20

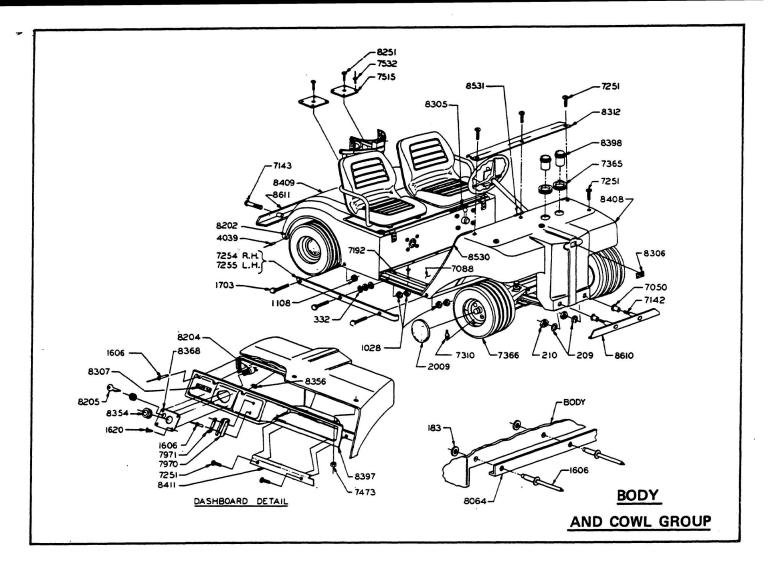


		No.			No.
Part No.	Description	Req'd.	Part No.	Description	Req'd.
183	3/16" Flatwasher	. 7	7532	3/16" x 5/16" Pop Rivet	8
209	½" Lockwasher	. 4	7970	Ball Holder	. 1
210	½-13 Hex Nut	. 4	7971	Ball Holder Bracket	. 1
332	1/4" Flatwasher	. 7	8064	Front Body Trim	. 1
1028	%"-20 Hex Nut	. 8	8202	Rear Fender Trim	. 2
1108	%"-20 Dimpled Locknut	. 4	8204	Key Switch	. 1
1606	3/16" x 1/4" Pop Rivet	. 18	8205	Switch Key	. 1
1620	No. 10 x %" Sheet Metal Screw	. 4	8251	1/4"-20 x 1" Phillips Head Mach. Screw	. 4
1703	%"-20 x 1 %" Hex Head Bolt	. 6	8305	Forward-Reverse Logo	
2009	Wheel Cover	. 4	8306	"JM" Logo	. 1
4039	5/32 x 3/8" Pop Rivet	. 4	8307	"Club Car" Logo	. 1
7050	Rubber Bushing		8312	Kick Plate	. 1
7088	Floor Mat	. 1	8354	Steering Column Grommet	. 1
7142	1/2"-13 x 4" Carriage Bolt	. 2	8356	Dash Plate Clip	. 4
7143	½"-13 x 5½" Carriage Bolt	. 2	8368	Dash Cover Plate	. 1
7192	Floor Mat Retainer		8397	Dashboard	
7251	5/16"-18 x 1" Phillips Truss Hd. Mach Screw	. 6	8398	Drink Cup Holder	
7254	Scuff Plate - R.H	. 1	8408	Cowl	
7255	Scuff Plate - L.H		8409	Body	
7310	Valve Stem		8530	Cowl Trim - Sides	
7365	Drink Cup Binding		8531	Cowl-Trim - Top	
7366	Tire & Wheel Assy, Complete	. 4	8610	Front Bumper Assembly	. 1
7473	5/16"-18 Nylon Insert Locknut	. 8	8611	Rear Bumper Assembly	. 1
7515	Bag Well Mat		(F) (D) (1)	the second contract of the second sec	

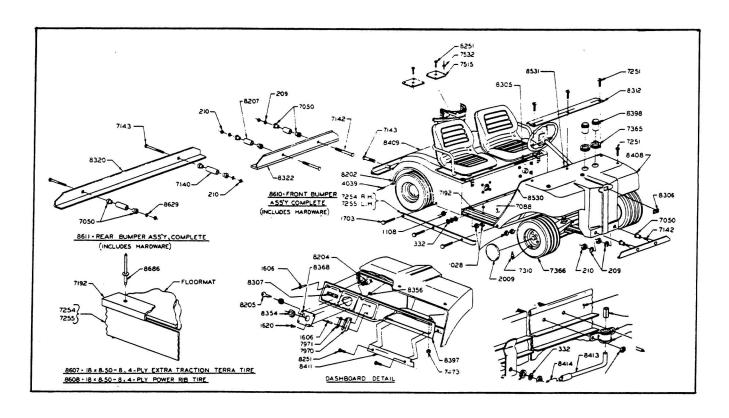

PART NO.	DESCRIPTION	NO. REQ'D
183	3/16" FLATWASHER	7
209	' LOCKWASHER	2
210	3"-13 HEX NUT	4
332	' FLATWASHER	6
1028	½"-20 HEX NUT	8
1108	k"-20 DIMPLED LOCKNUT	2
1606	3/16" x 's" POP RIVET	19
1620	#10 x 3/4" SHEET METAL SCREW	4
1703	"-20 x 1½" HEX HEAD BOLT	6
2009	WHEEL COVER	4
4039	5/32" x 3/8" POP RIVET	4
7050	RUBBER BUSHING	8
7088	FLOOR MAT	ĭ
7140	REAR BUMPER EXTENSION	2
7142	'2"-13 x 4" CARRIAGE BOLT	2
7143	5"-13 x 55" CARRIAGE BOLT	2
7192	FLOOR MAT RETAINER	2
7251	5/16"-18 x 1" PHILLIPS TRUSS HD. MACH. SCREW	
7254	SCUFF PLATE R.H.	ĭ
7255	SCUFF PLATE L.H.	ī
7310	VALVE STEM	4
7365	DRINK CUP BINDING	2
7366	TIRE & WHEEL ASSY, COMPLETE	4
7473	5/16"-18 NYLON INSERT LOCKNUT	3
7515	BAG WELL MAT	2
7532	3/16" x 5/16" POP RIVET	8
7970	BALL HOLDER	i
7971	BALL HOLDER BRACKET	ī
8064	FRONT BODY TRIM	ī
8202	REAR FENDER TRIM	2
8204	KEY SWITCH	1
8205	SWITCH KEY	1
8207	FRONT BUMPER EXTENSION	2
8251	4"-20 x 1" PHILLIPS HEAD MACHINE SCREW	4
8305	FORWARD-REVERSE LOGO	1
8306	"J-M" LOGO	1
8307	"CLUB CAR" LOGO	1
8312	KICK PLATE	1
8320	REAR BUMPER	1
8322	FRONT BUMPER	1
8354	STEERING COLUMN GRONNET	1
8356	DASH PLATE CLIP	4
8368	DASH COVER PLATE	1
8397	DASHBOARD	1
8398	DRINK CUP HOLDER	2
8408	COWL	1
8409	BODY	1
8411	DASHBOARD RETAINER TRIM	1
8530	COWL TRIM-SIDES	2
8531	COWL TRIM-TOP	1
8629	'INTERNAL TOOTH LOCK WASHER	2
8686	3/16" x 5/8" POP RIVET	6

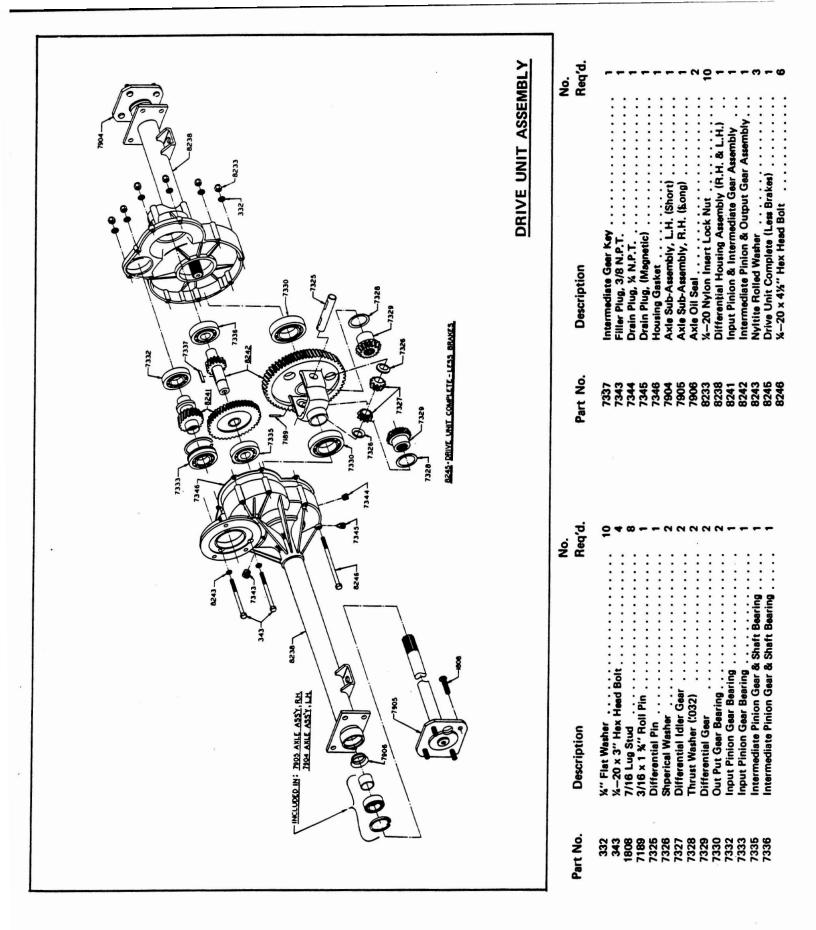


a.		

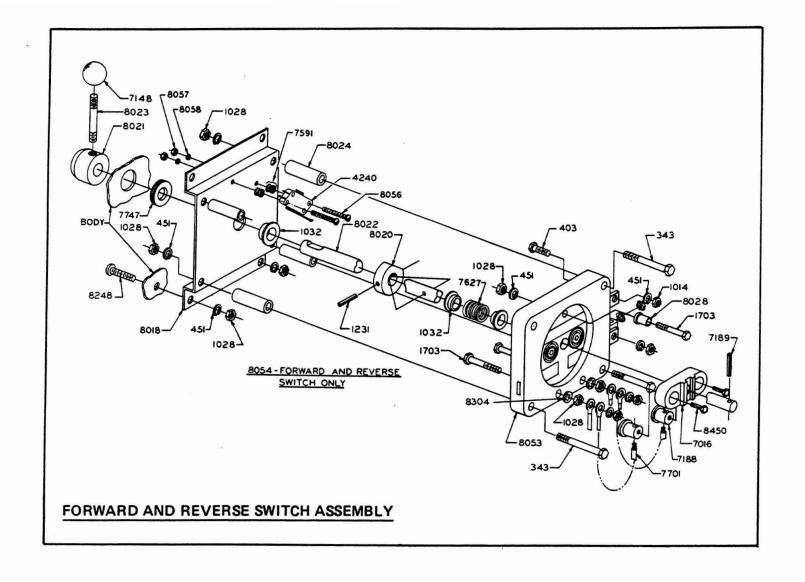


Part No.	Description	No. Req'd.	Part No.	Description	No. Req'd.
343	1/4" x 3 Hex Head Bolt	. 4	7747	Rubber Grommet	. 1
403	1/4" x 5/8" Hex Head Bolt	. 3	8018	F & R Switch Mounting Bracket	. 1
451	1/4" Lock Washer	. 14	8020	F & R Switch Cam	. 1
1014	1/4" Hex Nut (Brass)	. 3	8021	F & R Switch Hub	. 1
1028	1/4" Hex Nut	. 13	8022	F & R Switch Main Shaft	
1032	Nylon Bushing	. 3	8023	F & R Switch Control Shaft	
1231	1/8" x 1" Roll Pin		8024	F & R Switch Stand-Off (Long)	. 4
1703	1/4" x 1 1/4" Hex Head Bolt	. 3	8028	F & R Switch Rotor Stop	. 1
4240	Micro-Switch	. 1	8053	F & R Switch Case	
7016	Switch Rotor	. 1	8054	F & R Switch Assembly	
7148	Knob	. 1	8056	#4-40 x %" Round Head Screw	
7188	Rotor Contact	. 2	8057	#4-40 Hex Nut	. 2
7189	3/16" x 1%" Roll Pin	. 1	8058	# 4 Lock Washer	
7591	*6 Flat Washer	. 4	8248	"x "x "Phillips Truss Head Maching Screw (Steel) .	
7627	Spring	. 1	8304	1/2" Internal Tooth Lock Washer	5000
7701	Wire Harness	. 1	8450	No. 10-24 x 1/2" Hex Head Screw	. 2


	yte-	

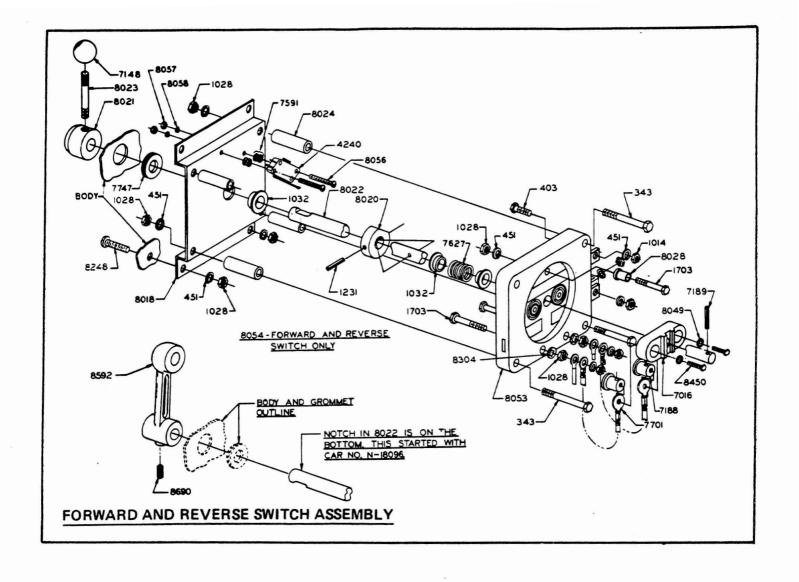

Part No.	Description	No. Req'd.	Part No.	Description	No. Regʻd.
343	₹# x 3 Hex Head Bolt	. 4	8020	F & R Switch Cam	. 1
403	k" x 5/8" Hex Head Bolt		8021	F & R Switch Hub	. 1
451	't" Lock Washer		8022	F & R Switch Main Shaft	
1014	hex Nut (Brass)		8023	F & R Switch Control Shaft	
1028	THEX Nut		8024	F & R Switch Stand-Off (Long)	
1032	Nylon Bushing		8028	F & R Switch Rotor Stop	
1231	1/8" x 1" Roll Pin	ĩ	8049	#10 Internal Tooth Lock Washer	
1703	h" x lh" Hex Head Bolt		8053	F & R Switch Case	
4240	Micro-Switch		8054	F & R Switch Only	
7016	Switch Rotor		8056	#4-40 x 3/4" Round Head Screw	. 2
7148	Knob	_	8057	#4-40 Hex Nut	
7188	Rotor Contact	_	8058	44 Lock Washer	
7189	3/16" x 1½" Roll Pin		8248	%" x 3/4" Phillips Truss Head	
7591	#6 Flat Washer			Machine Screw (Steel)	
7627			8304	" Internal Tooth Lock Washer	
7701	Spring		8450	#10-24 x ½" Hex Head Screw	
7747		-	8592	F & R Switch Handle	
8018	Rubber Grommet	i	8690	4"-20 x 5/8" Hex Socket Set Screw .	i

	Description	Quantity	Key No.	Key No. Part No.	Description	Quantity
F & R Switch Handle	andle	Н	23	0008020	F & R Cam	·
Wire Assembler	Wire Accomply:		24	0001703	14-20 UNC x 14 ," Hex Head Bolt	က
14-20 UNC How Mint	V.:+	Н (25	0008053	F & R Switch Case	÷
14" Lockwashor	יין דור היין	F .	56	0008028	F & R Switch Rotor Stop	-
14-2011NC × 3/	1/2-2011NC v 3/4" Phillips Thus Hood Marketin	12	27	0000343	4-20 UNC x 3" Hex Head Bolt,	4
Scrow (Stool)	4 tunips trus nead Machine	4	28	0008304	14" Internal Tooth Lockwasher	4
No 4 40 Herr Mark	M4		29	0008793	Rotor Contact	7
No. 4-40 nex	inut T	4	30	0007189	3/16" x 14" Roll Pin	, , ,
IVO. 4 LOCKWasner	sner	4	31	0007016	Switch Rotor	۱ -
Wire Assembly	Wire Assembly - Reverse Buzzer	-	32	0008049	No. 10 Internal Tooth Lockwasher	٠ •
F & R Switch Stand-Off	Stand-Off	ぜ	60	0008450	No. 10-2416" Hex Head Screw	4 C
No. 6 Flatwasher	ıer	· ∞	34	0007701	Wire Harness	۷ -
F& R Switch Mtg. Bracket	Mtg. Bracket	-	, es	0000403	1/20 INC v 5/8" How Hoad Bolt	٦ د
Limit Switch			36	0001014	1/2-20 INC How Nut (Brees)	ာင
Buzzer Assembly	dy	ı 	37	1010061	Wire Assembly (Ronomo Burnen)	· c
No. 4-40x3/4"	No. 4-40x3/4" Round Head Screw	• 7	- œ	1010101	Formord & Donord Curital Vit with	7
Nylon Bushing		יס יו	8	0070101	and mounting bands witch the Without wiring	
F & R Switch Main Shaft	Main Shaft	- , c			Mimbon chock No. 1 No. 9 No. 1 No.	
Limit Switch		- ۱			No. E (4) No. 6, NO. 94 (9) No. 2, NO. 3, NO. 4 (8),	
No. 10 Flatwasher	iher	- -	i		NO. 9 (4), NO. 6, NO. 24 (2), NO. 28 (4), NO. 32, No. 33 No. 34	
No. 10 Sheet Metal Screw	etal Screw	- t			10.00, 10.04	
F & R Shaft Spring	ring	ı 				
1/8" x 1" Roll Pin	Pin	1				

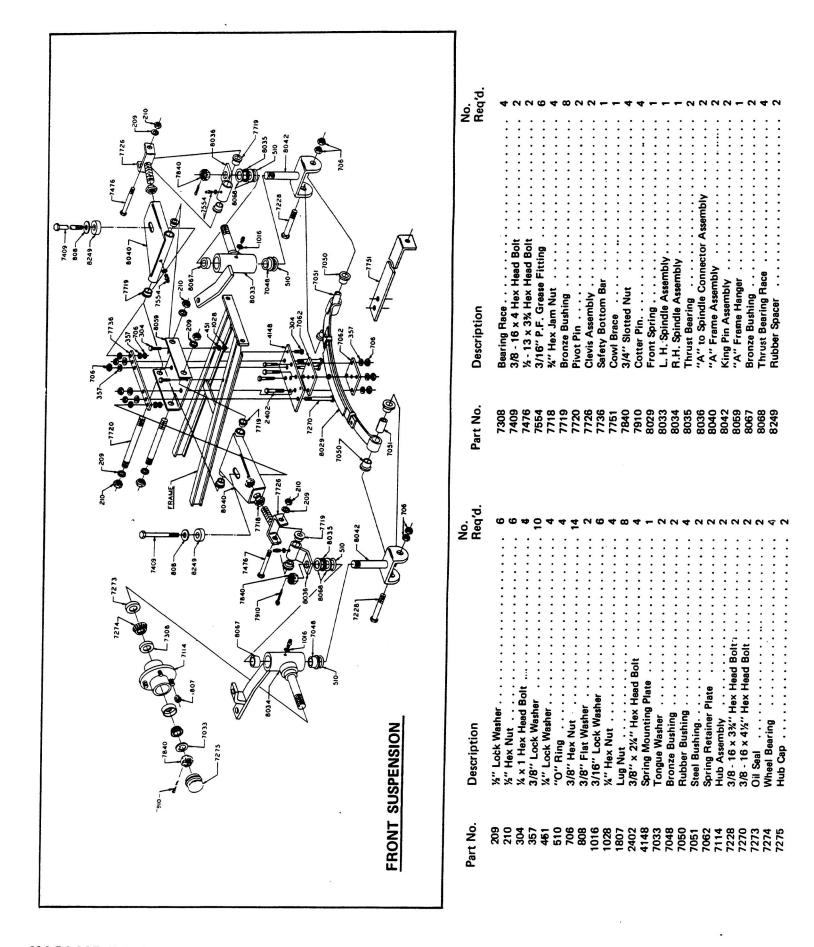


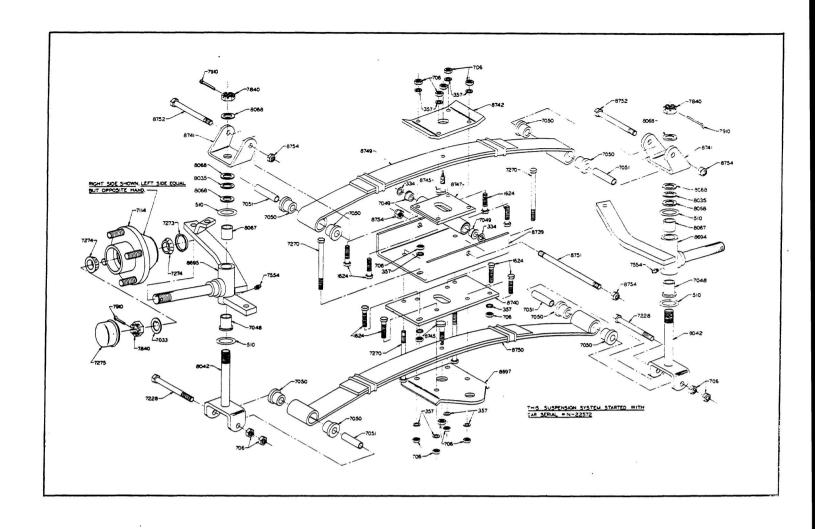


DOUBLE SPRING FRONT END

Part No.	Description	K Factor	Part No.	Description	K Factor
334	%" Flatwasher	2	8035	Needle Thrust Bearing	. 2
357	%" Lockwasher	12	8042	King Pin Assembly	. 2
510	Rubber "O" Ring	4	8067	Spindle Bushing - Bronze	. 2
706	%-16 UNC Hex Nut	18	8068	Thrust Bearing Washer	. 6
1624	%-16 x 1½ Hex Head Bolt		8694	Spindle Assembly (L.H.)	. 1
7033	Tongue Washer		8695	Spindle Assembly (R.H.)	. 1
7048	Bronze Bushing	2	8697	Front Spring Retainer Plate	. 1
7049	Nylon Bushing	2	8739	Top Suspension Mtg. Channel	. 1
7050	Rubber Bushing	8	8740	Bottom Suspension Mtg. Plate	. 1
7051	Bushing - Steel Tube	4	8741	Top Spring Clevis	. 2
7114	Hub		8742	Top Spring Retainer Plate	. 1
7228	%-16 x 31/4 Hex Head Bolt	2	8745	Eccentric Assembly	. 2
7273	Dust Seal		8747	Top Spring Pivot Sub Assembly	1
7274	Hub Bearing		8749	Top Spring	. 4
7275	Hub Cap		8750	Bottom Spring	
7554	3/16 Grease Fitting		8751	Upper Spring Pivot Pin	. 1
7840	34-16 UNF Hex Slotted Nut	4	8752	%-16 x 3" Hex Head Bolt	
7910	Cotter Pin		8754	%-16 UNC Nylon Insert Locknut	


NO. REO'D	1	ν α	o c		ι α	0 6	1 7		1 0	1 4	~ ·	1 00	0 6	2 1	1 0	-			1	1 6	1 ~		·	2	2	· •		2	2	-	9		1 6	4	4
DESCRIPTION	1/2" LOCKWASHER	3/8" LOCKWASHER	3/8-16 UNC HEX NIT	HEX		BUSHING-BRONZE	BUSHING-RUBBER	HUB ASS'Y	DUST SEAL	HUB BEARING	HUB CAP	BUSHING-BRONZE	3/4 -16 UNF SLOTTED HEX NUT		SPINDLE BUSHING-BRONZE	SPINDLE ASSY - L.H.	SPINDLE ASSY - R.H.	2		X 3.00 H	-SPL.	GREASE FITTING		SUB-ASSY A-FRAME	KING PIN ASSY		PLATE, SPRING MTG.	BOLT- SHOULDER	BOLT-SHOULDER	SPRING FRONT	3/8 -16 UNC DIMPLED LOCKNUT	THRUST BEARING	BUSHING-STEEL	.3/8-16 UNC x 2.00 HEX BOLT	.3/8-16 unc x 4 1/4 HEX BOLT
PART #	00020	0000357	0000	00130	00180	00704	00705	00711	00727	00727	00727	00771	00784	00791	00800	J10348	110347	69800	71800	00875	01000	01011	01011	01011	01012	01012	01012	01012	01012	113	7	115	910	1010177	1010200
KEY #	1	2	က	4	2	9	7	œ	6	10	11	12	13																				33		35

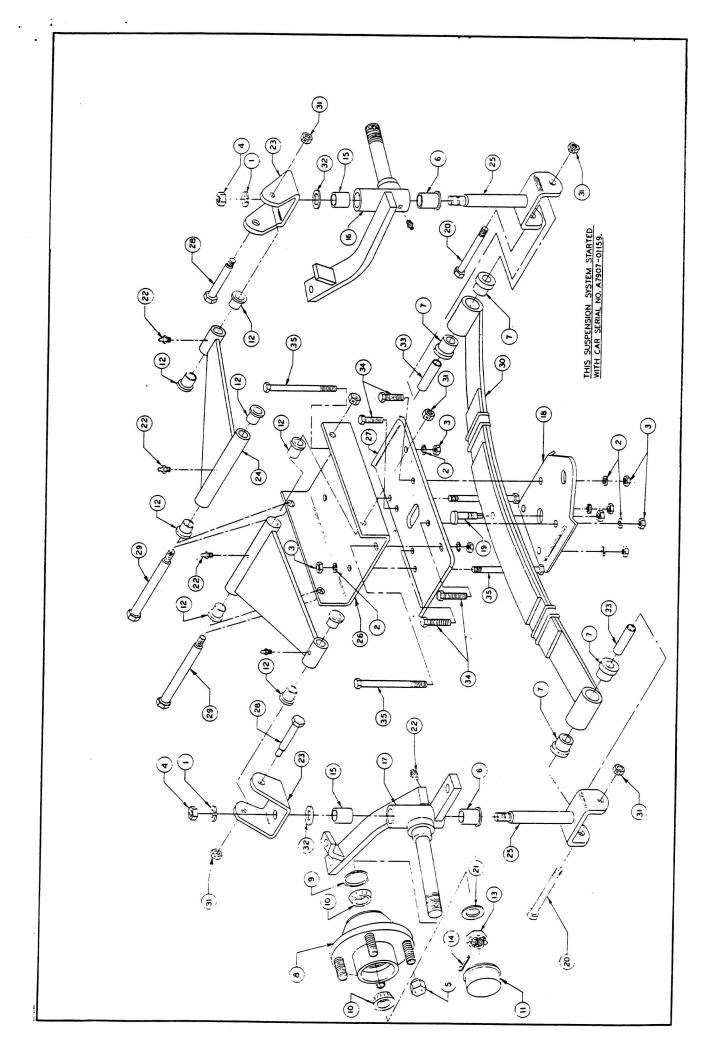

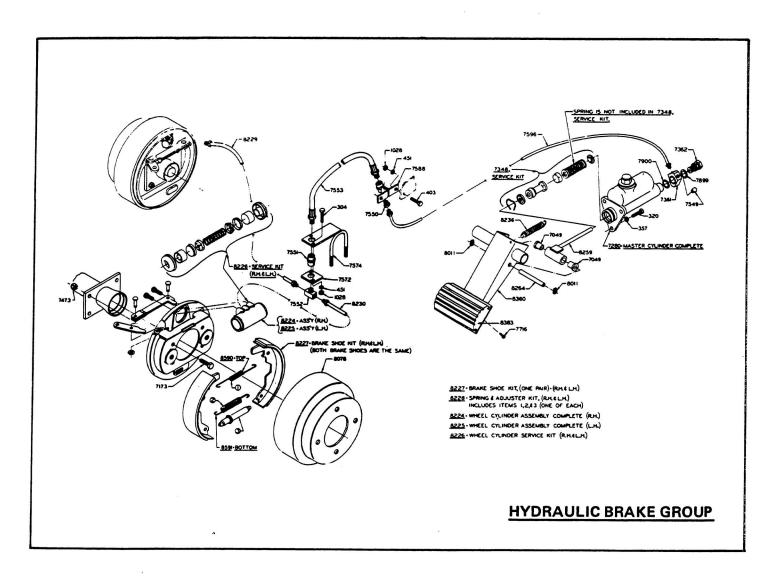


Part No.	Description	No. Req'd.	Part No.	Description	No. Reg'd.
304	%" x 1" Hex Head Bolt	. 2	7643	Brake Hose Assembly	. 1
320	3/8" x 1" Hex Head Bolt	. 3	7716	3/16" x %" Hex Head Self Tapping Screw	. 2
357	3/8" Lock Washer		7899	Copper Gasket (Front)	. 1
403	"x 5/8" Hex Head Bolt		7900	Copper Gasket (Rear)	. 1
451	1/4" Lock Washer	. 4	8011	Retainer Ring	. 2
1028	¼" Hex Nut	. 4	8076	Brake Cluster Assembly R.H	. 1
7049	Nylon Bushing	. 2	8077	Brake Cluster Assembly L.H	. 1
7173	5/16" x %" Hex Head Bolt	. 8	8078	Brake Drum	. 2
7265	Clip Brake Line	. 4	8224	Wheel Cylinder Assembly Complete R.H	. 1
7280	Master Cylinder (Complete)	. 1	8225	Wheel Cylinder Assembly Complete L.H	. 1
7348	Master Cylinder Service Kit	. 1	8226	Wheel Cylinder Service Kit R.H. & L.H	. 2
7361	Adaptor, Brake Line	. 1	8227	Brake Shoe Kit (One Pair) (R.H. & L.H.)	. 2
7362	Adaptor, Bolt W/Washer	. 1	8228	Spring & Adjustor Kit (R.H. & L.H.)	. 2
7473	5/16"-18 Nylon Insert Lock Nut	. 8	8229	Brake Line Assembly (L.H.)	. 1
7549	Plug	. 1	8230	Brake Line Assembly (R.H.)	. 1
7550	Male Connector	. 1	8236	Brake Pedal Return Spring	. 1
7551	Female Connector		8259	Plunger Assembly	. 1
7552	Brass "T"	. 1	8264	Pivot Pin	. 1
7553	18" - 2700 Hose Assembly	. 1	8360	Brake Pedal Assembly	. 1
7572	Brake Line Clamp — Square	. 1	8383	Brake Pedal Pad	. 1
7574	Brake Line Clamp Assembly	. 1	8590	Brake Shoe Spring - 80 lb. (Top)	
7588	Hydraulic Hose Mounting Assembly	. 1	8591	Brake Shoe Spring - 80 lb. (Bottom)	. 2
7596	Brake Line Assembly	. 1			

		*

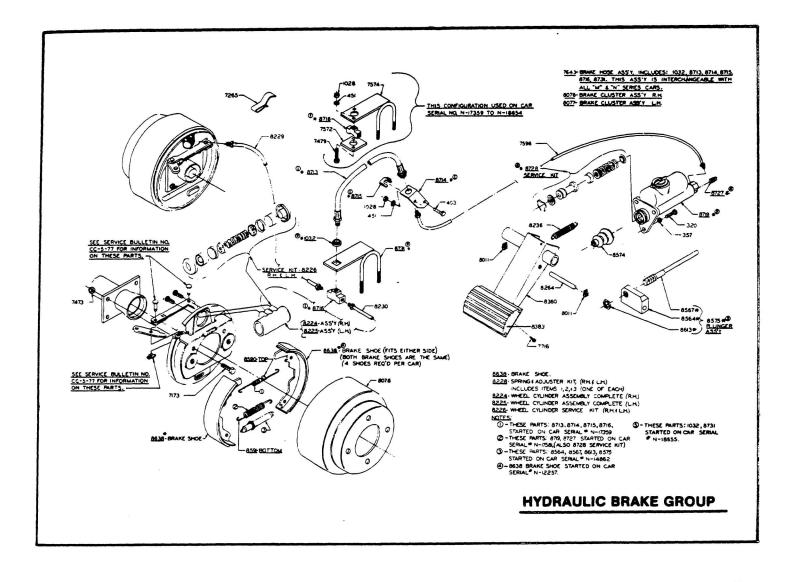


See No.	Description	No. Reg'd.	Part No.	Description	No. Reg'd.
Part No.		7. TO CO. T. C.			
320	%" x 1" Hex Head Bolt		8228	Spring & Adjuster Kit (R.H. & L.H.)	
357	%" Lock Washer		8229	Brake Line Assembly (L.H.)	
403	1/4" x 1/4" Hex Head Bolt	2	8230	Brake Line Assembly (R.H.)	
451	1/4" Lock Washer	4	8236	Brake Pedal Return Spring	1
1028	¼" Hex Nut	4	8264	Pivot Pin	1
1032	Nylon Bushing	. 1	8360	Brake Pedal Assembly	1
7173	5/16" x ¾" Hex Head Bolt	8	8383	Brake Pedal Pad	1
7265	Clip, Brake Line	4	8564	Plunger Body	1
7473	5/16"—18 Nylon insert Lock Nut	8	8567	Plunger Rod	1
7479	%" x 1%" Hex Head Bolt	2	8574	Master Cylinder Boot	1
7572	Square Brake Line Clip	1	8575	Plunger Assembly	1
7574	Brake Line Clamp Assembly	1	8590	Brake Shoe Spring — 80 lb. (Top)	1
7596	Brake Line Assembly	1	8591	Brake Shoe Spring — 80 lb. (Bottom)	1
7643	Brake Hose Assembly	1	8613	½"-20 Hex Jam Nut (Thin)	1
7716	3/16" x ¾" Hex Head Self Tapping Screws		8638	Brake Shoe (Fits either side)	4
8011	Retainer Ring	2	8713	Hydraulic Brake Hose	1
8076	Brake Cluster Assembly R.H	1	8714	Frame Bracket	1
8077	Brake Cluster Assembly L.H	1	8715	"U" Clip (Brake Hose)	1
8078	Brake Drum		8716	Brass Tee (Brake Line)	1
8224	Wheel Cylinder Assembly Complete R.H	1	8719	Master Cylinder (Complete)	1
8225	Wheel Cylinder Assembly Complete L.H	1	8727	Plug (Master Cylinder)	1
8226	Wheel Cylinder Service Kit R.H. & L.H	2	8728	Master Cylinder Repair Kit	
			8731	Brake Line Clamp Assembly	

QUANTITY							
DESCRIPTION	GUIDE PIN SLIDING LEVER PIVOT PIN PIVOTAL LEVER CLIP GUIDE PIN SHORT SLIDING LEVER R.H. PIVOT PIN PIVOTAL LEVER SHORT SLIDING LEVER L.H.	ASS'Y (FRONT - BOTH SIDES)	ASS'Y (REAR - BOTH SIDES)	ASS'Y (FRONT - BOTH SIDES)	ASS'Y (REAR - BOTH SIDES)	SLIDING LEVER ASS'Y (FOR ROUND PINS)	PIVOTAL & SLIDING LEVER ASS'Y (FOR PINS WITH FLATS)
PART #	1010096 1010103 10100095 10100088 10100090 1010106 1010100 1010100	PIN & CLIP AS	PIN & CLIP AS	PIN & CLIP AS	PIN & CLIP AS	PIVOTAL & SLI	PIVOTAL & SLI
KEY #	1 2 4 4 5 6 7 7 9 10	1010091	1010092	1010097	1010098	1010110	1010111

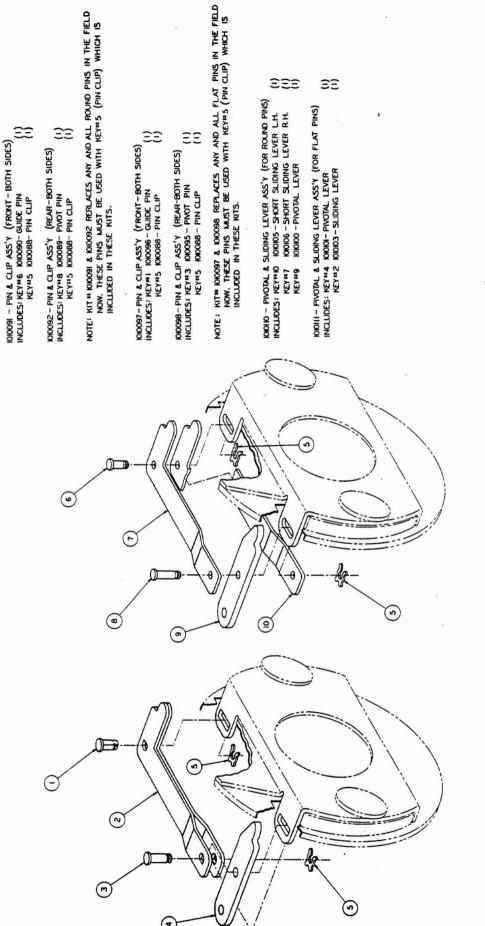


HYDRALIC BRAKE PARTS

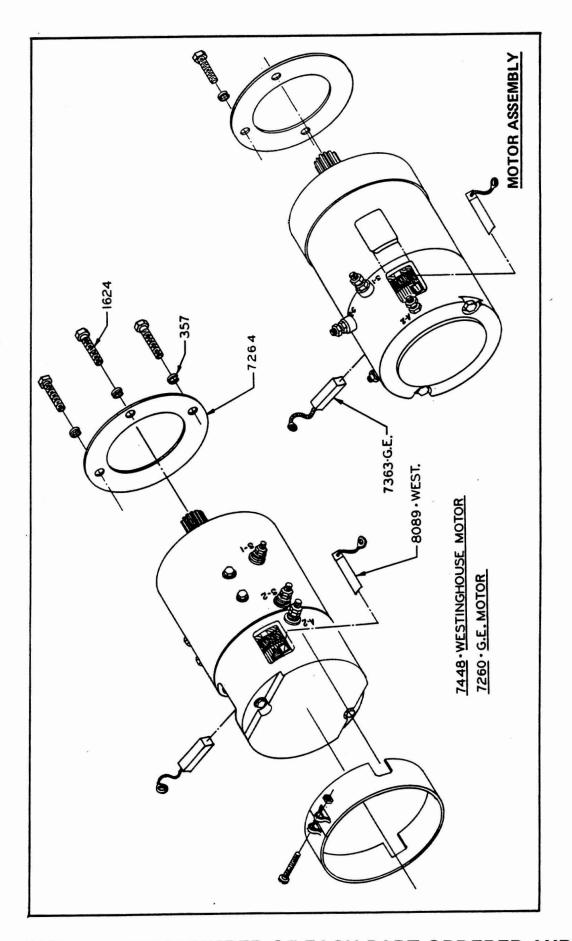


	÷					3		5
	'n,	3	က	-	-	-	-	
ŝ	Req'd.					Brushes, 1-set (G.E. Motor)		Brushes, 1-set (Westinghouse Monor)
_	•							
								_
								7
							_	2
							2	2
							9	2
							9	•
			=			T	늋	5
			ਰ			2	×	ō
			æ	2		5	~	두
			P	•		Σ	- 1	č
			2	₻		_	5	=
			Ĭ	ε		w	×	ä
		Þ	Ţ	Q		Ö	2	3
	Description	3/8" Lockwasher	1/8" x 11/4" Hex Head Bolt	G.E. Motor - Complete		-	Nestinghouse Motor - Complete	=
	.0	5	I	1		=	2	Ħ
	=	3	:	-		Ŧ	5	ě
	.0	×	×	9		-	ō	÷
	7	8	-	5	•	-	듞	
	Š	ĭ	×	\mathbf{z}	Ħ		~	ĕ
	9	•			ž	듄	:=	듄
		œ	œ	ш	*	3	8	3
		2	~	O	Õ	m	Ž.	ă
		••	••	_	_	_	_	
	•							
	Part No.	1	1624	0	4	3	7448	8089
	Z	357	2	7260	7264	7363	4	9
	_	3	9	2	2	23	7	30
	=		-				•	w
	~							
	_							

INCLUDE PART NUMBER OF EACH PART ORDERED AND SERIAL NUMBER OF CAR

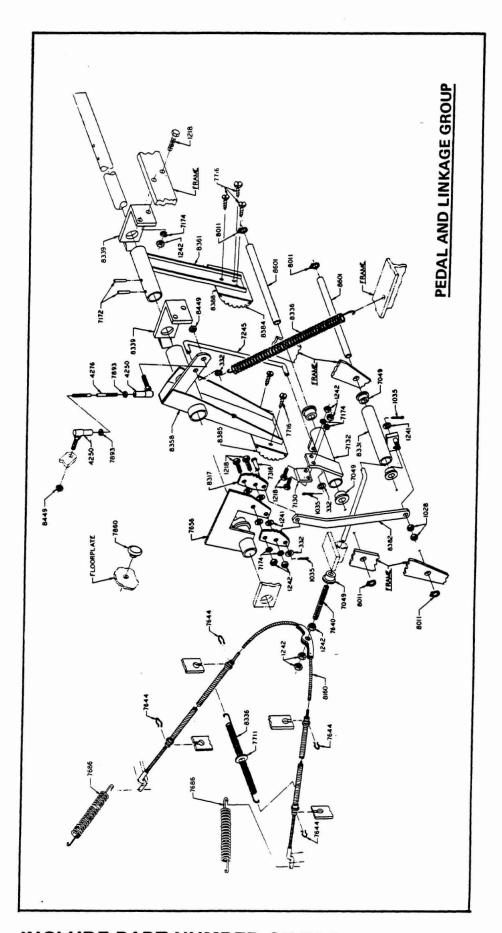


No. Req'd.
Bescription Rubber Grommet 3/16" x ½" Hex Hd. Self Tapping Screw Rubber Grommet No. 10–32 Hex Nut Retainer Ring Brake Cable Assembly Brake Bell Crank Assembly Spring Pedal Leg Accelerator Pedal Assembly Hill Brake Pedal Assembly Park Brake Link Rubber Pedal Pad (Hill Brake) Rubber Pedal Pad (Accelerator)
Part No. 7716 7716 7716 7860 7860 7893 8011 8160 8331 8331 8331 8331 8358 8358 8358 8358
No. Description Req'd.
Part No. 132 1028 1038 1038 1241 1241 1242 4256 4256 4256 7132 7132 7172 7172 7174 7246 7646 7656

INCLUDE PART NUMBER OF EACH PART ORDERED AND SERIAL NUMBER OF CAR

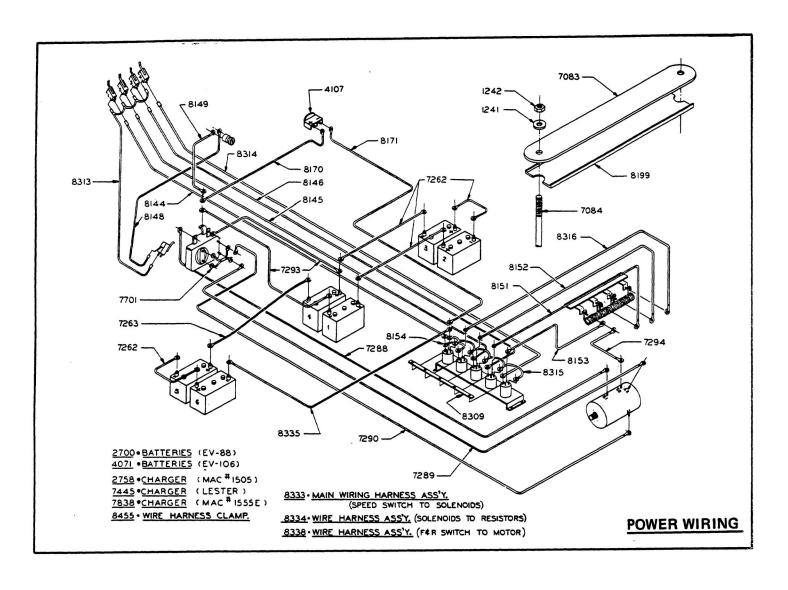


Part No.	Description	No. Req'd.	Part No.	Description	No. Req'd.
1241	5/16" Flat Washer	6	8146	*18 Blue Assy (80")	
1242	5/16" Hex Nut	6	81 48	*18 Orange Wire Assy (61")	. 1
2700	6 Volt Battery (EV-88)		8149	*18 Green Wire Assy (58")	. 1
2758	Charger (MAC 1505)		8151	*10 White Wire Assy (13")	. 1
4071	6 Volt Battery (EV-106)		8152	*10 Red Wire Assy (16")	. 1
4107	Charger Receptacle		8153	*6 Black Wire Assy (7")	. 1
7083	Battery Hold-Down		8154	*18 Red Wire Assy (4")	. 1
7084	"J" Bolt	•	8170	*10 Red Wire Assy (15")	. 1
7262	*6 Battery Wire (Short)	4	8171	*10 Yellow Wire Assy (23")	. 1
7263	*6 Battery Wire (Long)		8199	Battery Hold-Down Insulator	. 3
7288	*6 Red Wire Assy (39")		8309	Buss Bar (Solenoids)	. 1
7289	*6 White Wire Assy (45")		8313	Wire Assembly Yellow	. 1
7290	*6 Black Wire Assy (46")		8314	Wire Assembly Black (80")	. 1
7293	*6 Red Wire Assy (19")		8315	*18 Yellow Assy (Solenoid)	. 1
7294	*6 Black Wire Assy (19")		8316	Wire Assembly First Speed	. 1
7445	Charger (Lester)		8333	Main Wiring Harness Assy	. 1
7701	F & R Rotor Harness Assy		8334	Wire Harness Assy	. 1
7838	Charger (Mac 1555E)		8338	Wire Harness Assy	
8144	*18 Red Wire Assy (76")		8455	Wire Harness Clamp	
8145	*18 White Wire Assy (78")				

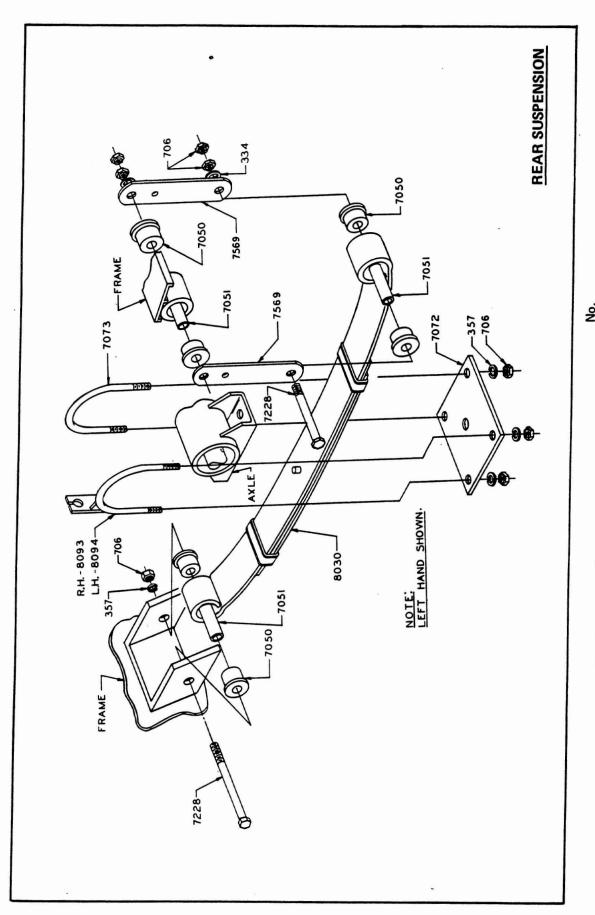

Reg'd	4		18	12	9							
	:	•	:	:	:				:	:	•	· · · ·
		•		•		•					•	•
	•	•	•	•	•				•	•	•	•
	•	•		•	•	•		•	•	•	•	•
	•	•	•	•	•	•			•	•	•	•
	•	•	•	•	•	•						:
						6		0 0 0 0				
						9					-	-
				•		B		0	,			-
						۰		8	١,		ш.	-
	•	·	:	٠	:	iner		ead			SSV	28
Description	3/8" Flat Washer.	3/8" Lock Washe	3/8" Hex Nut	Rubber Bushing	Bushing (Sleeve)	Rear Spring Retainer Plate	"U" Bolt	3/8" x 3% Hex Head Bolt	Spring Shackle	Rear Spring	Rear Cable Mt. Assv. R.H.	Rear Cable Mt Assv 1 H
Part No.	334	357	90/	7050	7051	7072	7073	7228	7569	8030	8093	8094


INCLUDE PART NUMBER OF EACH PART ORDERED AND SERIAL NUMBER OF CAR

NO. REQ'D.	2	4	4	2	7	4
DESCRIPTION	ABSORBER - SHOCK	CUSHION - SHOCK ABSORBER	RETAINER - SHOCK ABSORBER CUSHION	3/8-24 UNF HEX NUT	5/8-11 UNC DIMPLED LOCKNUT	5/8 FLATWASHER
PART NO.	1010140	1010142	1010144	1010145	1010188	1010193
KEY NO.	٦	7	en en	4	5	9

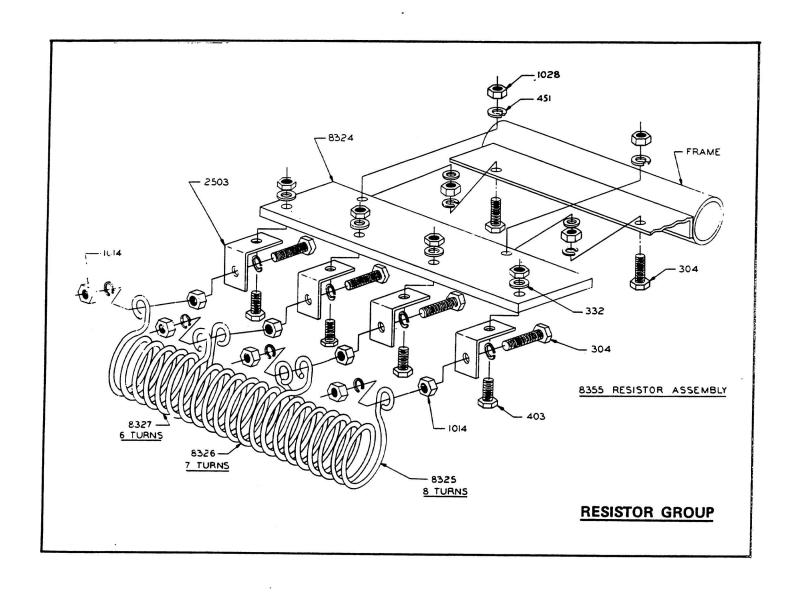

Part No.		No. Req'd.
304	¼" x 1 Hex Head Bolt	. 6
332	1/4" Flat Washer	
403	1/4" x 5/8" Hex Head Bolt	. 4
451	1/4" Lock Washer	12
1014	1/4" Hex Nut (Brass)	8
1028	1/4" Hex Nut	8
2503	Bracket	4
8324	Board	1
8325	Resistor Coil No. 1 - First Speed	1
8326	Resistor Coil No. 2 - Second Speed	
8327	Resistor Coil No. 3 - Third Speed	
8355	Resistor Assembly	1


a a constant of the constant o		

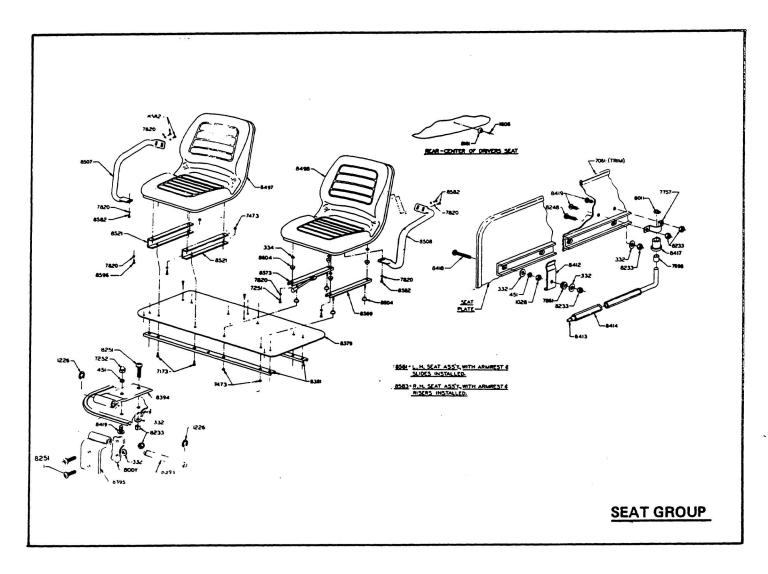


Part No.	Description	No. Req'd.	Part No.	Description	No. Req'd.
332	1/4" Flat Washer	6	8394	Hinge Plate (Seat Plate)	. 2
334	3/8 Flat Washer	4	8395	Hinge Plate (Body)	. 2
451	¼" Lockwasher	3	8412	Prop Rod Retainer	. 1
1028	%-20 Hex Nut		8413	Prop Rod	. 1
1606	3/16 x ½ Pop Rivet		8414	Prop Rod Sleeve	. 1
7061	Seat Plate Trim		8417	Prop Rod Swivel Bushing	. 1
7173	5/16-18 x % Hex Head Bolt		8418	14-20 x 11/2" Phillips Truss Hd. Mach Screw	. 1
7251	5/16-18 x 1" Phillips Truss Head Mach Screw	4	8419	14-20 x 5/8" Phillips Truss Hd. Mach Screw	. 4
7252	%-20 Acorn Nut	2	8497	Bucket Seat - R.H	. 1
7473	5/16-18 Nylon Insert Locknut		8498	Bucket Seat - L.H	. 1
7698	Bushing Insert		8507	Arm Rest — R.H	. 1
7757	½ Conduit Clamp		8508	Arm Rest - L.H	. 1
7820	5/16 Internal Tooth Lock Washer		8521	Passenger Seat Riser	. 2
7861	Rubber Grommet	1	8569	Seat Slide Without Lock	
8011	Lock Ring	1	8573	Seat Slide & Handle Assy	. 1
8233	14-20 Nylon Insert Lock Nut	11	8581	L.H. Seat Assembly with Armrest & Slides Inst	
8248	14-20 x 34" Phillips Truss Hd. Mach Screw	2	8582	5/16-18 x %" Phillips Truss Hd Screw	. 6
8251	14-20 x 1" Phillips Truss Hd. Mach Screw	6	8583	R.H. Seat Assembly with Armrest & Slides Inst	. 1
8379	Seat Plate	1	8596	5/16-18 x 1/2" Hex Head Bolt	. 4
8381	Seat Plate Stiffener	2	8604	Modified Cone Washer	. 8
8393	Hinge Pin	2			

QUANTITY	4	SREW 4	4	1	т	3) 1	4	2	1	1	1	1	2
DESCRIPTION	1/4" INTERNAL TOOTH LOCKWASHER	1/4-20 UNC X 3/44 PHILLIPS TRUSS HEAD SCREW	NYLON BUSHING	KNOB - SEAT ADJUSTMENT	GROMMET WASHER	' ADJUSTMENT ASS'Y (INCLUDES NYLON BUSHING)	PUSH NUT - PIVOT PIN	PIVOT PIN - SEAT BACK SUPPORT	PLATE ASS'Y. (INCLUDES NYLON BUSHING)	3/8 - 16 UNC #3 HEAD PLOW BOLT	CHANNEL ASS'Y SEAT BACK	CAP - SEAT BACK	SEAT BACK SUB ASS'Y
PART NO.	0008304	000824E	0007049	0007151	8080000	1010078	1010082	1010079	1010073	1010081	1010076	1010007	1010442
KEY NO.	7	2	3	4	2	9	7	8	6	10	11	12	13


SEAT BACK ASSEMBLY

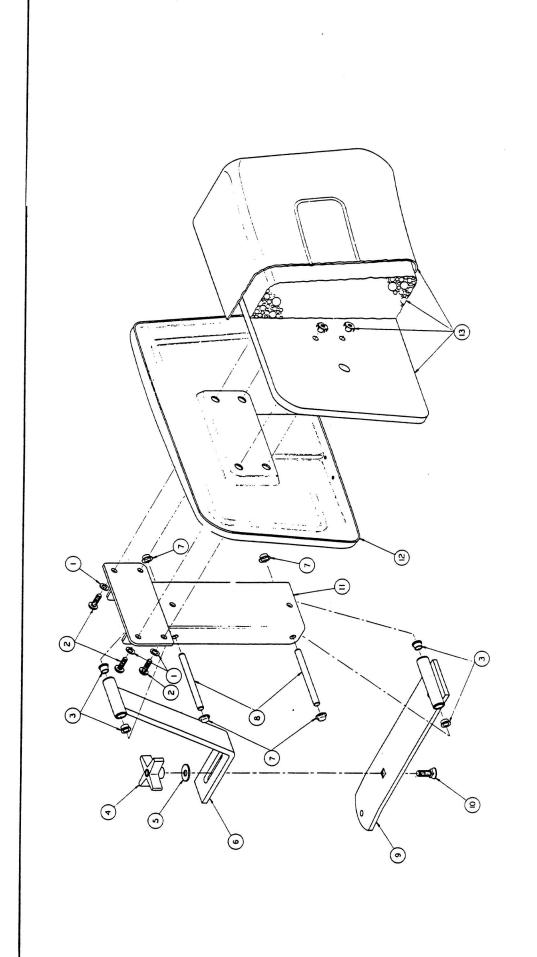

QUANTITY	_		1	• œ	9 4		1 0	ı ∞
DESCRIPTION	SEAT BOTTOM SUB ASS'Y	KIT-HAND GRIP	ARMREST ASS'Y (includes hand orin)	1/2-20 UNC X 5/8" HEX BOLT	"E" RING	HINGE PLATE-BODY	SEAT HINGE PIN	4" INTERNAL TOOTH LOCKWASHER
PART #	1010102	1010411	1010059	0000403	0001226	1010068	0008393	0008304
EY #		~ 1	_	_				

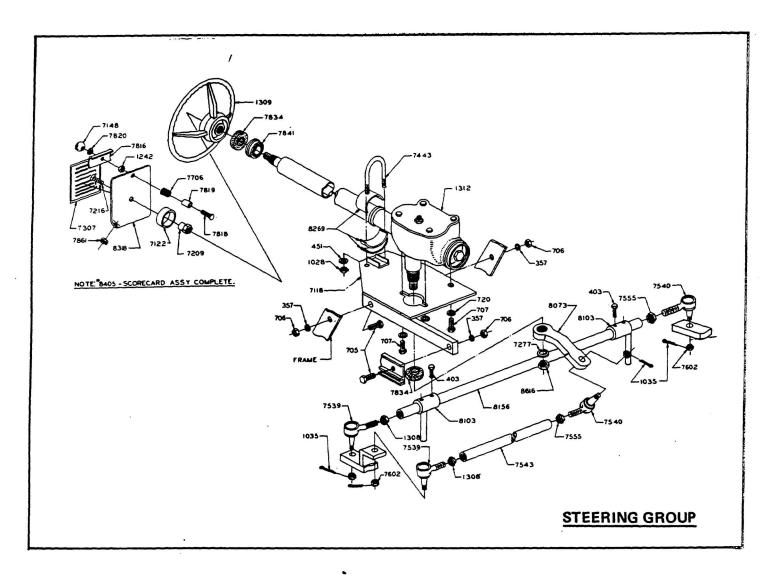


		No.			No.
Part No.	Description	Req'd.	Part No.	Description	Req′d.
357	3/8" Lockwasher	 . 3	7443	½" "U" Bolt	
403	¼" x 5/8" Hex Bolt	 . 4	7539	Ball Joint - R.H	2
451	%" Lockwasher	 . 2	7540	Ball Joint - L.H	2
705	3/8" x 1¼" Hex Bolt	 . 3	7543	Drag Link	1
706	3/8" Hex Nut	 . 3	7555	1/2" Hex Nut L.H	2
707	7/16" x 1" Hex Bolt		7602	3/8" Castle Nut	4
720	7/16" Lockwasher		7706	Spring	1
1028	¼" Hex Nut		7816	Scorecard Clip	1
1035	3/32" x 1" Cotter Pin		7818	5/16" x 11/2" Carriage Bolt	1
1242	5/16" Hex Nut		7819	Nylon - Sleeve	
1308	1/2" Hex Nut-spl	 . 2	7820	5/16" Star Washer	1
1309	Steering Wheel		7834	Rubber Spacer	2
1312	Steering Gear		7861	Rubber Grommet	1
7118	Steering Plate Ass'y		8073	Pitman Arm	1
7122	Score Card Mount Ring		8103	Stop - Steering	2
7148	Ball-Hand Knob		8156	Tie Rod	1
7209	Score Card Plate Mount Ass'y	 . 1	8269	Felt Pad	
7216	5/16" x 1" Flat Head Machine Screw		8318	Score Card Plate	1
7277	5/8" Lockwasher	 . 1	8405	Score Card Ass'y Complete	î
7307	Decal - Score Card Plate	 . 1	8616	5/8"-18 Hex Nut	1

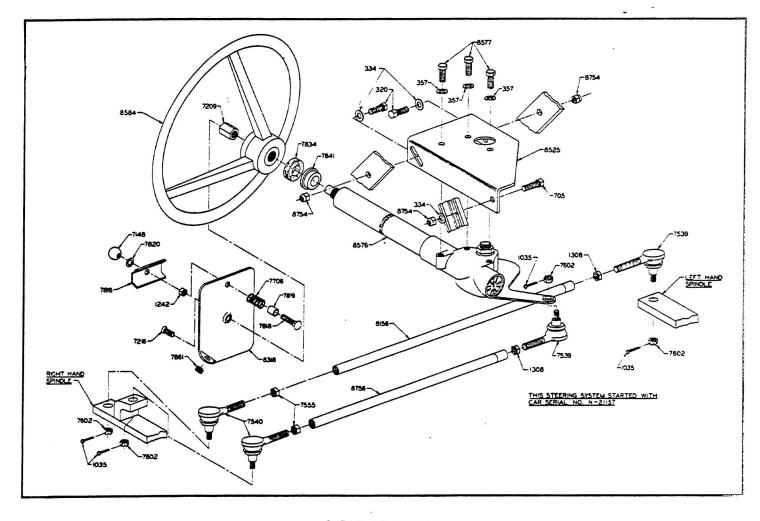


STEERING GROUP

PART	NO. DESCRIPTION	QUANTITY
320	3/8-16xl" Hex Head Bolt	(2)
334	3/8 Flatwasher	(3)
357	3/8 Lockwasher	(3)
705	3/8-16x14" Hex Head Bolt	(1)
1035	3/32 x l" Cotter Pin	(4)
1242	5/16-18 Hex Nut	(1)
- 1308	1/2" Hex Nut	(2)
7148	Ball Knob	(1)
7209	Score Card Mtg. Nut	(1)
7216	5/16-18xl" Flat Head Machine Screw	(1)
7539	Ball Joint Right Hand	(2)
7540	Ball Joint Left Hand	(2)
7555	Ball Joint Right Hand Ball Joint Left Hand 1/2" Hex Nut Left Hand	(2)
7602	3/8" Castle Nut	(4)
7706	3/8" Castle Nut Spring (Scorecard) Score Card Cup	(1)
7816	Score Card Cup	(1)
7818	5/16-18x1% Carriage Bolt	(1)
7819	Nylon Sleeve	(1)
7820	5/16" Internal Tooth Lockwasher	(1)
7834	Sponge Washer	(1)
7841	Plastic Steering Column Bushing	(1)
7861	Rubber Grommet	(1)
8156	Tie Rod	(1)
8318	Score Card Plate	. (1)
8525	Steering Box Mtg. Plate	(1)
8576	Steering Gear	(1)
8577	3/8-16x3/4" Hex Head Bolt	(3)
8584	Steering Wheel	(1)
8754	3/8-16 Nylon Insert Locknut	(3)
8756	Drag Link	(1)

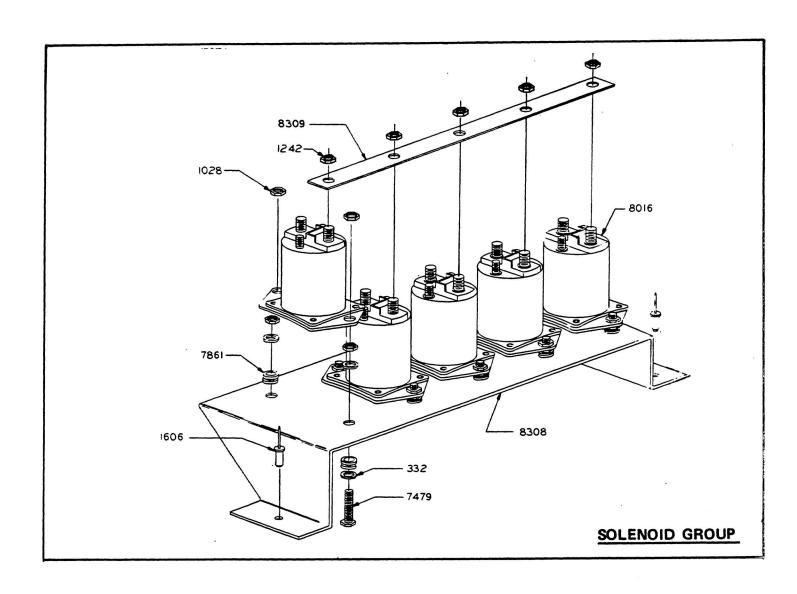

Part No.	No. Description Req'd.
332	¼" Flat Washer 20
1028	1/4" - 20 Hex Nut
1242	5/16" - 18 Hex Nut
1606	3/16" x 1/2" Pop Rivet
7479	%" x 1%" Hex Bolt 10
7861	Rubber Grommet
8016	36 Volt Solenoid
8308	Bracket - Solenoid
8309	Buss Bar
8315	Wire Assembly

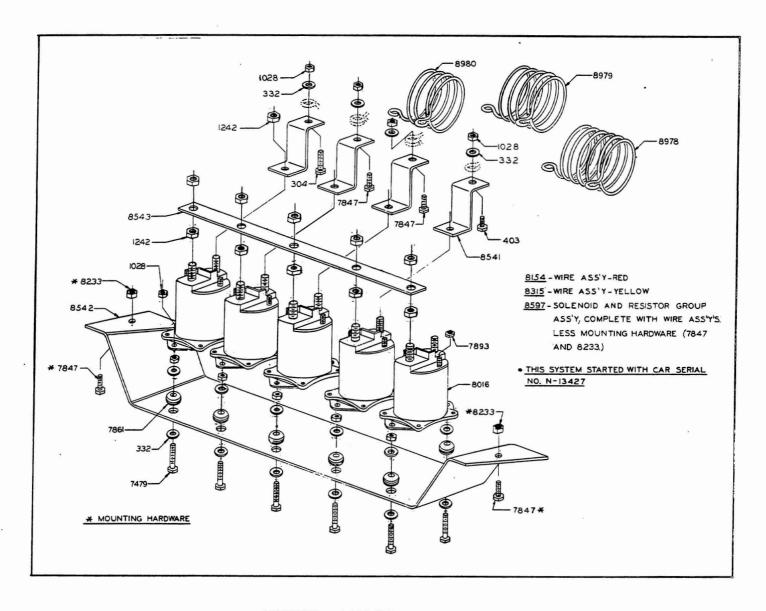


SOLENOID and RESISTOR ASSEMBLY

Part. No.	Description	No. Req'd
304	¼"-20 x 1" Hex Head Bolt	1
332	¼" Flatwasher	24
403	¼"-20 x % Hex Head Bolt	1
1028	¼"-20 Hex Nut	24
1242	5/16"-18 Hex Nut	15
7479	¼"-20 x 1¼" Hex Head Bolt	10
7847	¼"-20 x ¾" Hex Head Bolt	4
7861	Rubber Grommet	10
7893	#10-32 Hex Nut	10
8016	36 Volt Solenoid	5
8154	Wire Assembly - Red	1
8233	¼"-20 Nylon Insert Locknut	2
8315	Wire Assembly - Yellow	1
8541	Resistor Coil Mounting Bracket	4
8542	Solenoid Bracket	1
8543	Buss Bar	1
8978	1st Speed Resistor Coil	1
8979	2nd Speed Resistor Coil	1
8980	3rd Speed Resistor Coil	1


QUANTITY	T 7	† 7 7) -	.	+ <	- ۲	1 -	- i	1 -	- F	, t	` _	۱ ۸	י כ	0 -) -	i u	ENOID) 1
h"-20 UNC HEX NUT	4" FLATWASHER	5/16"-18 UNC HEX NUT	RESISTOR COIL MOUNTING BRACKET	4"-20 UNC X 1" HEX HEAD BOLT	4"-20 UNC x 3/4" HEX HEAD BOLT	4"-20 UNC x 5/8" HEX HEAD BOLT	3rd SPEED RESISTOR COIL	2nd SPEED RESISTOR COIL	1st SPEED RESISTOR COIL	BUSS BAR	#10-32 UNF HEX NUT	WIRE ASSEMBLY SOLENOID (4 SPEED)	4"-20 UNC NYLON INSERT LOCKNUT	RUBBER GROMMET	4"-20 UNC x 14" HEX HEAD BOLT	SOLENOID BRACKET	36 VOLT SOLENOID	WIRE ASS'Y (MASTER TO 1st SPEED SOLENOID) 1
PART NO. 0001028	0000332	0001242	0008541	0000304	0007847	0000403	1010217	1010216	1010215	10108543	.0007893	0008315	0008233	0007861	0007479	0008542	0008016	0008154
KEY NO.	2	က	4	S.	9	7	8	O	10	11	12	13	14	15.	16	17	18	19

SOLENOID & RESISTOR GROUP ASS'Y COMPLETE

0008597

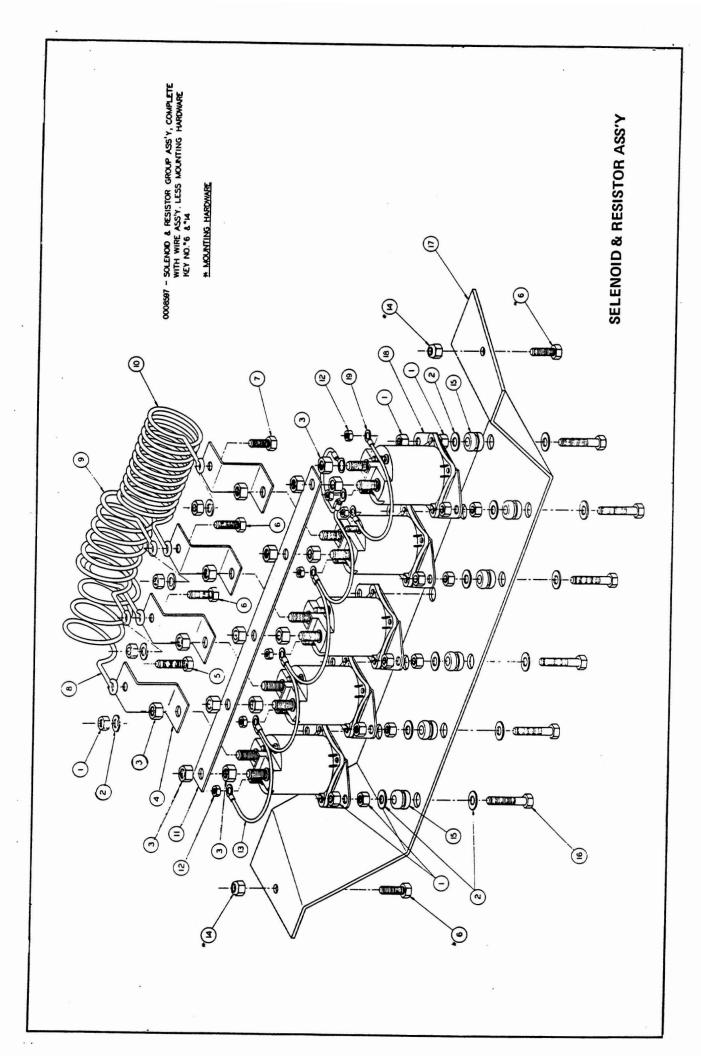




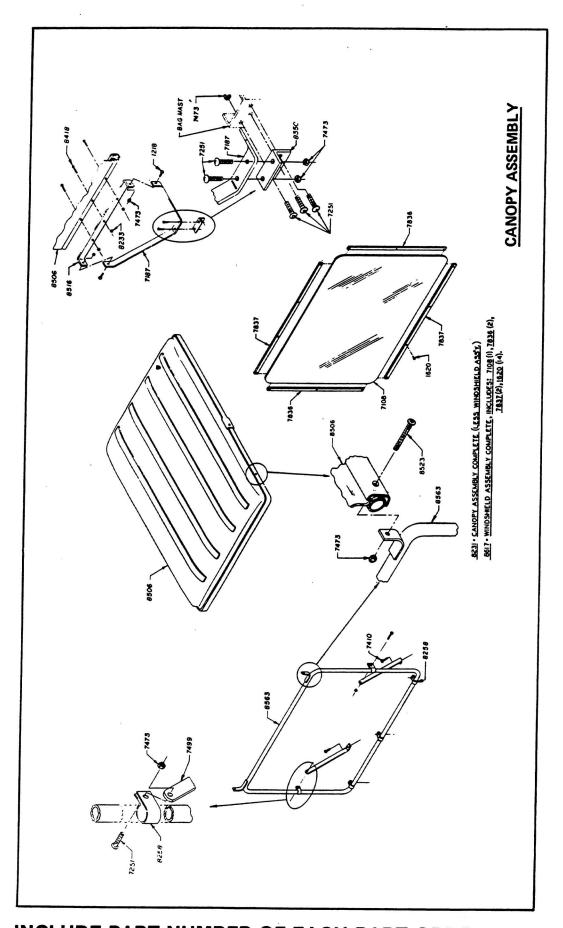

No. Reg'd.		, ro ÷	- m +	- - - c	7
2.4	- Less Windshield Assy			and Serand	
Description	Canopy Assembly Complete — Less Windshield Assy %-20 Nylon Insert Locknut	Windshield Frame Clamp Canopy Mounting Anale	%-20-1%" Slotted Head Screw.	Canopy Mounting Bar 5/16–18 x 1½ Phillips Truce Head Server	Windshield Frame Assembly Windshield Assembly Complete
Part No.	8231 8233	8258 8350	8418 8506	8516 8523	8563 861 7
No. Req'd.	<u>4</u>		r 0	-2	77
Description	#10 x Sheet Metal Screw	Canopy Control Canopy	5/16-18 x 1½ Phillips Truss Head Screw	Windshield Frame Brace	Windshield Channel - Side
Part No.	1620	7187	7410	7499	7837

INCLUDE PART NUMBER OF EACH PART ORDERED AND SERIAL NUMBER OF CAR

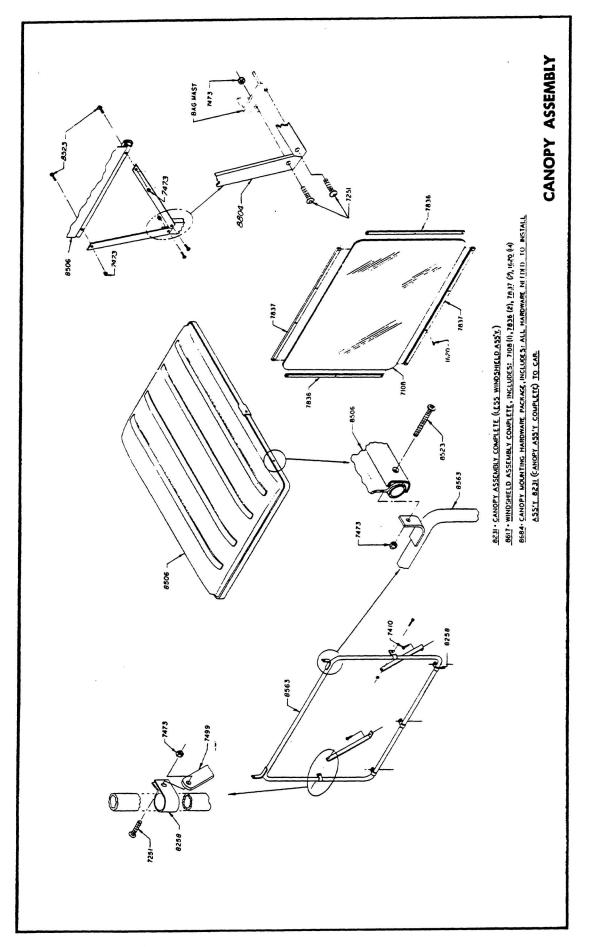


No. Reg'd.	-	သ	-	4	-	_	-	7
~~	:	:	:	:		:		
	:	:	:	:	:		:	
	Ass'	•						
	eld			}				:
	dshi	:	:	Scre	:	:	age	:
	Š	:	:	뎦	:	:	ack	:
	Less	:	:	SSI	:	ee.	e F	:
	te C	amp	s'y .	s Tn	ss'y	mple	rdwa	
	mple	e C	n As	ij	P.	S	Z Ha	:
	Canopy Ass'y Complete (Less Windshield Ass'y)	Windshield Frame Clamp	Canopy and Trim Ass'y	1/16-18x1-3/4 Phillips Truss HD. Screw	Windshield Frame Ass'y	Windshield Ass'y Complete	Canopy Mounting Hardware Package	Canopy Strut
Description	Ass'	eld	and	K1-3	eld	ed	Mod	Str
scrip	opy	dshi	opy	5-18	dshi	dshi	opy	opy
Ö	န္	ž	န္တ	5/16	χ	ž Š	န္တ	န္
Part No.	=	œ	9	<u>ش</u>	n	1	4	4
ŽŽ.	8231	8228	8206	8523	8563	8617	8684	8804
89. 64.d.	14	_	4	7	œ	7	7	7
No. Req'd.	14	1	4	2	c	2	2	2
No. Req'd.	14	1	*	2	co	2	2	2
No. Reg'd.	14	1	*	2	•	2	2	2
No. Reg'd.	14	1	*	w 2	•	2	2	tom 2
No. Req'd.	14	1	rew 4	Screw 2	•	2	2	Bottom 2
No. Req'd.	14	1). Screw 4	HD. Screw 2	ut 8	2	2	and Bottom
No. Req'd,	ew14	1	s HD. Screw 4	uss HD. Screw 2	ocknut 8	2	Side 2	Top and Bottom 2
No. Req'd.	Screw14	T	Truss HD. Screw 4	s Truss HD. Screw	rt Locknut 8	3race 2	- Side	- Top and Bottom 2
No. Req'd.	letal Screw14		ips Truss HD. Screw 4	illips Truss HD. Screw 2	Insert Locknut 8	me Brace 2	nnel — Side 2	nnel — Top and Bottom 2
	et Metal Screw14		Phillips Truss HD. Screw 4	Phillips Truss HD. Screw	vion insert Locknut 8	Frame Brace	Channel — Side 2	Channel — Top and Bottom 2
	Sheet Metal Screw14	ield 1	8x1 Phillips Truss HD. Screw	8x11/4 Phillips Truss HD. Screw	8 Nylon Insert Locknut 8	ield Frame Brace	ield Channel — Side	ield Channel — Top and Bottom
	0x34 Sheet Metal Screw14	ndshield 1	16-18x1 Phillips Truss HD. Screw	16-18x11/4 Phillips Truss HD. Screw	6-18 Nylon Insert Locknut	ndshield Frame Brace	ndshield Channel — Side 2	ndshield Channel — Top and Bottom 2
No. Description Req'd.	#10x34 Sheet Metal Screw	Windshield 1	5/16-18x1 Phillips Truss HD. Screw	5/16-18x11/4 Phillips Truss HD. Screw	5/16-18 Nylon Insert Locknut	Windshield Frame Brace	Windshield Channel — Side 2	Windshield Channel — Top and Bottom 2
	#10x% Sheet Metal				7473 5/16-18 Nylon Insert Locknut			

INCLUDE PART NUMBER OF EACH PART ORDERED AND SERIAL NUMBER OF CAR

KEY. #	PART #	DESCRIPTION	NO. REO'D
1	1218	5/16 - 18 UNC x 14 HEX HEAD BOLT	7
2	1241	5/16 FLAT WASHER	4
23	1620	#10 x 3/4 SHEET METAL SCREW	14
4	7108	WINDSHIELD	1
2	7187	CANOPY YOKE	1
9	7251	5/16 - 18 UNC x 1 PHILLIPS TRUSS HEAD SCREW	2
7	7410	5/16 - 18 UNC x 14 PHILLIPS TRUSS HEAD SCREW	2
8	7473	5/16 - 18 UNC NYLON INSERT LOCKNUT	11
6	7499	WINDSHIELD FRAME BRACE	2
10	7836	WINDSHIELD CHANNEL - SIDE	2
11	7837	WINDSHIELD CHANNEL - TOP & BOTTOM	2
12	8258	WINDSHIELD FRAME CLAMP	Ŋ
13	8350	CANOPY MOUNTING ANGLE	1
14	8506	CANOPY & TRIM ASSEMBLY	1
15	8516	CANOPY MOUNTING BAR	1
16	8563	WINDSHIELD FRAME ASSEMBLY	` —
	8617	WINDSHIELD ASSEMBLY COMPLETE	1
17	8963	5/16 x 18 UNC x 1 3/4 HEX BOLT	4
	1010263	CANOPY ASSEMBLY	1
	1010272	CANOPY MOUNTING HARDWARE PACKAGE	Т


ITEM #	PART #	DESCRIPTION	# REQ'D
1	0001218	5/16-18 INC 24x11/2 HEX HD BOLT	,
2	0007473	5/16-18 NYLON TNSERT TOCKNIT	. 7 7
3	0008963	5/16 IINC-24x1 3/4 HFY HO BOTT	o «
7	0001241	5/16 FLATMASHER	*
5	1010448	GROMMET	1 C
9	1010500	WINDSHIELD FRAME REINFORCEMENT DINC	7 (
7	0007820	INT. TOOTH LOCKWASHER	7 C
œ	0008523	5/16-18ING 24x1 3/4 PH-TPHE UP COP	4 c
6	0007410	5/16-18INC 24x13 PH -TRIES UP SCD	٦ ,
10	1010505	1/2-20 UNG-24x11/2 PH TRIES MACH SCR.	7 (
11	0000332	1/2 - FLASTWASHER	7 (
12	1010506	BUSHING	7 (
13	1010507	WINDSHIELD BRACE	7 (
14	1010504	CURVED FLANGED "T" NIT	4 ¢
15	1010376	WINDSHIELD FRAME ASS'Y	7 -
16	0008206	CANOPY & TRIM ASSEMBLY	٠
17	0008516	CANOPY MOUNTING BAR	- F
18	1010368	CANOPY BRACE	٦ ,
19	1010517	WASHER - NYLON	7 C
20	1010546	STANDARD SPACER	· · ·
21	1010577	5/16 - 18 UNC x 1½ HEX HEAD BOLT	2

INCLUDE PART NUMBER OF EACH PART ORDERED AND SERIAL NUMBER OF CAR

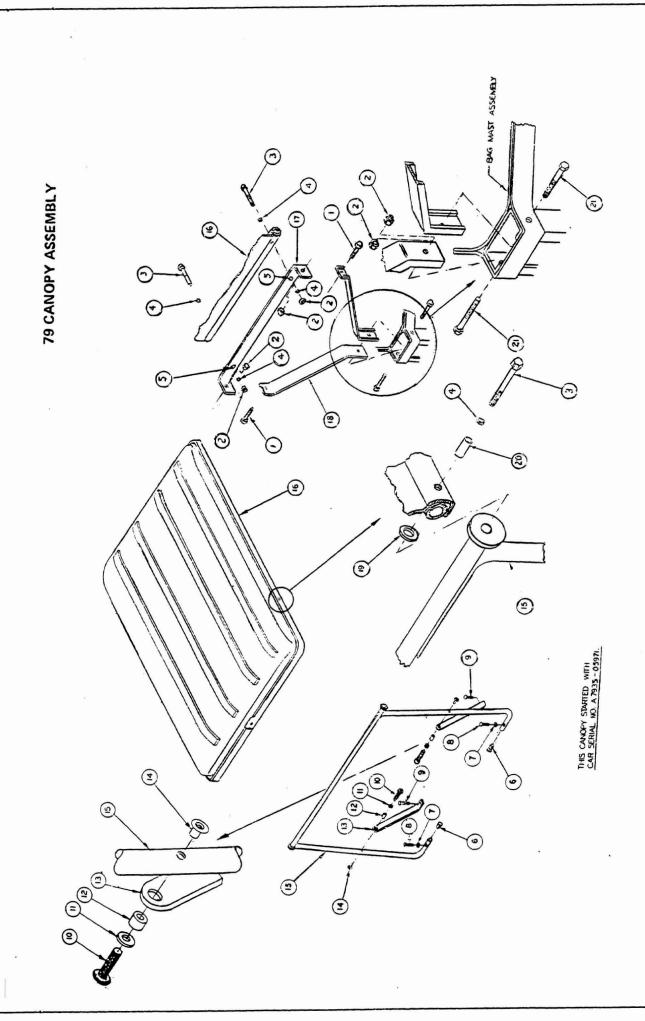


KEY #	PART #	DESCRIPTION	QUANTITY
-			
-	1010049	RETAINER PLATE (INCLUDES BRONZE BUSHING)	-
2	1010029	STEERING ARM WELD ASS'Y	. —
.	1010039	WASHER-WAVE SPRING	•
7	1010028	WASHER TOW BAR	
J.	0007910	COTTER PIN	
9	2908000	BRONZE BUSHING	7 -
7	1010042	FLAT WASHER	
œ	0001308	½-20 UNF HEX NUT	-
6	0007539	BALL JOINT R.H.	-
10	1010040	WASHER - WAVE SPRING	·
11	0001035	3/32" x 1" COLTER PIN	-
12	0007602	3/8-24 UNF SLOTTED HEX NIT	4 - -
13	1010035		•
14	1010034	CHANNEL WELD ASS'Y	
15	0008752	3/8-16 UNC x 3" HEX BOLT	
16	0008754	3/8 NYLON' INSERT LOCKNIT	٠.
17	1010032	TOW BAR WELD ASS'Y	
18	0008320	REAR BUMPER	٠.
19	0000320	3/8-16 'UNC x 1" HEX BOLT	7
.20	1010043	TOW PLATE WELD ASS'Y	•
21	1010138	3/8-16 UNC DIMPLED LOCK NUT	• 7
22	1010038	TOW BAR LABEL	-
	1010037	TOW BAR ASS'Y	1
	1010041	TOW LINKAGE & RETAINER PLATE ASS'Y	
	1010046	REAR BUMPER & TOW PLATE ASS'Y	

INCLUDE PART NUMBER OF EACH PART ORDERED AND SERIAL NUMBER OF CAR

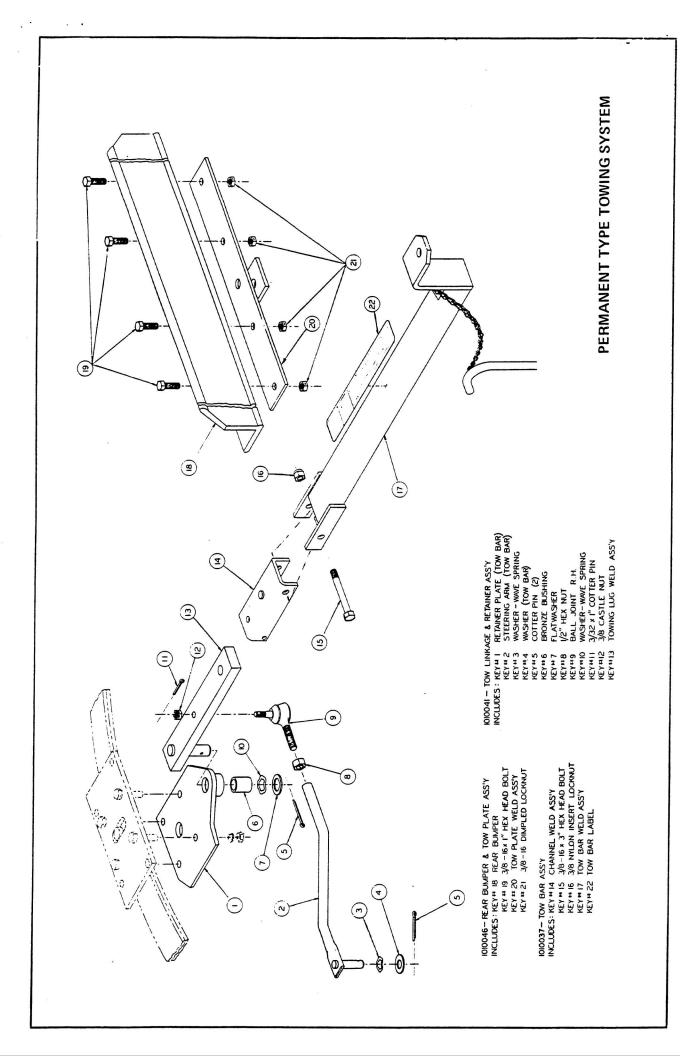

KEY NO.	PART NO. 1010039	DESCRIPTION WASHER - WAVE SPRING	QUANTITY
	1010028	WASHER - TOW BAR	г
	0162000	COTTER PIN	7
	1010029	STEERING ARM WELD ASSEMBLY	н
	0001308	1/2-20 UNF HEX NUT	н
	0007539	BALL JOINT - R. H.	т
	0007602	3/8-24 UNF SLOTTED HEX NUT	-
	0001035	3/32" X 1" COTTER PIN	н
	1010317	COMPRESSION SPRING	1
	0000334	3/8 FLAT WASHER	
	0008725	SAFETY PLUNGER	٠, ٢
	10/8000	TOW BAR BODY SUB ASSEMBLY	1
	0000320	3/8 - 16 UNC x 1" HEX BOLT	4
	0008320	REAR BUMPER	-
	1010043	TOW PLATE WELD ASSEMBLY	-
	1010138	3/8 - 16 UNC DIMPLED LOCK NUT	4
	1010046	REAR BUMPER AND TOW PLATE ASSEMBLY	

INCLUDE PART NUMBER OF EACH PART ORDERED AND SERIAL NUMBER OF CAR

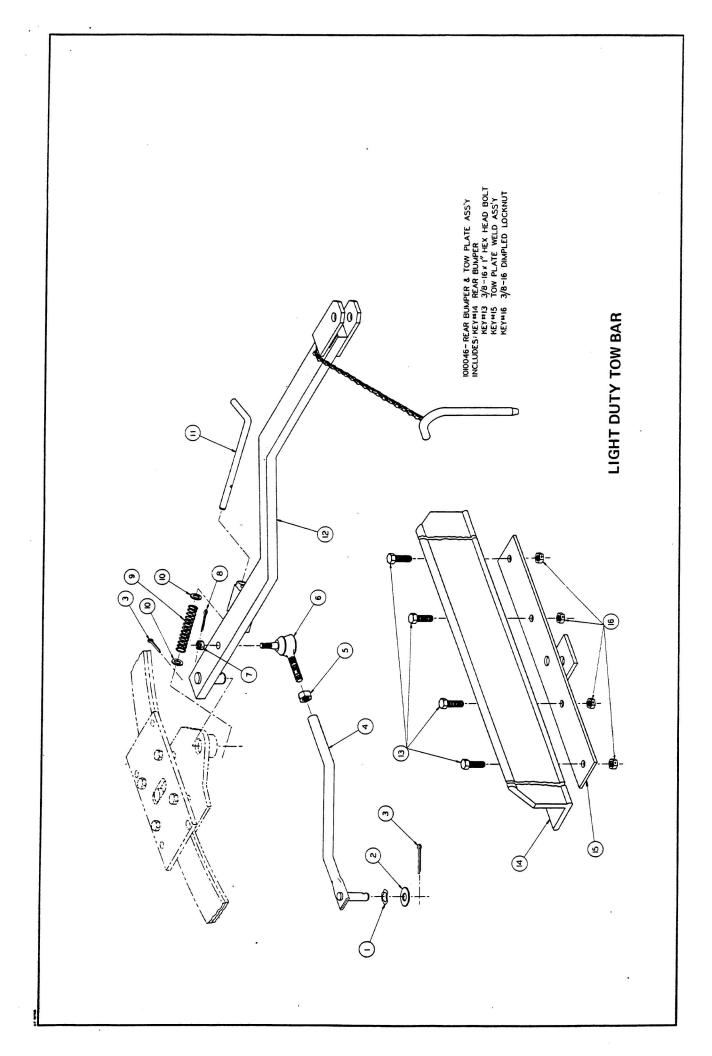

		,	

Club Car vehicles are designed and built to provide the ultimate in performance efficiency; however, proper maintenance and repair are essential for achieving maximum service life and continued safe and reliable operation.

This manual provides detailed information for the maintenance and repair of the Club Car vehicle, and should be thoroughly reviewed prior to servicing the vehicle. The procedures provided must be properly implemented, and the DANGER, WARNING, and CAUTION statements must be heeded.

This manual was written for the trained technician who already possesses knowledge and skills in electrical and mechanical repair. If the technician does not have such knowledge and skills, attempted service or repairs to the vehicle may render the vehicle unsafe. For this reason, Club Car advises that all repairs and/or service be performed by an authorized Club Car distributor/dealer representative or by a Club Car factory-trained technician.

It is the policy of Club Car to assist its distributors and dealers in continually updating their service knowledge and facilities so they can provide prompt and efficient service for vehicle owners. Regional technical representatives, vehicle service seminars, periodic service bulletins, maintenance and service manuals, and other service publications also represent Club Car's continuing commitment to customer support.

This manual covers all aspects of typical vehicle service; however, unique situations sometimes occur when servicing a vehicle. If it appears that a service question is not answered in this manual, you may write to us at: Club Car, Inc., P.O. Box 204658; Augusta, GA 30917-4658 USA, Attention: Technical Services, or contact a Club Car Technical Service Representative at (706) 863-3000, ext. 3580.

NOTE: This manual represents the most current information at the time of publication. Club Car is continually working to further improve its vehicles and other products. These improvements may affect servicing procedures. Any modification and/or significant change in specifications or procedures will be forwarded to all Club Car dealers and will, when applicable, appear in future editions of this manual.

Club Car reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

There are no warranties expressed or implied in this manual. See the limited warranty found in the vehicle Owner's Manual.







Club Car, Inc. P.O. Box 204658 Augusta, GA 30917-4658 USA
 Web
 www.clubcar.com

 Phone
 1.706.863.3000

 1.800.ClubCar

 Int'I
 +1 706.863.3000

 Fax
 1.706.863.5808